

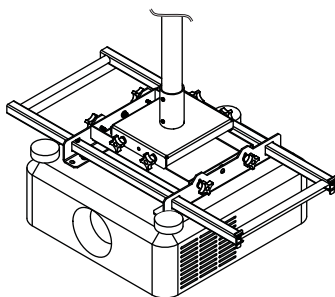
 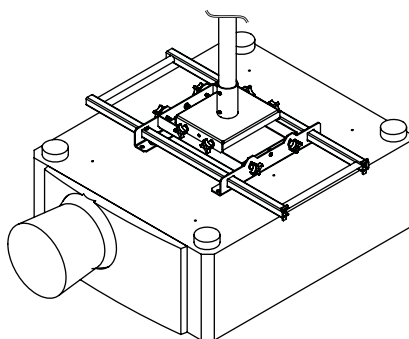


# NEC

## NC1100CM Projector Mount

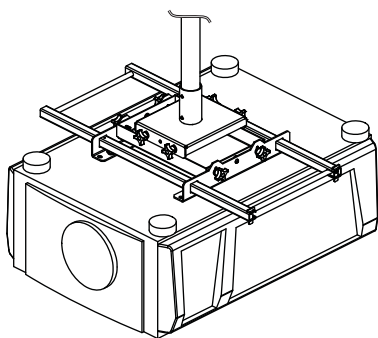




CONFIGURATION	NC900C	NC1100L	PX750U
PROJECTORS	NC900C	NC1100L, NC1201L, PH1202HL, PH1202HL1,PH1201QL	PX602WL, PX602UL, PX700W, PX750U, PX800X, PX700W2, PX750U2, PX800X2, PX803UL



## ⚠ WARNING

Before installing make sure the supporting truss will support the combined load of the equipment and hardware. Screws must be tightly secured. Do not overtighten screws or damage can occur and product may fail. Never exceed the Maximum Load Capacity. Always use an assistant or mechanical lifting equipment to safely lift and position equipment. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury. For support please call customer care at 1-800-865-2112.

Tools Needed for Assembly.

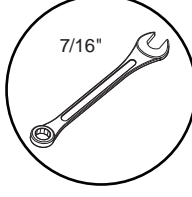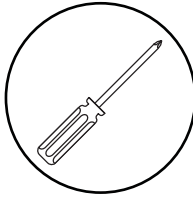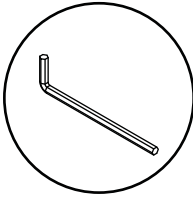


Symbols



**WARNING**



 Screws must get at least three full turns and fit snug.



Do not over tighten screws

### ⚠ WARNING


To properly tighten screws: Tighten until screw head makes contact, then tighten another 1/2 turn. Do not overtighten screws.

## Parts List

Description	Qty	Part #
<b>A</b> extension bracket	1	056-1369
<b>B</b> hook-on bracket	1	056-1370
<b>C</b> adapter bracket	2	056-1364
<b>D</b> collar	1	1800-375
<b>E</b> handle bracket	2	056-1365
<b>F</b> handle bar	2	056-1371
<b>G</b> handle tab	2	056-1366
<b>H</b> M6 x 16mm socket pin screw	6	520-1132
<b>I</b> knob	8	560-0252
<b>J</b> 1/4" flat washer	16	540-9440
<b>K</b> .26ID x .7OD x .062 nylon washer	14	540-9439
<b>L</b> 1/4-20 socket screw	2	520-1013
<b>M</b> 1/4-20 hex nut	2	530-9413
<b>N</b> M5 x 10mm type F screw	7	520-9250
<b>O</b> 1/4-20 x 1/4" set screw	4	500-1084
<b>P</b> 5/32" (4mm) security wrench	1	560-9646
<b>Q</b> M4 x 16mm socket pin screw	6	510-1087
<b>R</b> M4 x 12mm socket pin screw	6	510-1079
<b>S</b> cable assembly	1	130-8012
<b>T</b> 2.125" fiber washer	1	540-9432
<b>U</b> M6 x 12mm socket pin screw	6	520-1050
<b>V</b> cable tie (not shown)	4	560-9711


### **A (1)**

extension bracket

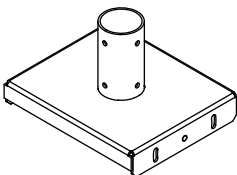


### **B (1)**

hook on bracket

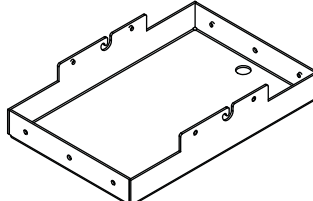


### **C (2)**

adapter bracket

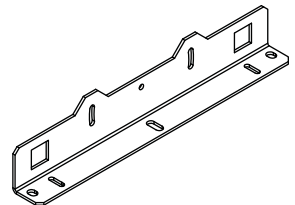


**D (1)**  
collar

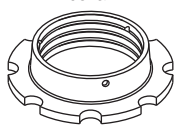


**G (2)**  
handle tab



 
**H (6)**  
M6 x 16mm



**I (8)**  
knob

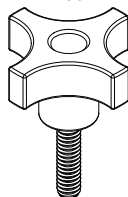


**L (2)**  
1-4x20 x 3/4"

 


**E (2)**

handle bracket

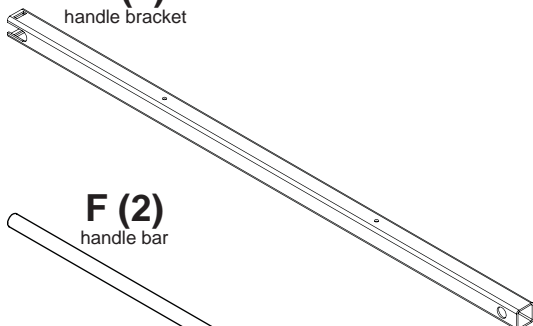


**F (2)**

handle bar

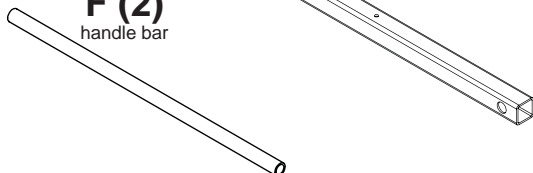

**T (1)**

washer

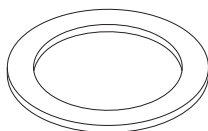


**J (16)**

1/4" flat washer



**K (14)**

 nylon washer




**M (2)**

1/4-20 hex nut



**N (7)**

 M5 x 10mm




**O (4)**

set screw



**Q (6)**

 M4 x 16mm




**R (6)**

M4 x 12mm




**U (6)**

 M6 x 12mm




**P (1)**

wrench

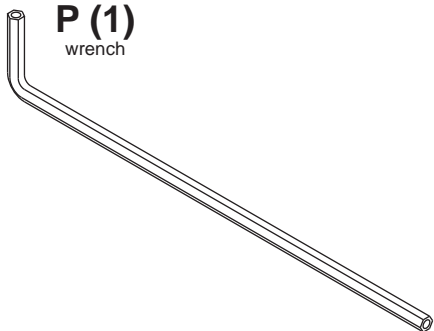


**S (1)**

cable  
assembly

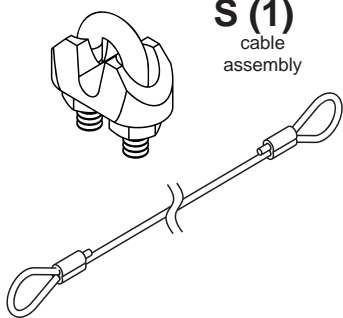



Assemble as shown. Locate projector below and follow proper configuration.

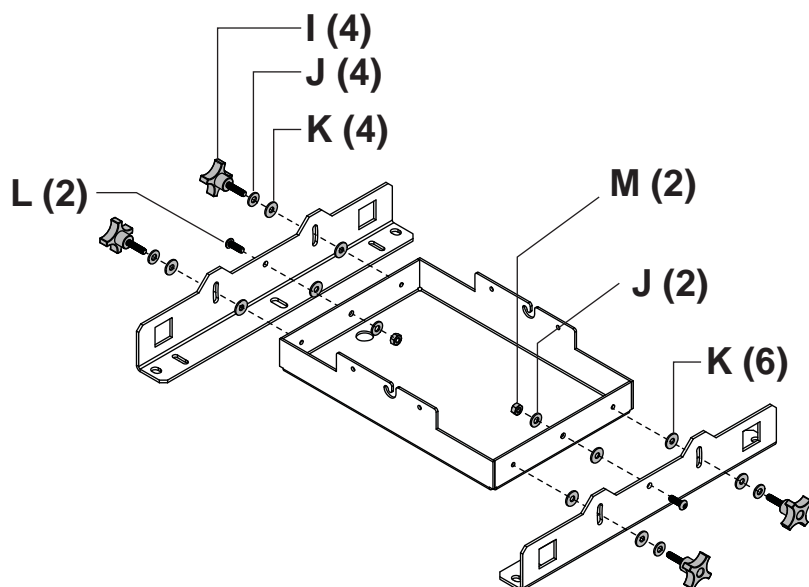

CONFIGURATION	NC900C	NC1100L	PX750U
PROJECTORS	NC900C	NC1100L, NC1201L, PH1202HL, PH1202HL1,PH1201QL	PX602WL, PX602UL, PX700W, PX750U, PX800X, PX700W2, PX750U2, PX800X2, PX803UL


2

Thread collar (D) onto the extension column. Align the notch inside the extension column with one of the threaded holes in the collar as shown. Secure using an M5x 10mm type-F screw (N). hardware as shown.

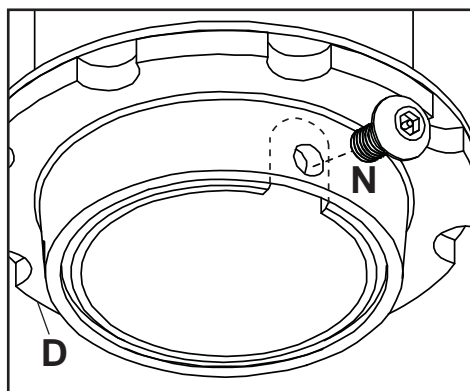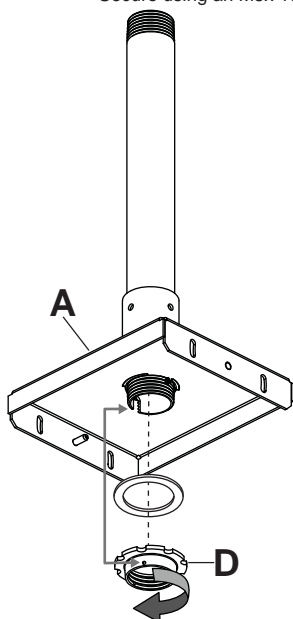


3


Secure set screws to prevent excess movement.

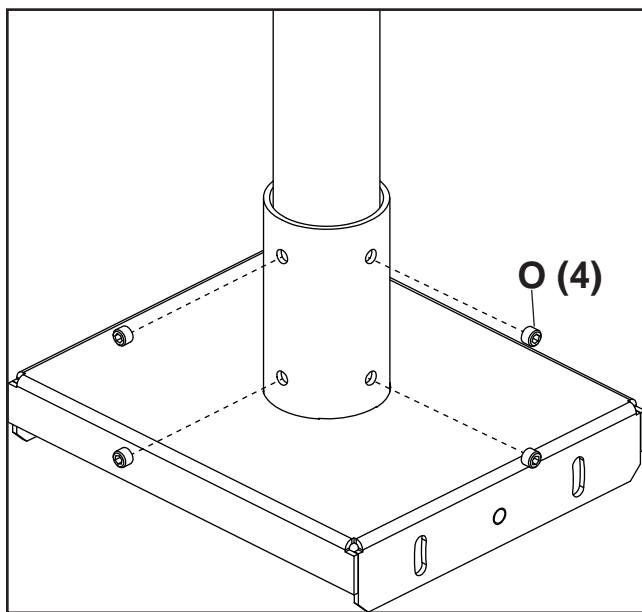


J (6) H or U (6)

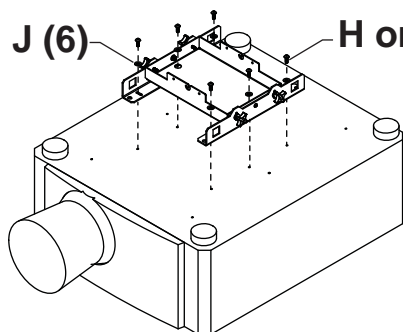



NC1100L Configuration

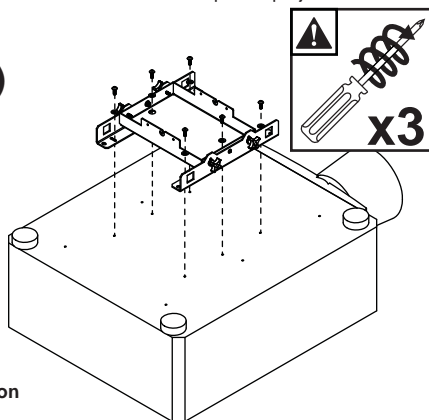

H or U(6)  
J (6)

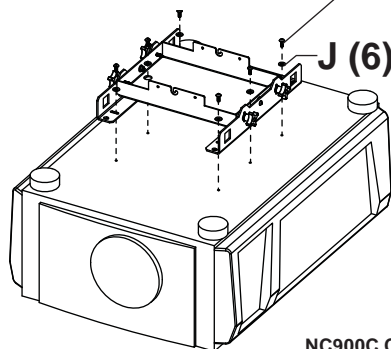


NC900C Configuration

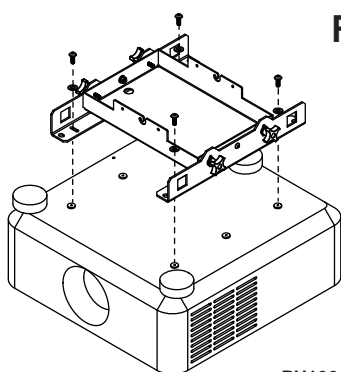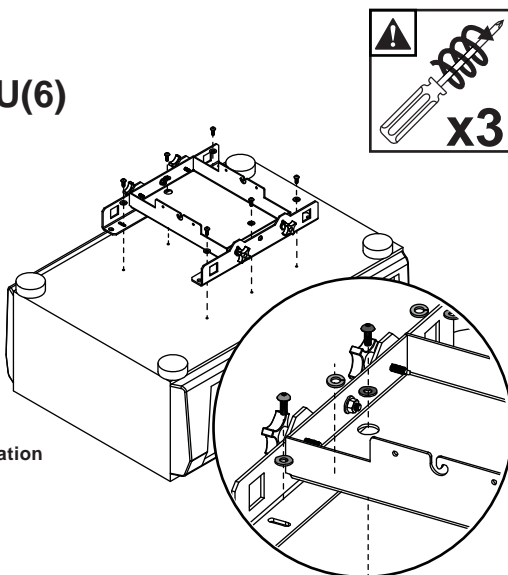


PH1000U Configuration


R or Q (4)  
S (4)

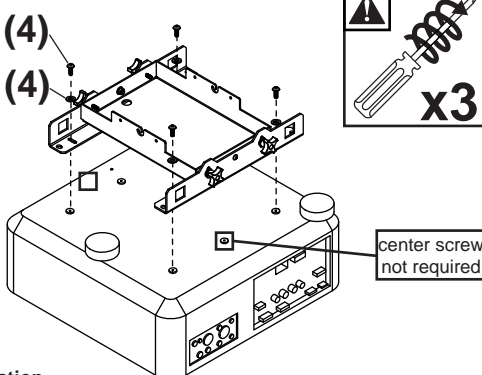


5

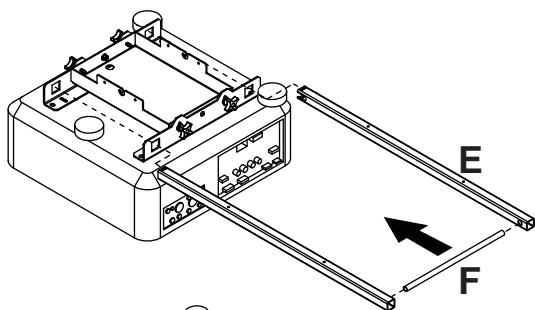

PX750U Configuration

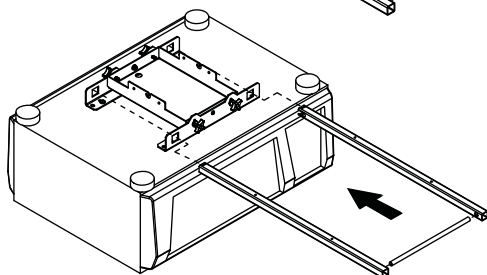


NC900C Configuration

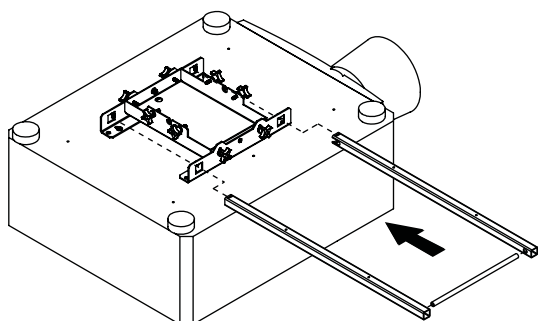







NC1100L Configuration

6

N (4)

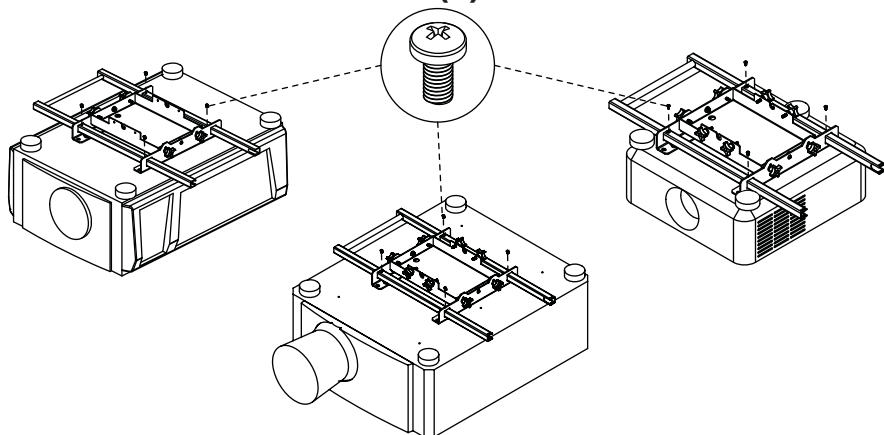


Position second handle bar in the relief cut in the handle brackets at the opposite end of the assembly. Secure using the handle tabs with M5 x 10 mm type-F screws (N).

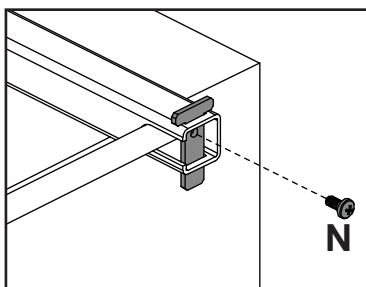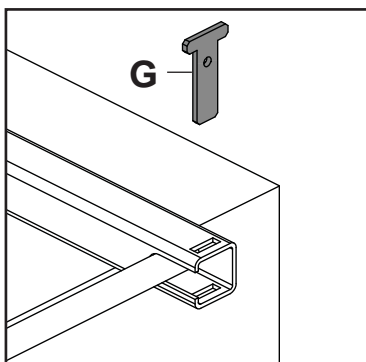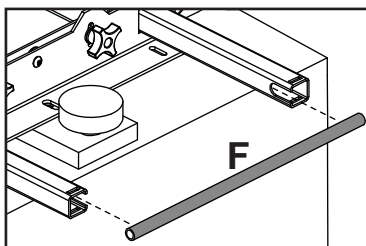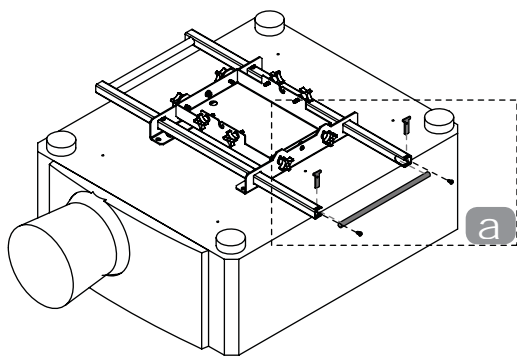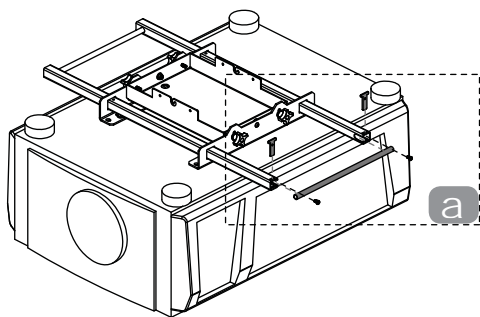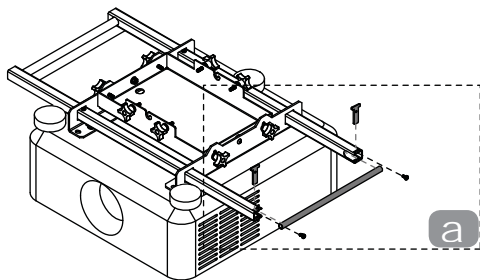




## 8-1



Hook the assembly to the ceiling mount assembly as shown. Use handle bars (F) to lift projector. Attach cable assembly.

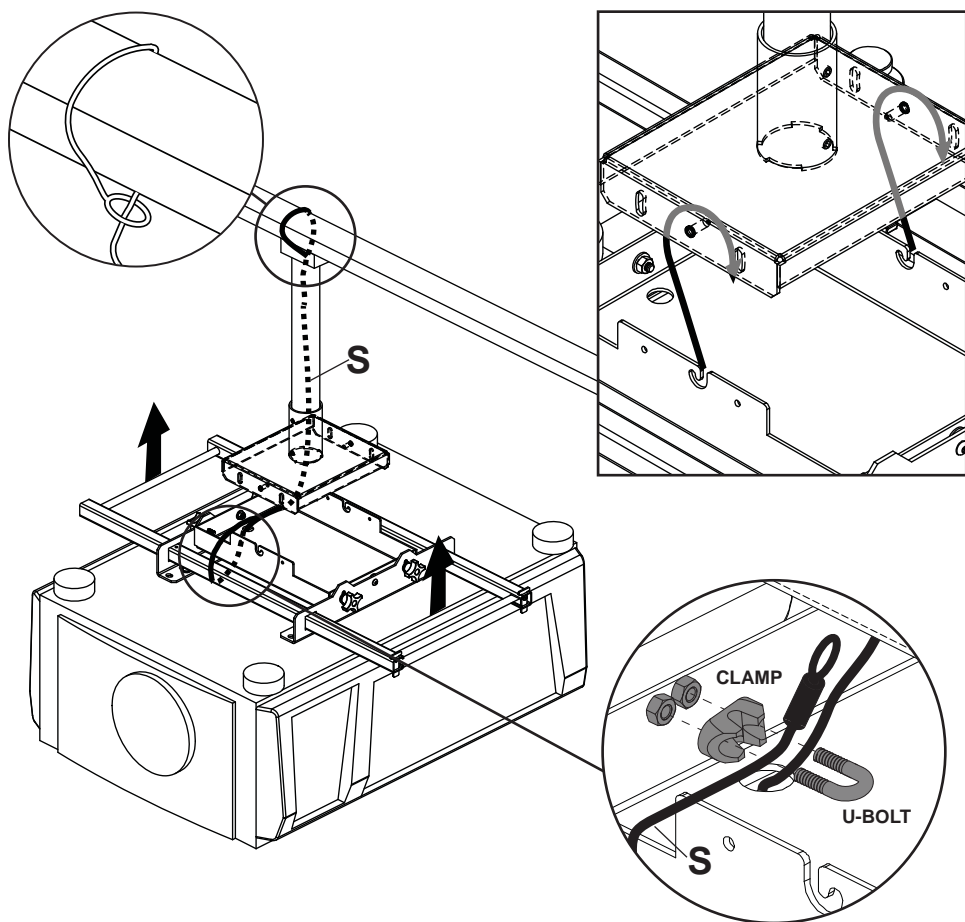



## 8-2

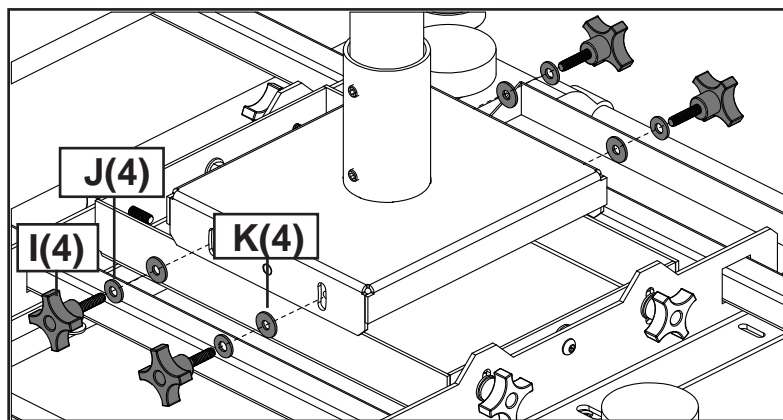

Adjust tilt and roll by loosening the knobs, setting the position, then retightening the knobs.

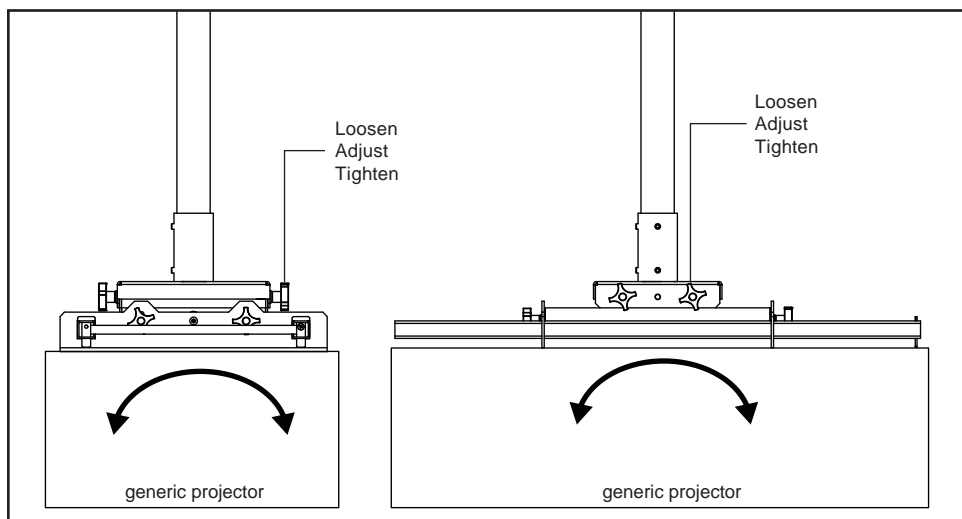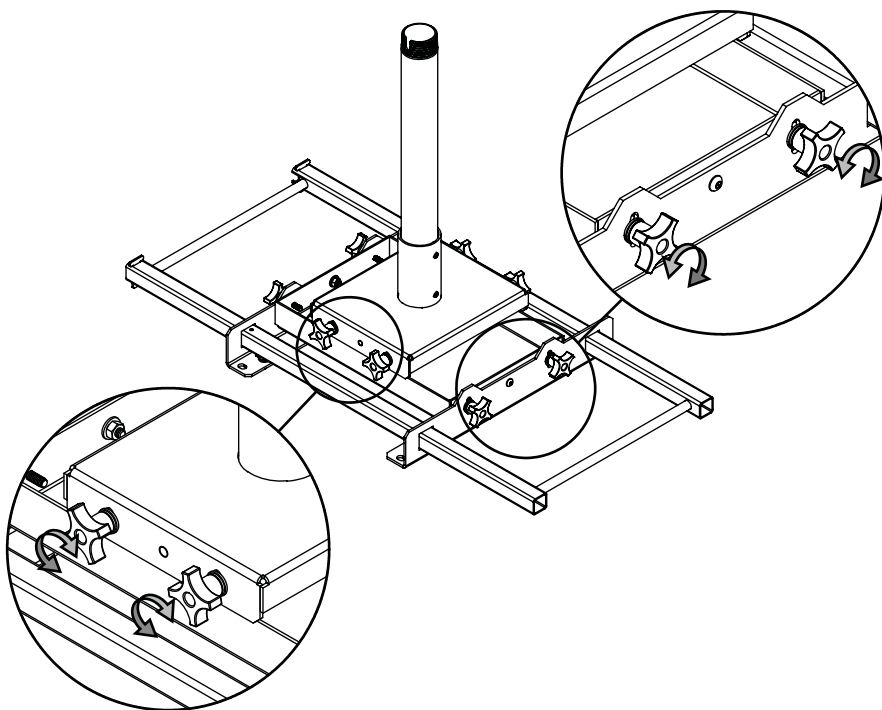

Adjust swivel by loosening set screws (O), turning assembly, then retightening.

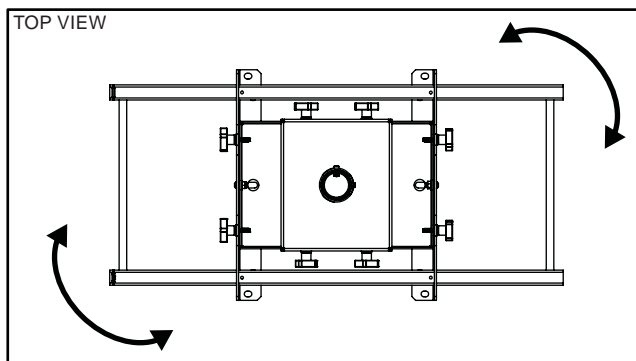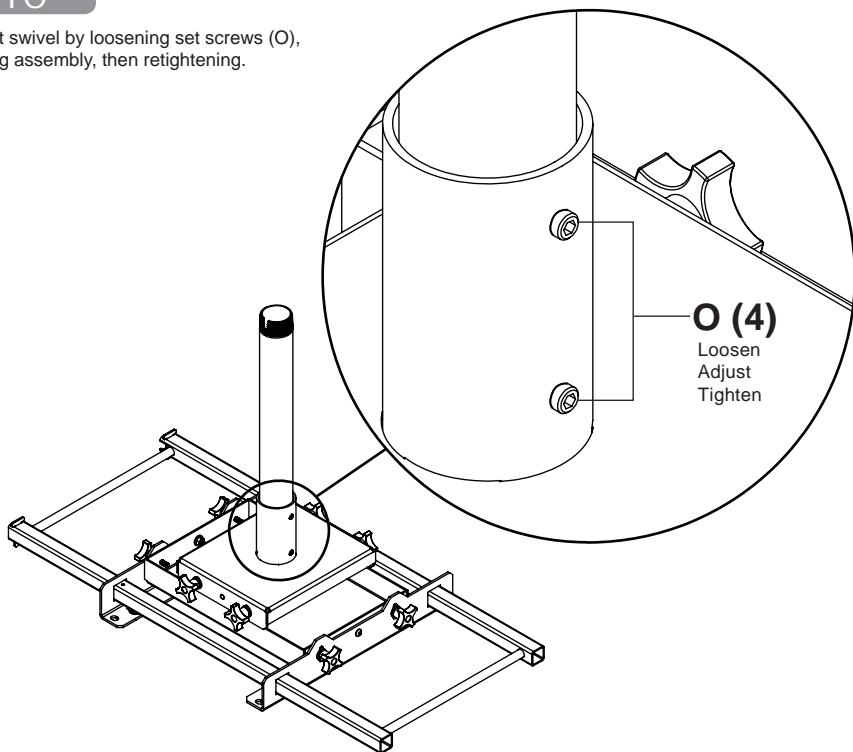

## LIMITED FIVE-YEAR WARRANTY

Peerless Industries, Inc. ("Peerless") warrants to original end-users of Peerless® products will be free from defects in material and workmanship, under normal use, for a period of five years from the date of purchase by the original end-user (but in no case longer than six years after the date of the product's manufacture). At its option, Peerless will repair or replace, or refund the purchase price of, any product which fails to conform with this warranty.

**In no event shall the duration of any implied warranty of merchantability or fitness for a particular purpose be longer than the period of the applicable express warranty set forth above.** Some states do not allow limitations on how long a implied warranty lasts, so the above limitation may not apply to you.

This warranty does not cover damage caused by (a) service or repairs by the customer or a person who is not authorized for such service or repairs by Peerless, (b) the failure to utilize proper packing when returning the product, (c) incorrect installation or the failure to follow Peerless' instructions or warnings when installing, using or storing the product, or (d) misuse or accident, in transit or otherwise, including in cases of third party actions and force majeure.

**In no event shall Peerless be liable for incidental or consequential damages or damages arising from the theft of any product, whether or not secured by a security device which may be included with the Peerless® product.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty is in lieu of all other warranties, expressed or implied, and is the sole remedy with respect to product defects. No dealer, distributor, installer or other person is authorized to modify or extend this Limited Warranty or impose any obligation on Peerless in connection with the sale of any Peerless® product.

This warranty gives specific legal rights, and you may also have other rights which vary from state to state.

The logo for Peerless-AV features the word "peerless" in a bold, lowercase, red sans-serif font. To its right, the letters "AV" are enclosed within a red outline of a triangle, with a registered trademark symbol (®) positioned to the upper right of the triangle.

### Peerless-AV

2300 White Oak Circle  
Aurora, IL 60502  
Email: [tech@peerlessmounts.com](mailto:tech@peerlessmounts.com)  
Ph: (800) 865-2112  
Fax: (800) 359-6500  
[www.peerless-av.com](http://www.peerless-av.com)

© 2016, Peerless Industries, Inc.

### Peerless-AV Europe

Unit 3 Watford Interchange,  
Colonial Way, Watford, Herts,  
WD24 4WP, United Kingdom  
Customer Care  
44 (0) 1923 200 100  
[www.peerless-av.com](http://www.peerless-av.com)

© 2016, Peerless Industries, Inc.

### Peerless-AV de Mexico

Ave de las Industrias 413  
Parque Industrial Escobedo  
Escobedo N.L Mexico 66050  
Servicio al Cliente  
01-800-849-65-77  
[www.peerless-av.com](http://www.peerless-av.com)

© 2016, Peerless Industries, Inc.