

NEC Display Solutions of America, Inc.


Installation and Assembly Manual:

Custom Ceiling Mount for NEC NP1000, NP2000, NP1150, NP2150, NP3150, NP3151W, NP1250, NP2250, NP3250, and NP3250W Projectors

Model: NP3150CM

Ceiling Mount

- 1. Remove ¼"-20 button head bolt on ceiling plate to remove lower portion of mount.
- 2. Install the ceiling plate with (4) 5/16" bolts to structural attachment points. Lag screws may be used when attaching to wood joists.
- 3. Reattach the lower portion of the mount.
- 4. Attach interface plate (pn 72-061) to projector with (4) M4 x 10 pan head Phillips screws.
- 5. Align interface plate into holes on mount, slide stand off bolts into slots and tighten. Add center locking Torx cap screw which attach secures the interface plate to the mount.
- 6. Attach the wire safety rope to the interface plate with the enclosed coupler.
- 7. Attach power and signal cables to projector.
- 8. Attach the I/O cover (pn 72-065) to the interface plate with (4) 10-32 x 3/8 pan head Phillips screws and #10 lock washers.
- 9. Loosen tilt adjustment cap screw with enclosed tool and level the projected image to the screen. Tighten cap screw when a level image is achieved.
- 10. Loosen up-down pitch adjustment cap screw with enclosed tool and adjust the pitch angle of the projector. Tighten cap screw when at desired projection position.
- 11. If desired, add Kensington lock through the opening of the mount head, loop through cable end and attach to projector.

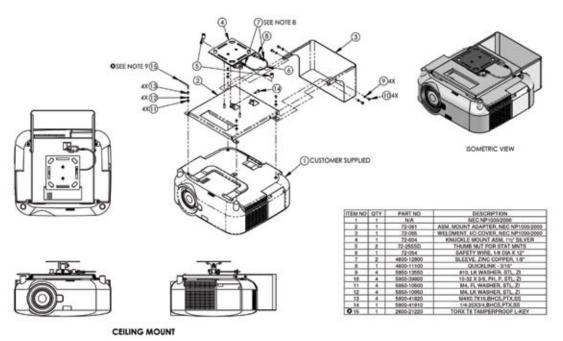

Pole Mount

- 1. Install a 1 ½" NPT pipe with male threads on lower end from the ceiling. Aftermarket mounting pans and accessories are available.
- 2. Thread locking ring onto pipe. Thread mount onto pipe and leave locking ring loose.
- 3. Attach interface plate (pn 72-061) to projector with (4) M4 x 10 pan head Phillips screws.
- 4. Align interface plate into holes on mount, slide stand off bolts into slot and tighten. Add center locking Torx cap screw which attach secures the interface plate to the mount.
- 5. Attach the wire safety rope to the interface plate with the enclosed coupler.
- 6. Insert power and signal cables through pipe and out the top of the mount head to the projector and attach to projector.
- 7. Attach the I/O cover (pn 72-065) to the interface plate with (4) 10-32 x 3/8 pan head Phillips screws and #10 lock washers.
- 8. Adjust left-to-right yaw. When desired position is attained, tighten locking ring on pipe to mount.
- 9. Loosen tilt adjustment cap screw with enclosed tool and level the projected image to the screen. Tighten cap screw when a level image is achieved.
- 10. Loosen up-down pitch adjustment cap screw with enclosed tool and adjust the pitch angle of the projector. Tighten cap screw when at desired projection position.
- 11. If desired, add Kensington lock through the opening of the mount head, loop through cable end and attach to projector.

