

MultiSync E224Wi

MultiSync E243WMi

NEC



Setup Manual

Installationshandbuch

Manual de configuración

Manuel d'installation

Manuale di montaggio

РУКОВОДСТВО ПО УСТАНОВКЕ

Kurulum Kılavuzu

Contents

- LCD monitor with base
- Power Cord
- Base stand
- Video Signal Cable (15-pin mini D-SUB male to 15-pin mini D-SUB male)
- Video Signal Cable (DVI-D to DVI-D)
- Setup Manual
- Audio Cable (E243WMi only)

Inhalt der Verpackung

- LCD-Monitor mit Fuß
- Netzkabel
- Standfuß
- Signalkabel (Mini-D-SUB-Stecker mit 15 Stiften an beiden Seiten)
- Signalkabel (DVI-D auf DVI-D)
- Installationshandbuch
- Audiokabel (nur E243WMi)

Contenido

- Monitor LCD con base
- Cable de alimentación
- Sopor de la base
- Cable de señal video (Mini-D-SUB de 15 clavijas macho a mini D-SUB de 15 clavijas macho)
- Cable de señal video (DVI-D a DVI-D)
- Manual de configuración
- Cable de audio (solo E243WMi)

Содержимое

- ЖК-дисплей с основанием
- Кабель питания
- Основание
- Кабель видеосигнала (15-штырьковый мини-разъем D-SUB → 15-штырьковый мини-разъем D-SUB)
- Кабель видеосигнала (DVI-D a DVI-D)
- Руководство по установке
- Кабель аудиосигнала (только для E243WMi)

İçindekiler

- Ayaklı LCD monitör
- Güç Kablosu
- Ayak destekleri
- Video Sinyal Kablosu (15-pin mini D-SUB erkek 15-pin mini D-SUB erkeği)
- Video Sinyal Kablosu (DVI-D - DVI-D)
- Kurulum Kılavuzu
- Ses Kablosu (sadece E243WMi)

Sommaire

- Moniteur LCD avec socle
- Câble d'alimentation
- Support de la base
- Câble de signal vidéo (Mini-D-SUB de 15 broches mâle vers mini-D-SUB de 15 broches mâche)
- Câble de signal vidéo (DVI-D vers DVI-D)
- Manuel d'installation
- Câble de audio (seulement E243WMi)



Make sure all contents are in the box before starting monitor assembly.

Vergewissern Sie sich vor dem Aufstellen des Monitors, dass der Packungsinhalt vollständig ist.

Asegúrese de que todo el contenido esté en la caja antes de proceder al montaje del monitor.


Assurez-vous que le contenu de la boîte contient tous les éléments requis avant de commencer l'assemblage du moniteur.

Prima di iniziare ad assemblare il monitor assicurarsi che la confezione contenga tutti i componenti.

До начала сборки монитора убедитесь, что все компоненты находятся в упаковочной коробке.

Monitörün montajına başlamadan önce kutu içeriğinin eksiksiz olduğunu emin olun.

Optimal Performance/Optimale Leistung/Rendimiento óptimo/Performances optimales/Prestazioni ottimali/Оптимальная работа/Optimum Performans 1920 x 1080 @ 60Hz

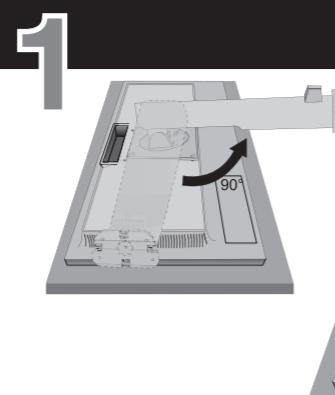

Place monitor down on a non-abrasive surface (so that the buttons don't touch it) and pivot the base 90°; then attach the base stand to LCD monitor and properly lock screws at the base stand bottom.

Legen Sie den Monitor auf eine weiche Oberfläche (die Tasten dürfen diese nicht berühren) und schwenken Sie den Standfuß um 90 Grad. Befestigen Sie diesen anschließend am LCD-Monitor und ziehen Sie die Schrauben an der Unterseite des Standfußes fest.

Coloque el monitor hacia abajo sobre una superficie no abrasiva (para que los botones no la toquen) y pírote la base 90°. A continuación, fije el soporte de la base al monitor LCD y apriete debidamente los tornillos situados en la parte inferior del soporte.

Placez le moniteur sur une surface non abrasive (de telle sorte que les boutons ne soient pas en contact avec la surface) et tournez la base de 90°. Fixez ensuite le socle de la base au moniteur LCD et serrez correctement les vis situées au bas du socle.

Appoggiare il monitor su una superficie non abrasiva (in modo che i tasti non tocchino la superficie) e ruotare la base di 90°; quindi montare il supporto della base al monitor LCD e fissare le viti nella parte inferiore della base nel modo appropriato.

Поместите монитор на неабразивную поверхность (так, чтобы кнопки не соприкасались с ней) и поверните основание на 90°; затем прикрепите основание-подставку к ЖК-монитору и надлежащим образом закрутите винты на нижней части основания-подставки.

Monitoru aşağından olmayan bir yüzey üzerine koyn (düğmeleri temas etmemeli) ve tabanını 90° döndürün, daha sonra taban desteği LCD monitörü takın, taban desteğiının altındaki vidalar düzgün şekilde sıkın.



Locate all inputs and make sure that all cords and cables are properly connected.

Schließen Sie alle Kabelverbindungen korrekt an die jeweiligen Eingänge an.

Ubique todas las entradas y asegúrese de que todos los cables están conectados correctamente.

Localisez toutes les entrées et assurez-vous que tous les cordons et câbles sont correctement connectés.

Individuare tutti gli ingressi e assicurarsi che tutti i cavi siano collegati nel modo appropriato.

Найдите все входы и убедитесь, что все провода и кабели подсоединенны надлежащим образом.

Tüm girişleri bulunır, tüm kordonların ve kablolarin doğru bağlandığından emin olun.



Find the keys used for OSD controls at the bottom of the monitor.

Die Tasten für die OSD-Steuerungen befinden sich unten am Monitor.

Busque las teclas utilizadas para los controles OSD en la parte inferior del monitor.

Les touches utilisées pour les commandes OSD se trouvent au bas du moniteur.

Individuare i tasti utilizzati per i controlli OSD nella parte inferiore del monitor.

В нижней части монитора найдите кнопки, используемые для управления экранным меню.

Monitorün altında OSD kontroller için kullanılan tuşları bulun.



See User's Manual for complete instructions on how to remove screws and monitor stand.

Ausführliche Anweisungen zum Entfernen der Schrauben und des Monitorfußes finden Sie im Benutzerhandbuch.

Consulte el manual de usuario para instrucciones completas sobre cómo extraer los tornillos y la base del monitor.

Consultez le Manuel de l'utilisateur pour obtenir des instructions complètes sur le retrait des vis et du support du moniteur.

Vedere il Manuale dell'utente per le istruzioni complete su come rimuovere le viti e il supporto del monitor.

Для получения подробных инструкций о том, как правильно отвернуть винты и снять подставку монитора, обратитесь к руководству пользователя.

Vidaların ve monitor desteği nasıl çıkarılacağına ilişkin talimatlar için Kullanıcı Kılavuzuna bakın.



www.nec-display-solutions.com

For additional information, log on to www.nec-display-solutions.com and consult User's manual.

Zusätzliche Informationen finden Sie auf www.nec-display-solutions.com und im Benutzerhandbuch.

Para obtener más información, vaya a www.nec-display-solutions.com y consulte los manuales del usuario.

Pour plus amples informations, visitez le site www.nec-display-solutions.com et consultez le manuel de l'utilisateur.

Per ulteriori informazioni, visitare il sito www.nec-display-solutions.com e consultare il Manuale dell'utente.

Для получения дополнительной информации обратитесь к руководству пользователя на сайте www.nec-display-solutions.com

Ilave bilgiler için www.nec-display-solutions.com adresine ve kullanici kilavuzuna bakabilirsiniz.

WARNING	CAUTION	DANGER
TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. ALSO, DO NOT USE THIS UNIT'S POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLETS UNLESS THE PRONGS CAN BE FULLY INSERTED. REFRAIN FROM OPENING THE CABINET AS THERE ARE HIGH VOLTAGE COMPONENTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		
This symbol warns user that unisolated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside this unit.		
This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.		

Safety Precautions and Maintenance

FOR OPTIMUM PERFORMANCE, PLEASE NOTE THE FOLLOWING WHEN SETTING UP AND USING THE MULTISYNC LCD COLOUR MONITOR:

- DO NOT OPEN THE MONITOR. There are no user serviceable parts inside and opening or removing covers may expose you to dangerous shock hazards or other risks. Refer all servicing to qualified service personnel.
- Do not spill any liquids into the cabinet or use near water.
- Do not insert objects of any kind into the cabinet slots, as they may touch dangerous voltage points, which can be harmful or fatal or may cause electric shock, fire or equipment failure.
- Do not place any heavy objects on the power cord. Damage to the cord may cause shock or fire.
- Do not place this product on a sloping or unstable cart, stand or table, as the monitor may fall, causing serious damage to the monitor.
- The power source cord must be properly connected to both the monitor and the wall outlet.
- In U.K. use a BS-approved power cord with moulded plug having a black (5A) fuse installed for use with this monitor.
- Do not place any objects onto the monitor and do not use the monitor outdoors.
- Do not bend power cord.
- Do not use monitor in high temperature, humid, dusty, or oily areas.
- Do not cover vent on monitor.
- To prevent damage to the LCD monitor caused by tipping over due to earthquakes or other shocks, make sure to install the monitor in a stable location and take measures to prevent falling.

Immediately unplug your monitor from the wall outlet and refer servicing to qualified service personnel under the following conditions:


- When the power supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the monitor.
- If the monitor has been exposed to rain or water.
- If the monitor has been dropped or the cabinet damaged.
- If the monitor does not operate normally following cleaning instructions.
- If monitor or glass parts are broken, do not touch liquid or liquid crystal and handle with care.
- If you notice any structural damage such as cracks or unnatural warping.

- Allow adequate ventilation around the monitor so that heat can properly dissipate. Do not block ventilation openings or place the monitor near a radiator or other heat sources. Do not put anything on top of monitor.

- The power cable connector is the primary means of detaching the system from the power supply. The monitor should be installed close to a power outlet, which is easily accessible.

- Handle with care when transporting. Save packaging for transporting.

WARNING	ATTENTION	DANGER
SETZEN SIE DAS GERÄT WEGEN REGEN NOCH FEUCHTIGKEIT AUS, DA ES AENDERNAFALLS ZU FEUER ODER STROMSCHLAGEN KOMMT. ES BEFINDEN SIE DAS PFERDSEITIGE DER NETZKABEL MIT EINER STÖRSICHERUNG. AUF KEINEN FALLS VERWENDEN SIE DAS NETZKABEL MIT EINER STÖRSICHERUNG.	POUR ÉVITER LES RISQUES D'INCENDIE OU D'ÉLECTROCUTION, N'EXPOSEZ PAS L'APPAREIL À LA PLUIE OU À L'HUMIDITÉ. DE MÊME, NE UTILISEZ PAS LA PRISE POLARISÉE D'UN CÉLÉSTIALE AVEC UNE ALLONGE OU D'AUTRES PRISES SI ELLES NE PEUVENT ÊTRE TOTALEMENT ENFONCÉES. NOUVEAU SELON LE BOÎtier CAR IL CONTIENT DES COMPOSANTS À HAUTE TENSION. CONFIEZ TOUS LES TRAVAUX DE DÉPANNAGE AU PERSONNEL TECHNIQUE QUALIFIÉ.	PER EVITARE IL RISICO DI INCENDIO O DI SCOSSE ELETTRICHE, NON ESPOSERE L'UNITÀ A PIOGGIA O UMIDITÀ; INOLTRE, NON USARE LA SPINA POLARIZZATA DELL'UNITÀ CON UNA PRESA DI PROLUNGA O ALTRIE PRESE, A MENO CHE I POLI DELLA SPINA SI INSERISCANO COMPLETAMENTE. NON APRIRE LA CAJA DEL MONITOR, YA QUE CONTIENE COMPONENTES DE ALTO VOLTAJE. DEJE QUE SEA EL PERSONAL DE SERVICIO CALIFICADO QUIEN SE ENCARGUE DE LAS TAREAS DE SERVICIO.
VORSICHT: ENTFERN SIE KEINEN SCHLAGERFAHR, REICHEN NOCH FEUCHTIGKEIT AUS, DAMIT ES NICHT ZU STROMSCHLAGEN KOMMT. IM INNEREN BEFINDEN SIE KEINE BENUTZER VON WARTENDE KOMPONENTEN. LASSEN SIE WARTUNGSARBEITEN VON QUALIFIZIERTEN WARTUNGSTECHNIKERN DURCHFÜHREN.	ATTENTION: POUR RÉDUIRE LES RISQUES D'ÉLECTROCUTION, ENLEVEZ PAS LE CAPOT (OU L'ARRIÈRE). VOUS NE POUVEZ RÉPARER AUCUNE PIÈCE INTERNE. CONFIEZ TOUS LES TRAVAUX DE DÉPANNAGE AU PERSONNEL TECHNIQUE QUALIFIÉ.	AVVERTIMENTO: PER EVITARE IL RISICO DI SCOSSE ELETTRICHE, NON TOGLIERE IL COPERTO (O LA COPERTURA POSTERIORE). ALL'INTERNO NON VI SONO PARTI MANUTENIBILI DALL'UTENTE. PER LA MANUTENZIONE RIVOLGERSI A PERSONALE DI MANUTENZIONE QUALIFICATO.
VORSICHT: ENTFERNEN SIE KEINEN SCHLAGERFAHR, REICHEN NOCH FEUCHTIGKEIT AUS, DAMIT ES NICHT ZU STROMSCHLAGEN KOMMT. IM INNEREN BEFINDEN SIE KEINE BENUTZER VON WARTENDE KOMPONENTEN. LASSEN SIE WARTUNGSARBEITEN VON QUALIFIZIERTEN WARTUNGSTECHNIKERN DURCHFÜHREN.	ATTENTION: POUR RÉDUIRE LES RISQUES D'ÉLECTROCUTION, ENLEVEZ PAS LE CAPOT (OU L'ARRIÈRE). VOUS NE POUVEZ RÉPARER AUCUNE PIÈCE INTERNE. CONFIEZ TOUS LES TRAVAUX DE DÉPANNAGE AU PERSONNEL TECHNIQUE QUALIFIÉ.	ATTENZIONE: PER EVITARE IL RISICO DI SCOSSE ELETTRICHE, NON TOGLIERE IL COPERTO (O LA COPERTURA POSTERIORE). ALL'INTERNO NON VI SONO PARTI MANUTENIBILI DALL'UTENTE. PER LA MANUTENZIONE RIVOLGERSI A PERSONALE DI MANUTENZIONE QUALIFICATO.
Dieses Symbol weist den Benutzer auf nicht isolierte spannungsführende Komponenten im Gerät hin, die Stromschläge verursachen können. Aus diesem Grund dürfen Sie keinen Kontakt mit einer Komponente im Gerät herstellen.	Este símbolo previene al usuario que las piezas no aisladas dentro del dispositivo pueden causar descargas eléctricas. Por lo tanto, evite tener contacto con cualquier pieza del interior del monitor.	Questo simbolo avverte l'utente che tensioni non isolate da un dispositivo possono essere sufficientemente elevate da provocare scosse elettriche. Per tanto, evite il contatto con qualsiasi parte del monitor.
Dieses Symbol weist den Benutzer auf wichtige Informationen zu Wartung und Pflege dieses Geräts hin. Die Informationen sollten sorgfältig gelesen werden, um Probleme		

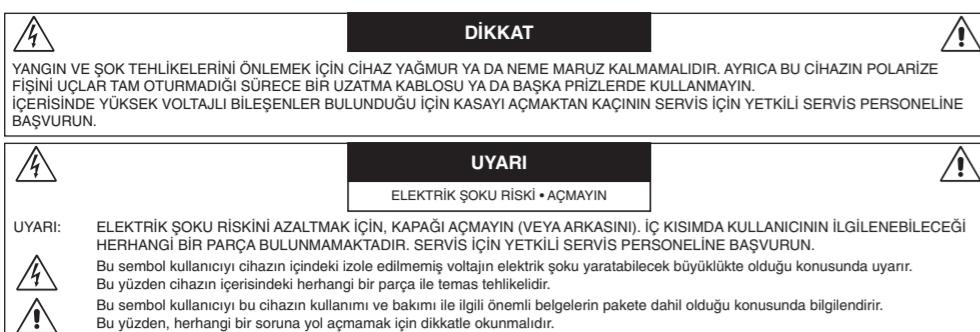

Güvenlik Uyarıları ve Bakım

MULTISYNC LCD RENKLİ MONİTÖR KURARAK VE KULLANIRKEN İYI PERFORMANS İÇİN LÜTFEN ASAĞIDAKİ NOKTALARA DİKKAT EDİN:

- MONİTÖR AÇMAYIN.** İç kesimal kulanıncın ılgilenileceğii herhangi bir parça bulunmamakta ve kapığı açmak ya da çıkartmak sizi ciddi şok verebilir veya ağır yaralanmaya neden olabilir. Tüm bakım işleri için yetkili servis ekibiyle başvurun.
- Kasaya herhangi bir ezī dokuyaçağınızda monitörünüzü ayağınıza kulanmayın.
- Teknik bilgi noktalardan temsıl ederek, zararı ya da ölümcül olabileceği gibi elektrik soku, yanın ya da cihaz arızasına yol açabileceğii için kasadaki uyarıları herhangi bir cism sokmayın.
- Güç kablosunu yovulara herhangi bir cism sokmayın.
- Monitörün düşmesine ve ciddi şekilde hasar görmesine sebep olabileceği için bu ürünü eğlenceyi ya da dengezisiz taşıyıcı, destek veya masa üzerinde yerleştirmeyin.
- Kullanıcamacığın güç kablosunu ülkenizdeki güvenlik standartlarına uygun ve onaylanmış olmalıdır. (Avrupa'da HOSVV-F kullanılmıştır).
- İngiltere'de bu monitörle birlikte BS onaylı, (SA) sigortalı olası güç kablosu kullanın.
- Monitörün üzerinde herhangi birşey koymayıne ve monitörün dışında kulanmayın.
- Güç kablosunu kıvırmayın.
- Monitörün üzerindeki hava akışını kesmeyin.
- Monitörün üzerindeki havalandırma hafifleticiyi kapatmayın.
- Deprem veya diğer sokaş sebepleri devrilmeleri dolaylı LCD monitörün hasar görmesini önlemek için, monitörü sağlam bir yere monte ettiginden gerekli durumlarda, monitörünüze hemen fikir çekin ve servis için yetkili servis ekibine başvurun.
- UYARI:** ELEKTRİK SOKU RISKİ AZALTMAK İÇİN, KAPAKI AÇMAYIN (VEYA ARAKSINI) İÇ KİSMİDA KULLANICIN İLGILENEBİLECEĞİ HERHANGİ BİR PARÇA BULUNMAMAKTADIR. SERVIS İÇİN YETKİLİ SERVIS PERSONELİNE BAŞVURUN.
Bu simboli kulanıcyı cihaz içindeki izole edilmiş voltajın elektrik soku yaratabilecek büyüklikte olduğu konusunda uyarır.
Bu simboli kulanıcyı bu cihaz kulanımı ve bakımı ile ilgili önemli belgelelerin paketinde dahil olduğu konusunda bilgilendirir.
Bu yuzden, herhangi bir soruna yol açmamak için dikkat okumalıdır.

Troubleshooting

- No picture**
- The signal cable should be completely connected to the display card/computer.
 - The monitor does not support DisplayPort converter signal. (E243WM only)
 - The display card should be completely seated in its slot.
 - Power switch and computer power switch should be in the ON position.
 - Check to make sure that a supported mode has been selected on the display card or system being used. (Please consult display card or system manual to change graphics mode.)
 - Check the monitor and your display card with respect to compatibility and recommended settings.
 - Check the signal cable connector for bent or pushed-in pins.
 - Check the signal input.

Solución de problemas

- No hay imagen**
- El cable de señal deberá estar completamente conectado a la tarjeta de video o al ordenador.
 - El monitor no admite la señal de conversión para DisplayPort. (solo E243WM)
 - La tarjeta gráfica deberá estar completamente insertada en su slot.
 - La fuente de alimentación de visualización deberá estar completamente insertada en la ranura correspondiente.
 - El interruptor de encendido frontal del monitor y el del ordenador deberán estar en la posición ON.
 - Asegúrese de que se ha seleccionado un modo disponible en la tarjeta de visualización o el sistema que se está utilizando. (Consulte el manual de la tarjeta de visualización o del sistema para modificar el modo gráfico.)
 - Compruebe que el monitor y su tarjeta de visualización son compatibles y su configuración es la recomendada.
 - Compruebe que el conector del cable de señal no esté doblado ni tiene ninguna clavija hundida.
 - Compruebe la entrada de señal.

Ricerca guasti

- Nessuna immagine**
- Il cavo segnali deve essere ben collegato alla scheda video del computer.
 - Questo monitor non supporta il segnale di conversione DisplayPort.
 - La scheda video deve essere completamente inserita nel suo slot.
 - Verificare che l'interruttore di alimentazione del computer sia posto in posizione ON.
 - Assicurarsi che sulla scheda video o sul sistema usato sia stato selezionato un modo supportato. (Consultare il manuale della scheda video o del sistema per cambiare la modalità grafica.)
 - Controllare se il monitor e la scheda video sono compatibili e rispettano le impostazioni raccomandate.
 - Controllare che il connettore del cavo segnali non abbia contatti piegati o riempiti.
 - Controllare l'ingresso segnale.

Sorun Giderme

- Görüntü Yok**
- Sinyal kablosu ekran kartına/bilgisayara tam olarak takılı olmalıdır.
 - Monitor DisplayPort konvertör sinyalini desteklemez. (sadece E243WM)
 - Ekran kartı yuvasına tam olarak oturtulması gereklidir.
 - Üçüncü taraf显卡显存容量 ile uyumlu olmalıdır.
 - Monitorınızı ve ekran kartını uyumlu olukları ve tısviye edilen ayarları içeren kontrol edin.
 - Sinyal kablosu bağlantısında olduğumuzda eğilim ya da içeriği kaçmış olabileceğini kontrol edin.
 - Sinyal girişini kontrol edin.

EEE Yönetmeligine Uygundur.

Fehlerbehebung

Kein Bild

- Das Signalkabel muss richtig mit Grafikkarte/Computer verbunden sein.
- Der Monitor unterstützt kein Signal aus einem DisplayPort-Konverter. (nur E243WM)
- Die Grafikkarte muss richtig in den Steckplatz eingesetzt sein.
- Der Netzschalter sollte richtig auf der Vorderseite des Monitors und der Netzschalter des Computers müssen sich in der Position ON bzw. Ein stellen.
- Überprüfen Sie, ob ein von den verwendeten Grafikkarte unterstützter Modus ausgewählt wurde. (Informationen zum Ändern des Grafikmodus finden Sie im Handbuch zur Grafikkarte bzw. zum System.)
- Überprüfen Sie, ob die für Monitor und Grafikkarte empfohlenen Einstellungen vorgenommen wurden.
- Prüfen Sie, ob der Stecker des Signalkabels verbogen wurde oder auf Stifte im Stecker fehlen.
- Prüfen Sie das Eingangssignal.

Résolution des problèmes

Pas d'image

- Le câble vidéo doit être correctement connecté à fond à la carte graphique et à l'ordinateur.
- Le moniteur ne prend pas en charge le signal de conversion DisplayPort. (E243WM uniquement)
- La carte graphique doit être insérée à fond dans son logement.
- Vérifier que les interrupteurs d'alimentation du moniteur en façade de l'ordinateur sont sur la position MARCHE.
- Vérifier que le mode d'affichage automatique a bien été sélectionné pour la carte graphique ou le système utilisé. (Veuillez consulter le manuel de votre carte graphique ou de votre système pour modifier le mode graphique.)
- Vérifiez la compatibilité et les paramètres recommandés de votre moniteur et de votre carte graphique.
- Vérifiez que le connecteur du câble de signal vidéo ne comporte aucune broche torde ou enfoncee.
- Vérifier le signal d'entrée.

Устранение неисправностей

Нет изображения

- Кабель видеосигнала должен быть надежно подключен к плате видеоджадтера/компьютеру.
- Данным монитором не поддерживается сигнал преобразователя DisplayPort. (Только для модели E243WM)
- Плата видеоджадтера должна быть надежно установлена в разъеме.
- Проверьте, чтобы выключатель питания монитора на передней панели и выключатель питания компьютера были установлены в положение ON (ВКЛ.).
- Убедитесь, что на используемой плате видеоджадтера или в системе выбран поддерживаемый режим. (Для изменения графического режима обратитесь к руководству по плате видеоджадтера или к компьютеру.)
- Проверьте совместимость рекомендованных параметров для монитора и платы видеоджадтера.
- Проверьте, нет ли в разъеме кабеля для передачи сигнала сопутствующих изъянов.
- Проверьте входной сигнал.

Mount Flexible Arm

This LCD monitor is designed for use with a flexible arm.

- Follow the instructions on how Remove Monitor Stand for Mounting to remove the stand.
- Use the 4 screws removed from the stand to attach the arm to the monitor (**Figure F.1**).

Caution: Use ONLY the screws (4 pcs) that were removed from the stand to avoid damage to the monitor or stand. To meet the safety requirements, the monitor must be mounted to an arm which guarantees the necessary stability under consideration of the weight of the monitor. The LCD monitor should only be used with an approved arm (e.g. GS mark).

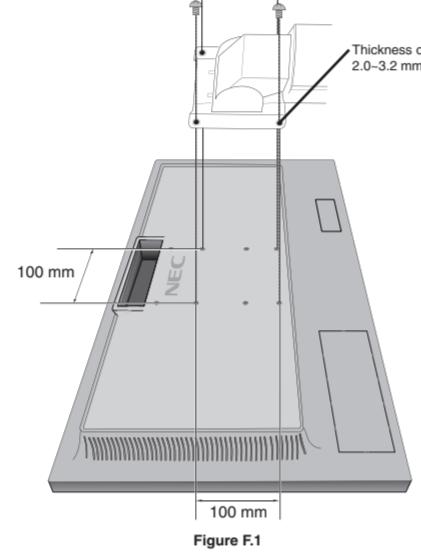


Figure F.1

8. Reverse this process to re-attach stand.

NOTE: Use only VESA-compatible alternative mounting method.

Handle with care when removing stand.

NOTE: Match "TOP SIDE" mark on stand to top side of the monitor head when re-attaching stand.

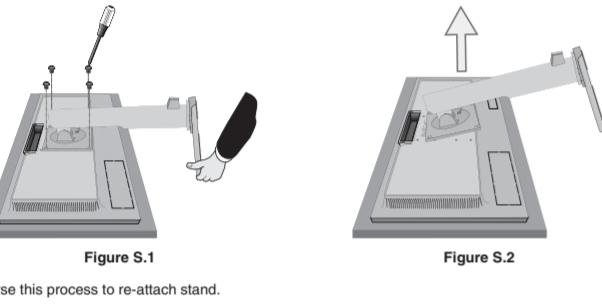


Figure S.1

Figure S.2

NOTE: Handle with care when removing monitor stand.

NOTE: In order to avoid stand drop, when removing screws, please support stand with your hand.

5. Remove the stand (**Figure S.2**).

6. The monitor is now ready for mounting in an alternate manner.

7. Connect the cables to the back of the monitor.

NOTE: Handle with care when removing monitor stand.

8. Reverse this process to re-attach stand.

NOTE: Use only VESA-compatible alternative mounting method.

Handle with care when removing stand.

NOTE: Match "TOP SIDE" mark on stand to top side of the monitor head when re-attaching stand.

NOTE: Use only VESA-compatible alternative mounting method.

Handle with care when removing stand.

NOTE: Match "TOP SIDE" mark Please match top side of the monitor.

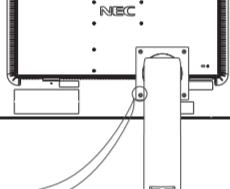
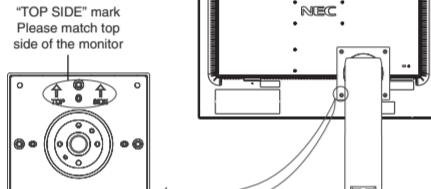


Figure S.1

Figure S.2

NOTE: This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty covers only NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.

This warranty only covers NEC DISPLAY SOLUTIONS-supplied components. Service required as a result of third party components is not covered under this warranty. In order to be covered under this warranty, the product must have been purchased in the U.S.A. or Canada by the original purchaser. This warranty only covers Product purchased in the U.S.A. or Canada by the original purchaser. This warranty does not cover products purchased outside of the U.S.A. or Canada. Proof of Purchase will be required by NEC DISPLAY SOLUTIONS to substantiate date of purchase. Such proof of purchase must be an original bill of sale or receipt containing name and address of seller, purchaser, and the serial number of the product.