

NEC Interactive Projector - NP-UM352W

Instructions: How to use the UM352W with a computer

1. Install the following software onto the computer:
 - Microsoft .Net Framework 4 or later: <http://www.microsoft.com/net>
 - IWB setup software/EyeRIS NEC Edition: http://www.nec-display.com/dl/en/pj_soft/iwb_ss.html
Note: Detailed directions about how to install IWB software and how to calibrate the projector is located in the "IWB Setup Software/ EyeRIS operation manual".
 - DisplayNote: <http://www.necdisplay.com/displaynote/>
2. Verify that USB cable and signal cable (VGA / HDMI) are connected as outlined in the projector user manual.
3. Turn on projector to display image.
4. Start EyeRIS software and perform calibration as instructed in IWB setup software manual.
5. Using projector remote control, press "APPS" button to display APPS menu.
6. Click on "Tools" icon to display Tools Menu.
7. Select "Pen Settings".
8. Check the box for "Remote Pen".
9. Press source button (Comp1 / HDMI1 etc.) to display content from computer.
10. The interactive pen can now be used at the screen.

Open DisplayNote NEC Edition software to activate the following functions:

- On screen annotation using supplied interactive pens
- Share an interactive whiteboard
- Share the desktop - this function enables audience members to view your computer screen from their tablets, smartphones and laptops while on the same network or over the cloud.
- Audience members can share content from their devices and make on-screen annotations.