**DLP Cinema® Projector** 



# **User's Manual**

# DLP Cinema<sup>®</sup> Projector Head **NP-02HD**

# Light Module

# NP-24LU01/NP-20LU01/NP-18LU01

NEC Display Solutions, Ltd.

Model No. NP-02HD NP-24LU01 / NP-20LU01 / NP-18LU01

# **Important Information**

**Precautions:** Please read this manual carefully before using your **NP-02HD** and keep the manual handy for future reference.

The NP-02 (projector head), NP-24LU01 / NP-20LU01 / NP-18LU01 (light module), NP-NC2402ML / NP-NC2002ML / NP-NC1802ML (projector unit) are called the "projector" and the NP-90MS02 (integrated media server) is called the "media block" or "IMB" in this manual.

- DLP (Digital Light Processing), DLP Cinema and DLP Cinema logo are trademarks of Texas Instruments.
- Microsoft, Windows and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Mozilla and Firefox are either registered trademarks or trademarks of the Mozilla Foundation in the United States and/or other countries.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates.
- Linux is a registered trademark of Linus Torvalds in the United States and/or other countries.
- Other product names and logos mentioned in the user's manual may be the trademarks or registered trademarks of their respective holders.
- The display screens and illustrations shown in this manual may differ slightly from the actual ones.
- GPL/LGPL Software Licenses
- The product includes software licensed under GNU
- General Public License (GPL), GNU Lesser General Public License (LGPL), and others.
- For more information on each software, see "readme.pdf" inside the "about GPL&LGPL" folder on the supplied CD-ROM.

## 

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## 

TO PREVENT ELECTRIC SHOCK, DO NOT OPEN TOP COVER. NO USER SERVICEABLE PARTS INSIDE.



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.


#### Laser Safety Caution

This product is classified as Class 1 of IEC60825-1 Third edition 2014. This product is classified as RG3 of IEC62471-5 First edition 2015. This product is classified as RG3 of IEC62471:2006. (for USA). Obey the laws and regulations of your country in relation to the installation and management of the device.

# 

Use of controls or adjustments of procedures other than those specified herein may lead to hazardous laser radiation exposure.

- Hazardous optical radiation is emitted from this product, RG3 IEC 62471:2006. (for USA).
- No direct exposure to the beam shall be permitted, RG3 IEC 62471-5:2015.
- Do not look into the lens while the projector is on. Serious damage to your eyes could result.

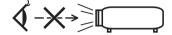

- Keep any items such as magnifying glass out of the light path of the projector. The light being projected from the lens is extensive, therefore any kind of abnormal objects that can redirect light coming out of the lens, can cause unpredictable outcome such as fire or injury to the eyes.
- When turning on the projector, ensure that nobody is facing towards the lens in the path of the light emitted from the laser.
- This product can only be operated in theaters by specified personnel. Customers should not operate this product.

#### Machine Noise Information Regulation - 3. GPSGV,

The highest sound pressure level is less than 70 dB (A) in accordance with EN ISO 7779.

## 

This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

# 

- In order to reduce any interference with radio and television reception use a signal cable with ferrite core attached. Use of signal cables without a ferrite core attached may cause interference with radio and television reception.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

🌇 WARNING

THE END USER IS NOT ALLOWED TO OPEN OR MODIFY THE PRODUCT. NO USER SERVICEABLE PARTS. MAINTAIN AND SERVICE OF THE PRODUCT IS ONLY TO BE HANDLED BY NEC AUTHORIZED TECHNICIANS.

#### Important Safeguards

These safety instructions are to ensure the long life of your projector and to prevent fire and shock. Please read them carefully and heed all warnings.

#### Installation

- 1. Do not point the projection beam toward other people or reflective objects.
- 2. Consult your dealer for information about transporting and installing the projector. Do not attempt to transport and install the projector yourself.

The projector must be installed by qualified technicians in order to ensure proper operation and reduce the risk of bodily injury.

- Place the projector on a flat, level surface in a dry area away from dust and moisture. Tilting the front of the projector up or down from level could reduce laser life.
   Do not put the projector on its side when the laser is on.
   Doing so may cause damage to the projector.
- Do not place the projector in direct sunlight, near heaters or heat radiating appliances.
- 5. Exposure to direct sunlight, smoke or steam could harm internal components.
- Handle your projector carefully. Dropping or jarring your projector could damage internal components.
- 7. When moving the projector, be sure to remove the lens from the projector before moving it.
- To carry the projector, a minimum of six persons are required.
- Do not hold the lens part with your hand. Otherwise the projector may tumble or drop, causing personal injury.
- 10. Do not place heavy objects on top of the projector.
- Turn off the projector, and disconnect the power cable before moving the projector.
   For C2 connection, turn off the projector, shut down the

AC power to the projector and the light using a circuitbreaker.

Disconnect the cables between devices and the light before moving the projector.

- 12. Turn off the projector when removing and installing lenses. Failure to do so can cause loss of vision.
- 13.Do not install and store the projector in the below circumstances.

Failure to do so may cause of malfunction.

- In powerful magnetic fields
- In corrosive gas environment
- Outdoors
- 14. If you wish to have the projector installed on the ceiling;
  - Do not attempt to install the projector yourself.
  - The projector must be installed by qualified technicians in order to ensure proper operation and reduce the risk of bodily injury.
  - In addition, the ceiling must be strong enough to support the projector and the installation must be in accordance with any local building codes.
  - Please consult your dealer for more information.


## 🐴 WARNING

- Do not use the projector with the supplied lens cap or equivalent while the projector is operating. This may cause the lens cap to heat up and deform or melt.
- 2. Do not place any objects, which are easily affected by heat, in front of the projector lens. Doing so could lead to the object melting from the heat that is emitted from the light output.



When using the projector tilted in the forward or backward direction, use it in the range of  $(+15^{\circ} \text{ to } -15^{\circ})$  from horizontal. If you tilt it outside of this range or tilt it to the left or right, it may become damaged.

If the projector is tilted outside of this range when used tilted in the forward or backward direction, "TiltDegreeOver" is displayed on the LCD screen. If this message appears, change the installation of the projector so that the angle is within the given range from horizontal.

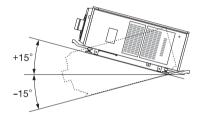

When installed on a floor or a desktop



## 

This equipment is not suitable for use in locations where children are likely to be present

#### **Power Supply**

 Consult your dealer for installing the power cable to the projector. DO NOT install the power cable by yourself. Doing so may cause a fire or electric shock. The projector is so designed that it operates with the power supply voltage described below.

For C1 connection (When the AC power to the projector power supply and the light power supply is provided by a single cable)

- AC 200V-240V single phase 50/60Hz
   For C2 connection
   (When the AC power to the projector power supply and the light power supply is provided by separate cables)
- AC 100V-240V single phase 50/60Hz (projector power supply)
- AC 200V-240V single phase 50/60Hz (light power supply)

Ensure that your power supply fits this requirement before attempting to use your projector.

 The power cable is not included with the projector. Ask your dealer for the power cable to select and purchase. Use a power cable that meets the standards and power supply voltage of the country where you are using the projector.

Refer to "2-2. Connecting the Power Cable" (page 24) for details on connecting the power cable.

- 3. Handle the power cable carefully. A damaged or frayed power cable can cause electric shock or fire.
  - Do not bend or tug the power cable excessively.
  - Do not place the power cable under the projector, or any heavy object.
  - Do not cover the power cable with other soft materials such as rugs.
  - Do not heat the power cable.
- 4. Placing the power cable and the signal cable closely to each other can cause beat noise. If this happens, keep the two separated so that beat noise is not generated. Beat noise is corruption of the picture often seen as a rolling band moving through the image.
- 5. Do not touch the projector during a thunder storm. Doing so can cause electrical shock or fire.
- When installed on the ceiling, install the breaker in a location that is easy to reach by hand.

#### **Fire and Shock Precautions**

- 1. Ensure that there is sufficient ventilation and that vents are unobstructed to prevent potentially dangerous concentrations of ozone and the build-up of heat inside your projector. Allow at least 24 inches (60 cm) of space between your projector and a wall. In particular, clear a space of 26.7 inches (70 cm) or more in front of the air outlet on the rear surface and 12 inches (30 cm) or more on the upper part of the projecter body.
- 2. Prevent foreign objects such as paper clips and bits of paper from falling into your projector. Do not attempt to retrieve any objects that might fall into your projector. Do not insert any metal objects such as a wire or screwdriver into your projector. If something should fall into your projector, shut down the AC power to the projector immediately and have the object removed by a qualified service person.

For C2 connection, turn off the projector, shut down the AC power to the projector and the light using a circuit breaker, and contact your dealer/distributor.

- 3. Turn off the projector, shut down AC power by using a circuit breaker and contact qualified service personnel under the following conditions. For C2 connection, turn off the projector, shut down the AC power to the projector and the light using a circuit breaker, and contact your dealer/distributor for a repair.
  - When the power cable or plug is damaged or frayed.
  - If liquid has been spilled into the projector, or if it has been exposed to rain or water.
  - If the projector does not operate normally when you follow the instructions described in this user's manual.
  - If the projector has been dropped or the cabinet has been damaged.
  - If the projector exhibits a distinct change in performance, indicating a need for service.
- When using a LAN cable: For safety, do not connect to the connector for peripheral device wiring that might have excessive Voltage.
- 5. Do not try to touch the air outlets on the projector during normal projector operation as it is hot.

#### Cleaning

1. Shut down AC power by using a circuit breaker before cleaning.

For C2 connection, turn off the projector, shut down the AC power to the projector and the light using a circuit breaker.

- Clean the cabinet periodically with a cloth. If heavily soiled, use a mild detergent. Never use strong detergents or solvents such as alcohol or thinner.
- 3. Use a blower or lens paper to clean the lens, and be careful not to scratch or mar the lens.
- 4. Do not handle the projector and the power cable with wet hands. Doing so can cause electrical shock or fire.

### 🔨 CAUTION

- Do not shut down AC power to the projector under the following conditions. Doing so can damage the projector.
  - While projecting images
  - While cooling after the power is turned off. (The STATUS indicator LED blinks in orange while the fan is rotating, and "cooling..." is displayed on the LCD screen.)
    - When using the NP-90MS01/NP-90MS02: 90 seconds
  - During IMB Operation (if the projector is not in standby state)
- 2. Do not turn of the AC power for 90 seconds after the Laser is turned on and while the POWER indicator is blinking green. Doing so could cause premature Laser failure.
- 3. Keep hands away from the lens mounting portion while the lens shift is in operation. Failure to do so could result in fingers being pinched between the cabinet and lens cover.
- When main body is damaged, cooling fluids may come out of internal part. DO NOT touch and drink the cooling fluid.
  - When the cooling fluids are swallowed or contacted with your eyes, please consult with doctors immediately.

#### Caution on Carrying the Projector/Handling the Optional Lens

The projector should always be carried by at least 6 people, holding the handles on the front and back of the main body and the grips on the bottom. Remove the lens unit from the projector body when moving the projector.

When installing / removing a lens, shut down the AC power to the projector.

When shipping the projector with the lens, remove the lens before shipping the projector. Always attach the dust cap to the lens whenever it is not mounted on the projector. The lens and the lens shift mechanism may encounter damage caused by improper handling during transportation.

#### Light Module

- 1. A light module containing multiple laser diodes is included in the product as the light source.
- 2. These laser diodes are sealed in the light module. No maintenance or service is required for the performance of the light module.
- 3. End user is not allowed to replace the light module.
- Contact qualified distributor for light module replacement and further information.

#### Disposing of your used product



EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste.

This includes projectors and their electrical accessories. When you dispose of such products, please follow the guidance of your local authority and/or ask the shop where you purchased the product.

After collecting the used products, they are reused and recycled in a proper way. This effort will help us reduce the wastes as well as the negative impact to the human health and the environment at the minimum level.

The mark on the electrical and electronic products only applies to the current European Union Member States.



For EU: The crossed-out wheeled bin implies that used batteries should not be put to the general household waste! There is a separate collection system for used batteries, to allow proper treatment and recycling in accordance with legislation.

According the EU directive 2006/66/EC, the battery can't be disposed improperly. The battery shall be separated to collect by local service.

#### For questions relating to unclear points or repairs

Contact your dealer or the following support branch for questions relating to unclear points, malfunctions and repairs of the product.

#### In Europe

Company Name: NEC Display Solutions Europe GmbH Address: Landshuter Allee 12-14, D-80637 Munich, Germany Telephone: +49 89 99699 0 Fax Line: +49 89 99699 500 Email Address: info@nec-displays.com WEB Address: http://www.nec-display-solutions.com

#### In North America

Company Name: NEC Display Solutions of America, Inc. Address: 3250 Lacey Rd, Ste 500 Downers Grove, IL 60515 U.S.A. Telephone: +1 800-632-4662 Email: techsupport@necdisplay.com WEB Address: https://www.necdisplay.com/

#### In China

Company Name: NEC (China) Co., Ltd. Address: 6F, Landmark diplomatic office building D2, No. 19 East Road, Chaoyang District, Beijing 100600, R.P.C. Telephone: 010-59342706 Email Address: nec-support@nec.cn

#### In Hong Kong and Taiwan

Company Name: Strong Westrex, Inc. Address: Room 4108 China Resources Building, No. 26 Harbour Road, Wanchai, Hong Kong Telephone: +852 2827 8289 Fax Line: +852 2827 5993 Email Address: Felix.chen@btn-inc.com

#### In South Korea

Company Name: Hyosung ITX Co., Ltd. Address: 1F, Ire Building, 2, Yangpyeong-dong 4-ga, Yeongdeungpo-gu, Seoul, Korea 150-967 Telephone: +82-2-2102-8591 Fax Line: +82-2-2102-8600 Email Address: moneybear@hyosung.com WEB Address: http://www.hyosungitx.com

#### In Australia and New Zealand


Company Name: NEC Australia Pty Ltd Address: 26 Rodborough Road Frenchs Forest NSW 2086 Telephone: 131 632 (from anywhere in Australia) Email Address: displays@nec.com.au WEB Address: http://www.nec.com.au

# In Thailand, Singapore, Malaysia, Indonesia and Philippines

Company Name: Goldenduck International Co., Ltd. Address: 65 Soi Phutthamothon Sai 1, 21 Bangramad, Talingchan, Bangkok, Thailand 10170 Telephone: +66-2887-8807 Fax Line: +66-2887-8808


Email Address: contact@goldenduckgroup.com

# Label Information

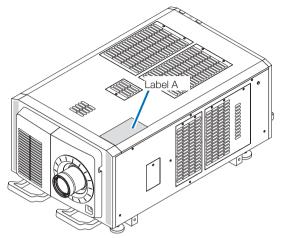

Label A: Lamp Warning Label



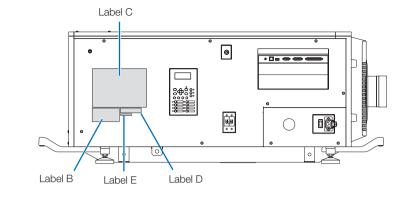


Label B

Laser Explanatory Label



Label C

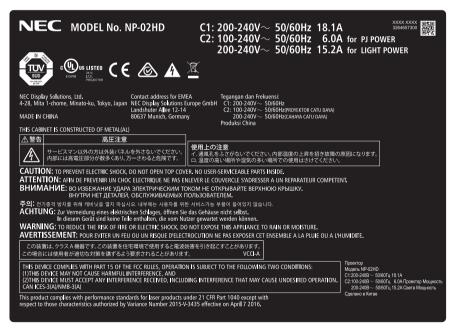

Label E

M/F Date : YYYY. MM. DD

# Radiation Range of Emitted Light by the Projector (HD: Hazard Distance)

- The below table describes the radiation range of emitted light by the projector that is classified as Risk Group 3 (RG3) of IEC62471-5 First edition 2015.
- The below table describes the radiation range of emitted light by the projector that is classified as Risk Group 3 (RG3) of IEC62471:2006.(for USA).
- Please keep within bounds for installing the projector.

Install a barrier for preventing human eyes from entering the RG3 area. For the barrier installation position, keep horizontal safety zone over 1.5m from the RG3 area. In case to install the projector over head, keep over 3m distance at least between the floor surface and the RG3 area.


Operators shall control access to the beam within the hazard distance or install the product at the height that will prevent exposures of spectators' eyes within the hazard distance.

(IEC62471-5 First edition 2015)

#### (IEC62471:2006 (for USA))

Lon		RG3	Screen size(m)						
Len	5	HD(m)	Н	V					
NC-60LS12Z	Wide	5.0	4.2	2.2					
NG-00L3122	Tele	7.5	4.1	2.2					
NC-60LS14Z	Wide	5.5	3.9	2.1					
	Tele	8.0	3.9	2.1					
NC-60LS16Z	Wide	6.0	3.8	2.0					
NC-00L3102	Tele	9.5	3.8	2.0					
NC-60LS19Z	Wide	6.5	3.4	1.8					
NC-6015192	Tele	11.0	3.4	1.8					
NC-60LS24Z	Wide	9.0	3.8	2.0					
NU-00L5242	Tele	15.5	3.7	2.0					
NC-60LS39Z	Wide	12.9	3.3	1.7					
NC-00L5392	Tele	21.5	3.3	1.7					

		RG3	Screen	Screen size(m)				
Len	S	HD(m)	н	V	EHv			
NC-60LS12Z	Wide	5.0	4.2	2.2	2.8			
NG-00L3122	Tele	7.5	4.1	2.2	6.3			
NC-60LS14Z	Wide	5.5	3.9	2.1	3.4			
NG-00L3142	Tele	8.0	3.9	2.1	7.2			
NC-60LS16Z	Wide	6.0	3.8	2.0	3.1			
NC-00L3102	Tele	9.5	3.8	2.0	7.9			
NC-60LS19Z	Wide	6.5	3.4	1.8	3.2			
NC-6015192	Tele	11.0	3.4	1.8	9.4			
	Wide	9.0	3.8	2.0	5.9			
NC-60LS24Z	Tele	15.5	3.7	2.0	15.7			
NC-60LS39Z	Wide	12.9	3.3	1.7	7.7			
NC-00L5392	Tele	21.5	3.3	1.7	21.4			

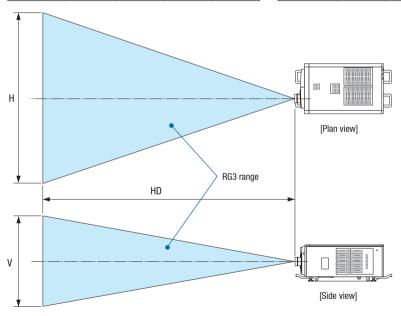

\* If lens shift is utilized, please consider the shift of projected image according to the volume of lens shift.

# 

#### Please heed all precaution for safety.

#### To install the projector

- For planning the layout of the projector, make sure to take safety measures instructed on the installation manual.
- In order to refuse danger, install either a wall outlet within easy reach for pulling out the power plug in emergency or a device as a breaker to shut down the power supply to the projector.
- Take safety measures preventing human eyes from entering the RG3 area.
- Considering the installation place, select an appropriate lens and secure safety zone that is determined for each lens. For operation on the powered projector as light adjustment, make sure appropriate safety measures have been taken.
- Check the validity of taken security measures if appropriate safety zone based on the installed lens is secured. Periodically check the validity and keep these results.
- Educate the administrator of the projector (operators) about safety before starting to operate the projector.

#### To use the projector

- Instruct the administrator of the projector (operators) to perform inspections before powering on the projector. (Including the safety check against emitted light by the projector)
- Instruct the administrator of the projector (operators) to be in circumstances able to control the projector whenever the projector is powered on for an emergency.
- Instruct the administrator of the projector (operators) to keep the installation manual, user's manual and inspection records to a place where they can take these documents out easily.
- Instruct them to clarify if the projector is conformed to standards of each country and region.

# **Table of Contents**

Important Information	2
1. What's in the Box? and the Names of the Projector Parts	14
1-1. Features	14
1-2. What's in the Box?	16
1-3. Names of the Projector Parts	17
2. Installation and Connection	23
2-1. Steps for setting up and connecting	23
2-2. Connecting the Power Cable	24
2-3. Connecting the image input terminals	29
2-4. Connecting the various control terminal	29
3. Projection of Images (Basic Operation)	30
3-1. Steps of projecting images	30
3-2. Turning your projector on	31
3-3. Selecting the title of input signal	33
3-4. Adjusting the position and the size of projected screen	34
3-5. Preventing misoperations	38
3-6. Turning on/off the light with the projector turned on	
3-7. Turning your projector off	40
4. Using Menus	42
4-1. Basic operation with adjustment menus	42
4-2. Table of adjustment menus	47
4-3. Title Select	49
4-4. Configuration	50
4-5. Title Setup	52
4-6. Information	52
5. Maintenance of Your Projector	56
5-1. Cleaning the Cabinet	56
5-2. Cleaning the Lens	57
5-3. Cleaning the Air Filters	57

6. Appendix	60
6-1. Troubleshooting	60
6-2. Indicator display list	61
6-3. Operation using an HTTP browser	64
6-4. Writing of the log file (Save Information)	66
6-5. Outline Drawing	69
6-6. Specifications	70
6-7. Pin Assignment and Functions of Terminal	71
6-8. Related products list	

# **1.** What's in the Box? and the Names of the Projector Parts

# 1-1. Features

#### DLP Cinema® projector

Complies with the strict projection standards defined by the Digital Cinema Initiatives (DCI) industry group in the United States using leading imaging technology of NEC. It also supports 3D projection and high frame rates (HFR).

#### • Employs a long life laser light source

The projector employs a newly developed laser light source offering excellent reliability and redundancy. Since the laser light source has a long life (approx. 30,000 hours), this delivers low cost operation by removing the need for maintenance such as replacing and adjusting the light module over extended periods of time. Furthermore, it reduces the risk of the light source suddenly shutting off and leaving a black screen.

#### Delivers reduced installation space and increased freedom through a more compact and lightweight body

The use of a 0.98" DLP cinema chip together with integration of the light module into the projector main unit both delivers a reduced installation area as well as improving the degree of freedom of installation, such as removing the need to connect to external ventilation ducting and supporting both pedestal-mounted and ceiling-suspended installation. A wide variety of optional lenses (sold separately) are also available for the projector in order to support a wide variety of installation methods (a lens is not mounted when the projector is shipped from the factory).

#### · Equipped with easy to use functions

(1) Lens memory function and light memory function that can be operated with one touch.

The projector is equipped with a lens memory function that can save the zoom position and shift position of the lens and a light memory function that can save the brightness setting separately for each input signal. This makes it possible to project using preconfigured settings simply by selecting the signal when projecting multiple different input signals each with different screen size and brightness settings (Refer to "6-8. Related products list" (page 78) for details on the lenses that support the lens memory function).

(2) Built-in automatic adjustment function that makes the brightness and color of the light source uniform Degradation of brightness and variations in color that occur as the light source is used for longer periods of time are kept to a minimum (the period over which variations in brightness can be limited varies depending on the brightness setting).

# (3) Frequently used titles can be registered in preset buttons

The projector has been equipped with 8 preset buttons that make it easy to select registered title (input signal). To this projector, 100 titles at most can be registered (input signal registration). Among the registered titles, any 16 titles can be assigned to the preset buttons.

(4) You can operate and configure the projector via a network from a PC You can operate and configure the projector via a network from a PC by using the separately supplied software Digital Cinema Communicator (DCC) for S2.

#### • Excellent dust-proof performance

A circulating cooling system is used to cool the optical components. The system converts warm air into cold air and circulates it inside a sealed structure, so external air does not come into contact with the optical components. This prevents dust and dirt from getting on the optical components, maintaining brightness.

\* Note that dust and dirt cannot be completely shut out.


#### · Reduced running cost thanks to the use of metal filters

The filters are made of metal, so they can be used repeatedly and do not have to be replaced when performing periodic cleaning. This not only reduces running costs, but also contributes to preserving the environment since no spent filters are discarded.

# 1-2. What's in the Box?

Check the content of the accessories.

# 1-2-1. Projector

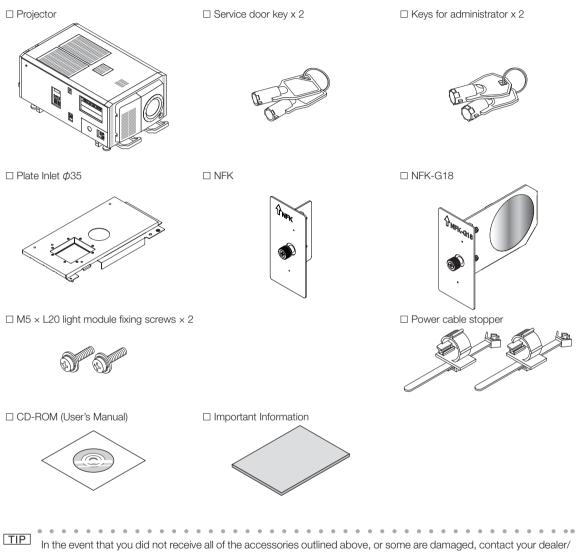


distributor.

Differs slightly from the drawings in this manual, but there is no problem in actual use.

# 1-3. Names of the Projector Parts

## 1-3-1. Front of the projector

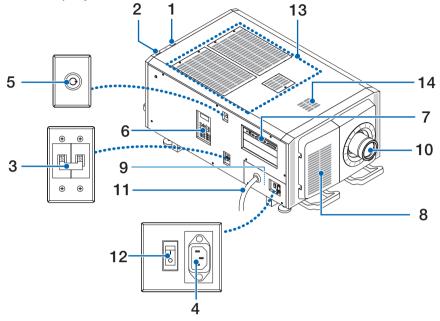

#### 1. LIGHT status indicator

Displays the status of the light source. The indicators turn on when the light source is on and turn off when the light source is off (See page 63).

#### 2. SYSTEM status indicator

These indicate the status of the projector. When the projector is operating normally, these light/blink in green or orange. When an error occurs, they light/blink in red. When an error occurs, check the contents of the display on the LCD screen. (See page 63)

#### 3. Light power switch

While AC power is being supplied, set the projector power switch and light power switch to ON position, then your projector will enter a standby state.

#### 4. AC input

Connects to the AC power cable. The AC power cable is not an accessory. Consult with your dealer/distributor about the AC power cable.

#### 5. Switch for administrator

The projector can be operated normally by inserting the administrator key horizontally and turning it clockwise to the vertical position.

At this time, the administrator key cannot be removed. The projector will not function unless the administrator key is inserted.

#### 6. Control panel

On the control panel, power to your projector is turned on or off, titles are selected, and various adjustments are made of projected screen. (See page 21)

#### 7. Connection terminals

Various image signal cable are to be connected here. (See page 20)

You can expand signal input terminals by installing the optional board.

Contact your dealer/distributor for more information on separately sold optional products.

#### 8. Air inlet

The air inlet for cooling inside the projector. Do not cover.

Air filters are provided on the air intakes to prevent dust from entering the projector.

#### 9. Remote interlock connector (inside the main unit's side panel)

This port is for safely using the laser in this device. It is used to externally control the laser illumination in the projector. Consult with your dealer/distributor about using this.

#### 10. Lens (optional)

Images are projected from the lens. Request your dealer/distributor to install or replace the lens.

#### 11. AC power cord

This cord supplies AC power to the projector. Please contact your dealer/distributor for connection of the AC power cord.

#### 12. Projector power switch

When the light power switch and projector power switch are turned on with AC power supplied, the projector is set to the standby mode.

#### 13. Air intake


These are air intake ports for introducing external air to reduce the temperature inside the projector. Do not block the port. Air filters are provided on the air intakes to prevent dust from entering the projector.

#### 14. Exhaust port

The heat inside the projector is expelled from here. Do not block the port.

**NOTE** Do not cover the air inlets and outlet while the projector is in operation. Insufficient ventilation leads to a rise of the internal temperature and may cause a fire or malfunction.

## 1-3-2. Rear of the projector

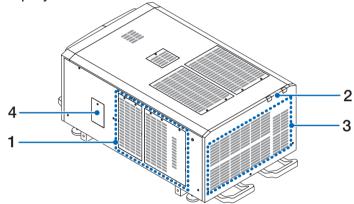

#### 1. Air inlet

The air inlet for cooling inside the projector. Do not cover.

#### 2. Buzzer (inside rear of projector)

The buzzer rings when the power is turned on or an error has occurred.

#### 3. Air outlet


The air outlet to exhaust heat inside the projector. Do not cover.

#### Notch filter cover

Remove the cover when installing the notch filter. Contact your dealer/distributor for details on replacement notch filters.

**NOTE** Do not cover the air inlets and outlet while the projector is in operation. Insufficient ventilation leads to a rise of the internal temperature and may cause a fire or malfunction.

# 1-3-3. Bottom of the projector

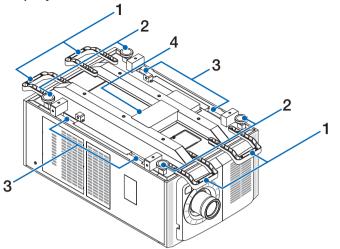

#### 1. Handle (4 locations)

Handles for moving the projector.

#### 2. Level adjusters (in 4 positions)

In the ordinary installation, you can adjust the projector inclination at 4 positions.


#### 3. Grips

These grips are used when moving the projector.

#### 4. Exhaust port

The heat inside the projector is expelled from here. Do not block the port.

## 1-3-4. Connection terminals

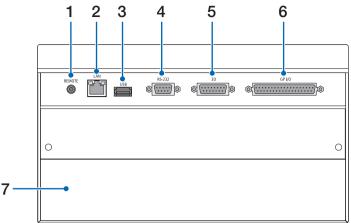

### 1. Service terminal (REMOTE) (Stereo mini)

This terminal is used for service purpose only.

#### 2. Ethernet port (LAN) (RJ-45)

The port for interfacing with an image signal server or controlling the projector from a PC via a network. Connect the projector and the PC with a commercially available Ethernet cable (10/100/1000Base-T).

## 3. USB port (USB) (type A)

The port for the projector maintenance.

#### 4. PC control terminal (RS-232) (D-sub 9P)

The terminal for operating the projector from a PC via an RS-232C or for service personnel to set data for the projector. Connect the projector and the PC with a commercially available RS-232C straight cable.

#### 5. 3D terminal (3D) (D-sub 15P)

The terminal for connecting a 3D image system to the projector. (See page 77)


#### 6. External control terminal (GP I/O) (D-sub 37P)

The terminal for externally controlling the projector or connecting a 3D image system to the projector. (See page 72)

#### 7. Slot

The slot is used for an image media block (IMB). Contact your dealer/distributor for an installation of IMB. Refer to the IMB instruction manual for details on IMB.

## 1-3-5. Control panel

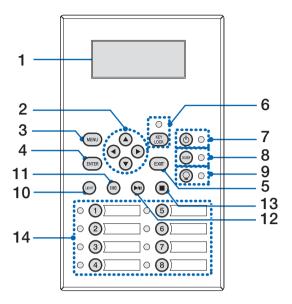

#### 1. LCD screen

The LCD screen displays menus and setting values for the projector operations.

#### 2. ▲/▼/◀/► (UP/DOWN/LEFT/RIGHT) buttons

Press these buttons to select a menu item while a menu is displayed.

#### 3. MENU button

Press this button to display the menu for various settings and adjustments. (See page 47)

#### ENTER button

Press this button to select the menu item.

#### 5. EXIT button

Press this button to return to the previous menu item.

#### 6. KEY LOCK button

Press this button to lock (KEY LOCK) the buttons on the control panel. Buttons on the control panel do not function while KEY LOCK is on.

Pressing the KEY LOCK button for one second or longer while KEY LOCK is off locks the buttons.

Pressing the KEY LOCK button for one second or longer while KEY LOCK is on unlocks the buttons. (See page 38)

NOTE KEY LOCK becomes automatically on if no control panel operation takes place in the standby state for 30 seconds by default. (See page 38)

#### 7. POWER button

Press this button for more than three seconds to turn on or off (standby) the projector. (See page 62) In order to start up the projector, turn on the main power switch for the projector to set the projector in the standby state. (See page 31)

#### 8. DOUSER button

Press this button to open and close the douser. (See page 62)

#### 9. LIGHT ON/OFF button

Press this button for five seconds or longer to turn on or off the light source while the projector is on. (See page 39)

#### 10. LIGHT button

Press this button to display the light source adjustment menu. (See page 37)

#### 11.IMB button (planned to be supported in a future update)

This button is operable when the media block is installed in the projector. Press this button to display the operation menu of the media block.

#### 12. Play/pause button (planned to be supported in a future update)

This button is operable when the media block is installed in the projector. Press this button to play or pause the image contents.

## 13. Stop button (planned to be supported in a future update)

This button is operable when the media block is installed in the projector.

Press this button to stop playing the image contents.

#### 14. Preset buttons

Press the preset button to select a title (input signal) assigned to each button. Up to 100 titles (input signals) can be registered to this projector, and any 16 titles from them can be assigned to the preset button. Please request your dealer to register and change the titles of the buttons as required.

The preset button indicators show their assigned title or selection status. (See page 61)

**TIP** To select a title allocated to one of the preset buttons, use the following procedure.

• To select a title allocated to one of "Preset Button1" to "Preset Button8"

Press the button which corresponds to the number of the preset button (button <1> to <8>).

- Press the <1> button to select the "Preset Button1".
- Press the <8> button to select the "Preset Button8".

• To select a title allocated to one of "Preset Button9" to "Preset Button16"

- Press the preset button (button <1> to <8>) while holding down the UP button.
- Press the <1> button while holding down the UP button to select the "Preset Button9".

- Press the <8> button while holding down the UP button to select the "Preset Button16".

# **2.** Installation and Connection

# 2-1. Steps for setting up and connecting

Use the following steps for setting up your projector:

• Step 1

Setup the screen and projector. (Contact your dealer to carry out the setup.)

Step 2

Connect the power cable to the projector. (See page 24)

Step 3

Connect cables to the image input terminals. (See page 29)

Connect cables to the various control terminals. (See page 29)

# 2-2. Connecting the Power Cable

Consult your dealer for installing the power cable to the projector.

If AC power is supplied to the projector and light with one power cable (C1 connection), it is not necessary to connect the cable to the projector power supply.

The power cable is not included with the projector. Use a power cable that meets the standards and power supply voltage of the country where you are using the projector. Ask your dealer for the power cable to select and purchase.


# 🚹 WARNING

- Consult your dealer for installing the power cable to the projector.
   DO NOT install the power cable by yourself. Doing so may equipe a fi
- DO NOT install the power cable by yourself. Doing so may cause a fire or electric shock.Before connecting the power cables, check that the projector power switch and light power switch of the projector is turned
- off. Implement the connection with AC power shut off.
- Be sure to ground the equipment to ensure safety. Use a power cable that meets the standards and power supply voltage of the country where you are using the projector, and always connect the equipment to the ground. If the ground is not connected, it may cause electrical shocks.
- When connecting the power cable plugs to the AC IN and the electrical outlet, securely insert the plugs all the way in.
- For C2 connection, be sure to install the power cord stopper. If the connection between the power cable plug and the electrical outlet is loose, the plug area may generate heat, causing burns and accidents.



## 1 Connect the AC power supply cable.

Connect the AC power supply cable to the projector.

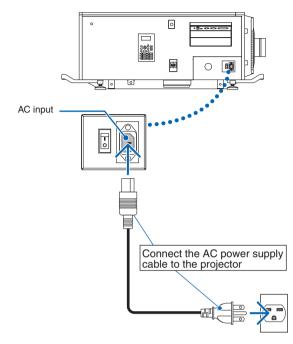

#### **2** Connect the power plug to the electrical outlet.

This completes the connection of the AC power supply cable.


#### Attaching the power cable stopper

To prevent the power cable from accidently removing from the AC IN of the projector, attach the supplied power cable stopper to clamp the power cable.

# 


- To prevent the power cable from coming loose, make sure that all the prongs of the power cable are fully inserted into the AC IN terminal of the projector before using the power cable stopper to fix the power cable. A loose contact of the power cable may cause a fire or electric shock.
- Do not bundle the power cable. Doing this could cause heat or a fire.
- **NOTE** Do not clamp the power cable with other cables. Doing so can generate noise, which can affect adversely the signal cable.
  - Be careful not to insert the band inversely. Once the band is attached, it cannot be removed from the slot.
- With the band of the clamper unit facing the power supply cord, line up the tip of the power supply cord stopper with the mounting hole in the projector body and press in.

Attach the power cord stopper on the opposite side in the same way.

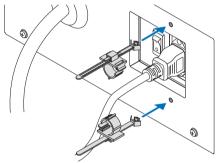


**2** Pass the band through the slits in the power cord stoppers.

Use the two bands to wrap the power cord from the left and right sides.

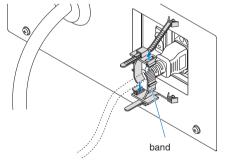


3 Slide the clamper unit to the base of the power cord.

The position of the clamper unit can be adjusted by pulling the tab in the direction of the arrow. After adjusting the position of the clamper unit, release the tab to fix the clamper unit in place.

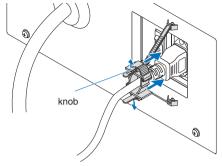

## 4 Pull the band to fasten the power cord.


The position of the band can be adjusted by pulling the tab in the direction of the arrow. Pull the upper and lower sections of the band in a well-balanced manner. After adjusting the position of the band, release the tab to fix the band in place.

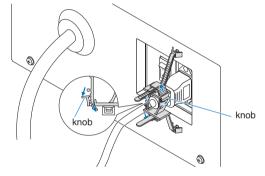

This completes the attachment of the power cable stopper.

#### Removing the power cable from the power cable stopper

Pull the knob of each clamper to remove the two bands.

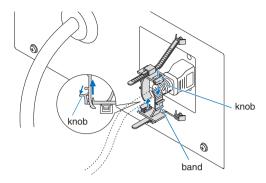

## 

The projector may become hot temporarily when the power is turned off or if the AC power is disconnected while the projector is projecting. Take care when handling the projector.

# 2-3. Connecting the image input terminals


The video input ports that can be used with the IMB are as follows. Refer to the instruction manual of the IMB for details on connecting the video input ports with external equipment.

NP-90MS02	HDMI input port	x 1
	3G SDI input port	x 2

# 2-4. Connecting the various control terminal

For control, your projector comes with such ports as the PC control terminal and the Ethernet port (RJ-45).

- PC control terminal (RS-232) ------- Use this terminal when controlling the projector in serial connection from a PC.
- LAN port (LAN)------ Use this port when controlling the projector in LAN connection from a PC.

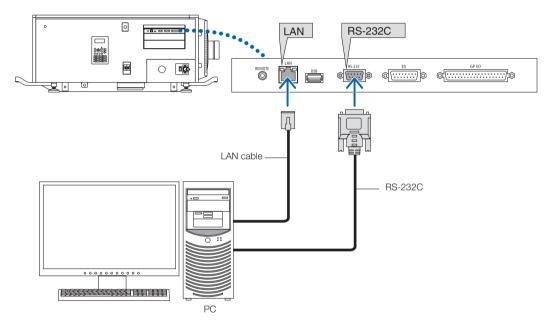

# **3.** Projection of Images (Basic Operation)

# 3-1. Steps of projecting images

#### • Step 1

Turn on the power to the projector. (See page 31)

#### Step 2

Select the title of input signal. (See page 33)

Step 3

Adjust the position and size of the projected screen. (See page 34)

Step 4

Turn off the power to the projector. (See page 40)

# 3-2. Turning your projector on


Prepara	<ul><li>Connect the power cable to the projector (see page 24).</li><li>Supply AC power to the projector.</li></ul>
NOTE	<ul> <li>Turn off the main power switch to the projector when supplying or cutting AC power to the projector. Supplying or shutting down the AC power while the main power switch is on will damage the projector.</li> <li>Turning on and off the projector involves a two-step operation; the "main power switch" and the "POWER button".</li> <li>Turning power on. (See this page)</li> <li>Turn on the "main power switch" of the projector. Your projector is set in a standby state.</li> <li>If KEY LOCK is on, press the KEY LOCK button for one second or longer. KEY LOCK is off and buttons on the control panel become operable.</li> </ul>
	<ul> <li>[3] Press the POWER button three seconds or longer. Your projector is turn on.</li> <li>Turning power off. (See page 40)</li> <li>[1] Press the POWER button three seconds or longer. Your projector is set in a standby state.</li> </ul>

[2] Turn off the "main power switch" of the projector. Your projector is turned off.

**1** Remove the lens cap.


# 2 Insert the administrator key horizontally into the administrator switch and turn it clockwise to the vertical position.


The administrator key can no longer be removed. The projector will not function unless the administrator key is inserted.

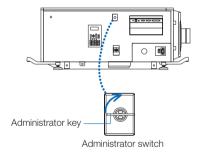

# 3 Turn on the power switches on the side of the projector in this order: first the light power switch (1) then the projector power switch (2).

A buzzer will ring on the projector. The POWER button indicator will blink green and the SYSTEM status indicator will light orange (standby state). KEY LOCK becomes automatically on if no control panel operation takes place in the standby state for 30 seconds by default. Buttons on the control panel do not function while KEY LOCK is on. (See page 38)

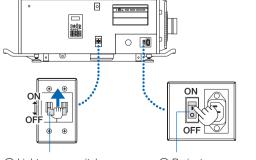


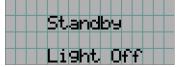

Projector power switch


#### 5 If KEY LOCK is on, press the KEY LOCK button for one second or longer.

KEY LOCK becomes off. The KEY LOCK button indicator turns off and buttons on the control panel become operable. (See page 38)

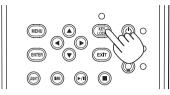

**6** Press the POWER button on the control panel of your projector three seconds or longer.

Your projector is turn on.

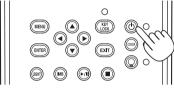



When the startup of the projector completes, the status of the POWER button, DOUSER button, LIGHT ON/OFF button, and preset button (button <1> to <8>) changes as follows.


POWER button	Lit green
DOUSER button	Initial settings: Off (douser is off)
LIGHT ON/OFF button	Initial settings: Blinking green (light source is off)
Button <1> to <8>	The preset button which was last selected is lit green

## Press the LIGHT ON/OFF button on the control panel for three seconds or longer.

The light source is turned on and the screen glows light about 15 seconds later.

The LIGHT ON/OFF button indicator blinks in cycles of 2 (and changes to steady green light 90 seconds later).

The douser is closed until the screen glows light (the DOUSER button indicator lights green). When the douser is open, the DOUSER button indicator turns off.

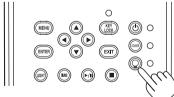

80% Title	∎Li9	ht	100H
Title			80%
		Title	
I 272-H I I		292-P	

NOTE

• While your projector is on, be sure to have the lens cap and glass protector cap removed from the lens. Otherwise, the lens cap or glass protector cap may get deformed due to a heat buildup.

- In the following instances, the power to your projector cannot be turned on even if you press the POWER button. - When the inside temperature is abnormally high. The protective function prevents power from turning on. Wait some time (until the projector inside cools down) and then turn on the power.
  - When the SYSTEM status indicator is blinking in red without the light source lighting up after power-on. Your projector may be in trouble. Check the error display on the LCD screen and contact your dealer/distributor for instructions.

# 3-3. Selecting the title of input signal

This projector allows you to select pre-registered title (input signal) using the preset buttons on the control panel (up to 16 titles). Request your dealer/distributor for details on registering and changing titles. This section explains the steps for selecting registered titles.



#### 2 Press the MENU button.



3 Press the LEFT/RIGHT button to display "Title Select" on the LCD screen.

At each press of the LEFT/RIGHT buttons, the display will cycle as "Title Select"  $\leftrightarrow$  "Configuration"  $\leftrightarrow$  "(Title Setup)"



1	Τ	i	t	1	e	5	e	1	e	C	t		
													T



4 Press the DOWN button.

The title of the input signal is displayed.

• When you have made a wrong selection, press the UP button. A return will be made to the previous menu.



5 Press the LEFT/RIGHT buttons to display "Title of Signal to be Projected" on the LCD screen.

## 6 Press the ENTER button.

The title of the signal to be projected is selected.

• The (\*) mark on the LCD indicates that this is the currently selected item.




# 3-4. Adjusting the position and the size of projected screen

## 3-4-1. Displaying the test pattern

Press the MENU button, or select a test pattern from preset buttons (button <1> to <8>).

If you register the test patterns to the preset buttons (<1> to <8> buttons), select the test pattern according to "3-3. Selecting the title of input signal (See page 33)".

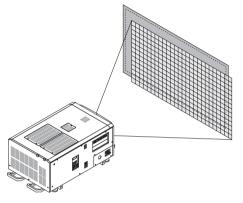

**2** Press the LEFT/RIGHT button to display "Title Select" on the LCD screen.

	Τ	i	t	1	e	5	e	1	e	C	t		Þ
M													T



3 Press the DOWN button.

The title of the input signal is displayed.



4 Press the LEFT/RIGHT button to display "TEST Pattern" on the LCD screen.

5 Press the DOWN button.

The LCD screen enters the mode where you can select a test pattern.



#### 6 Press the LEFT/RIGHT button.

This switches the test pattern name displayed on the LCD screen.

Display on the LCD the name of the test pattern to be projected, then press the ENTER button.

The test pattern is displayed.



To cancel the test pattern display, select the title of the signal to project or select the "OFF" test pattern.

Title	Se	lec	Ŀ.	
TEST	Pat	teri	n	
			(*	)▲
	OFF			ŀ


- 3-4-2. Adjusting the position of the projected screen (Lens shift)
- Press the MENU button.
- **2** Press the LEFT/RIGHT button to display "Configuration" on the LCD screen.
- 3 Press the DOWN button.
- Press the LEFT/RIGHT button to display "Lens Control" on the LCD screen.
- **5** Press the DOWN button.

The screen ("Lens Position") to adjust the position of the projected screen is displayed.

_e	n	S		P	0	s	i	t.	i	0	n	
					*							
			1		•		ŀ					
					Ŧ							

6 Press the UP/DOWN/LEFT/RIGHT button.

The position of the projected screen moves in the selected direction.

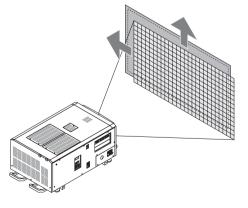



**7** Press the EXIT button when adjustment is complete.

The display will return to a menu one level above (where "Lens Control" is displayed).

## 3-4-3. Adjustment of the size (zoom) and focus of the projected screen

Press the MENU button.

- 2 Press the LEFT/RIGHT button to display "Configuration" on the LCD screen.
- 3 Press the DOWN button.
- 4 Press the LEFT/RIGHT button to display "Lens Control" on the LCD screen.

### 5 Press the DOWN button.

The screen ("Lens Position") to adjust the position of the projected screen is displayed.




## 6 Press the ENTER button.

The screen to adjust the size and focus of the projected screen is displayed. Press the ENTER button to switch the display between "Lens Position" and "Focus Zoom" adjustments.

Lens Position	ENTER button	Focus	Zoom
		<b>▲</b> +	- +
	←		

## Adjust the size and focus of the projected screen.

Press the UP/DOWN button to adjust the focus. Press the LEFT/RIGHT button to adjust the size.

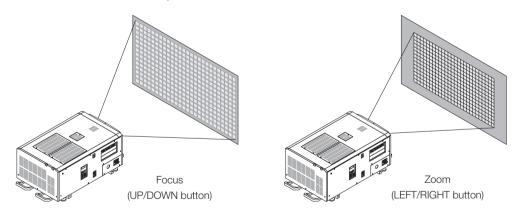

## B Press the EXIT button when adjustment is complete.


The display will return to a menu one level above (where "Lens Control" is displayed).

#### 3-4-4. Adjusting the brightness of the projected screen (Light output)

**NOTE** If the internal temperature within the projector rises due to the temperature in the room being high, the light output may be automatically reduced. This is called "Thermal Protection Mode (Down Light Power)". When the projector is in the Thermal Protection Mode, the picture brightness decreases slightly. To clear Thermal Protection Mode, adjust the light output. Consult with your dealer/distributor for details.


#### Press the LIGHT button.

The screen to adjust the light output is displayed.

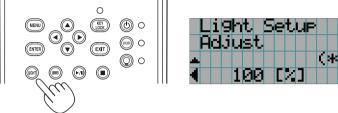



The specified adjustment value is applied.

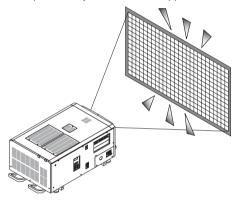

## 3-5. Preventing misoperations

Buttons on the control panel can be locked (KEY LOCK) to prevent misoperations. Buttons on the control panel do not function while KEY LOCK is on. KEY LOCK must be off to operate these buttons.


NOTE • KEY LOCK is automatically turned on in the following cases.

- When the projector has entered the standby state by turning on the main power switch of the projector while the AC power is supplied.
- When the projector has entered the standby state after turning off the power using the POWER button.
- The timing where KEY LOCK is turned on while the projector is in standby state depends on the "Auto Key Lock" setting in the adjustment menu.
  - When Auto Key Lock is enabled, KEY LOCK becomes automatically on if no control panel operation takes place in the standby state for 30 seconds. KEY LOCK becomes automatically on again even after KEY LOCK is turned off if no control panel operation takes place for 30 seconds.
  - When Auto Key Lock is disabled, KEY LOCK becomes automatically on when the projector enters the standby state; however, it stays off after KEY LOCK is turned off.

#### 3-5-1. KEY LOCK setting

#### • Press the KEY LOCK button on the control panel for one second or longer.

KEY LOCK becomes on. The KEY LOCK button indicator lights orange. When you press a button on the control panel of the projector while KEY LOCK is on, "Panel is Locked. (KEY LOCK)" is displayed, and the button will not function. (See page 43)

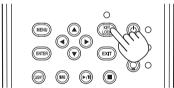


#### 3-5-2. Turning KEY LOCK off

• Press the KEY LOCK button for one second or longer while KEY LOCK is on. KEY LOCK becomes off. The KEY LOCK button indicator turns off.

# 3-6. Turning on/off the light with the projector turned on

#### 3-6-1. Turning off the light

• Press the LIGHT ON/OFF button on the control panel for three seconds or longer.

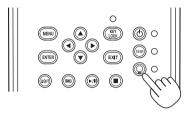

#### 3-6-2. Turning on the light


• Press the LIGHT ON/OFF button on the control panel for three seconds or longer.

## 3-7. Turning your projector off

#### Press the POWER button on the projector control panel for three seconds or longer.


The light is turned off, the POWER button indicator blinks green, and the STATUS indicator blinks orange (cooling state). The fan will continue to rotate while cooling, and the amount of time remaining for cooling is displayed on the LCD screen. The cooling-off time is 90 seconds.

When the cooling is finished, the POWER button indicator turns off and the status indicator lights orange (standby state). KEY LOCK becomes automatically on if no control panel operation takes place in the standby state for 30 seconds by default. Buttons on the control panel do not function while KEY LOCK is on. (See page 38)

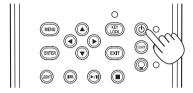




2 After the standby mode is set, turn off the projector's power switches in this order: first the projector power switch, then the light power switch.

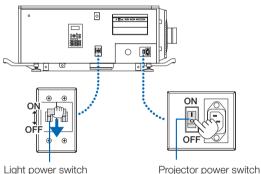

\_\_\_\_

3 Turn the administrator key counterclockwise to the horizontal position, then remove it.

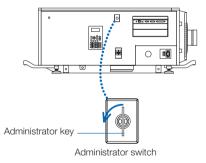

#### Shut off the AC power supply to the main unit from the circuit breaker, etc.

- **NOTE** In the following instances, do not turn off the main power switch or disconnect the AC power. Doing so can damage the projector.
  - While projecting images
  - While the fan is running after the power is turned off
    - While the projector is cooling down after the power was turned off.
      - When using the NP-90MS01 or NP-90MS02: 90 seconds
    - During IMB operation (when the projector is not in the standby mode)

# **4**. Using Menus

# 4-1. Basic operation with adjustment menus

To adjust the projector, display the menu on the LCD screen of the projector control panel.

#### 4-1-1. Screen display

The menu display screen is composed of a menu display field (the upper two lines) and a setting item display field (the bottom two lines).



- $\leftarrow$  Displays the main menu or submenus.
- $\leftarrow$  Displays submenus or selection items.
- $\leftarrow$  Displays settings and selection status.
- $\leftarrow$  Displays settings, selected items and information on selected menus.

The meanings of symbols in the menu display screen are outlined below.

<b>A</b>	Indicates that there is a menu of a higher level. Press the UP button to return to a menu one level above.
	Indicates that there is a selected item or menu at the same level. Press the LEFT/RIGHT button to display other selected items or menus.
	Indicates that there is a menu of a lower level. Press the DOWN button to display the menu one level below.
	Indicates that there are setting items of a higher or lower level. Press the UP button to return to a menu one level above. Press the DOWN button to display the setting item one level below.

When not displaying menus, the following screen is normally displayed.

#### When in standby

When the projector is in a standby state (the main power switch in on), the following is displayed.



#### When power is turned on


When the power is turned on, the following is displayed.

ILamp	182	100.	04E
	5H:		5HI
	Titl	e	
	IMB		

- $\leftarrow$  Displays the light mode and light output (%).
- $\leftarrow$  Displays the light usage time.
- $\leftarrow$  Displays the selected title.
- $\leftarrow$  Displays the selected video input port.


#### When the power is turned off

When you press the POWER button on the control panel of the projector for 3 or more seconds, the projector starts cooling. When cooling finishes, the projector enters the standby mode. The amount of time remaining for cooling is displayed as shown below during cooling.

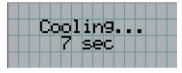

#### When a button is pressed while the key lock function is on

If a button on the control panel is pressed while the key lock function is on, the following is displayed and the button will not function.

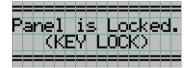

#### 4-1-2. Operating menus

Preparation: Turn your projector on. (See page 31)

Press the MENU button on the control panel of your projector.

The menu is displayed in the LCD screen.

<b>1</b> T	1	t.	1	e	5	e	1	e	C	t,		
•												T
	Π											

#### 2 Press the LEFT/RIGHT buttons to display "Information."

At each press of the LEFT/RIGHT buttons, the display will cycle as "Title Select"  $\leftrightarrow$  "Configuration"  $\leftrightarrow$  "(Title Setup)"  $\leftarrow \rightarrow$  "Information."

1	Ι	n	f	0	r	M	а	t	i	0	n	2		
-														T

#### 3 Press the DOWN button.

The submenu "Light" of "Information" is displayed.

The menu item can be selected by pressing the ENTER button instead of the DOWN button. To return to the previous state, press the UP button, or the EXIT button.

*	I	n	f	O	r	M	а	t.	i	O	n		*
		i	9	h	t								
Ŧ													•

#### Press the LEFT/RIGHT button to select the submenu "Version."

At each press of the LEFT/RIGHT button, the display will cycle as "Light"  $\leftrightarrow \rightarrow$  "Lens Type"  $\leftrightarrow \rightarrow$  "Preset Button"  $\leftarrow \rightarrow$  $"Usage" \longleftrightarrow "Error Code" \longleftrightarrow "Version" \longleftrightarrow "IP Address" \longleftrightarrow "Setup Date" \longleftrightarrow "Option Status."$ 

<b></b> ▲In	for	ma	tic	n	-
<b>4</b> ∪e	rsi	on			
•					-


#### 5 Press the DOWN button.

The submenu "System" another rank lower than "Version" is displayed.

<b>▲</b> Version	-
4System	
	-

#### 6 Press the DOWN button.

The submenu "BIOS" another rank lower than "Model" is displayed.

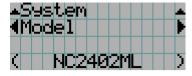

#### **7** Press the LEFT/RIGHT button to select the submenu "Release Package."

At each press of the LEFT/RIGHT button, the display will cycle as "Model"  $\leftarrow \rightarrow$  "Serial No."  $\leftarrow \rightarrow$  "Release Package"  $\leftarrow \rightarrow$  "Kernel"  $\leftarrow \rightarrow$  "U-Boot"  $\leftarrow \rightarrow$  "System Files"  $\leftarrow \rightarrow$  "CinemaFirmware"  $\leftarrow \rightarrow$  "Cinema Data"  $\leftarrow \rightarrow$  "ICP Firmware"  $\leftarrow \rightarrow$  "LD Interface"  $\leftarrow \rightarrow$  "LD Driver1"  $\leftarrow \rightarrow$  "LD Driver2"  $\leftarrow \rightarrow$  "LD Driver3"  $\leftarrow \rightarrow$  "LD Driver4"  $\leftarrow \rightarrow$  "LD Driver5"  $\leftarrow \rightarrow$  "LD Driver6"  $\leftarrow \rightarrow$  "LD Driver7"  $\leftarrow \rightarrow$  "LD Driver8"  $\leftarrow \rightarrow$  "LD Driver8"  $\leftarrow \rightarrow$  "LD Driver8"  $\leftarrow \rightarrow$  "LD Driver4"  $\leftarrow \rightarrow$  "LD Driver8"  $\leftarrow \rightarrow$  "LD Driver8"  $\leftarrow \rightarrow$  "LD Driver6"  $\leftarrow \rightarrow$  "LD Driver6


⊾Syst	em		<b>.</b>
<b>(</b> Rele	ase	Pack	a9e⊧
$\langle 1$	.00	.002	

#### 8 Press the UP button several times.

At each press of the UP button, the display will return to a menu one level above.

#### 4-1-3. How to enter alphanumeric characters

Alphanumeric characters are entered for items, such as the log file of the specified period is written to USB memory. (See page 66) Characters can be entered by pressing numeric buttons on the control panel on this projector.

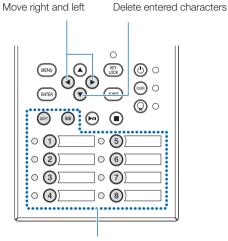

Enter characters

Characters can be entered by pressing each button as shown in the following table.

• To delete a character during entry, press the DOWN button.

#### [Example of Entry]

To enter "XGA" for example, use the following procedure:

- (1) Press the "8" button three times.  $V \rightarrow W \rightarrow X$
- (2) Press the RIGHT button.
- (3) Press the "3" button.
- XG
- (4) Press the RIGHT button.
- (5) Press the "1" button. XGA

Button	Entered character
1	$A \to B \to C \to 1 \to a \to b \to c \to ! \to 4$
2	$D \to E \to F \to 2 \to d \to e \to f \to " \to 4$
3	$ \begin{array}{c} G \to H \to I \to 3 \to g \to h \to i \to \# \to \\ \bigstar \end{array} $
4	$J \to K \to L \to 4 \to j \to k \to I \to \$ \to$
5	$  M \to N \to O \to 5 \to m \to n \to o \to \% \to $
6	$P \to Q \to R \to 6 \to p \to q \to r \to \& \to \clubsuit$
7	$S \to T \to U \to 7 \to s \to t \to u \to ' \to 4$
8	$V \to W \to X \to 8 \to v \to w \to x \to (\to $
LIGHT	$Y \to Z \to / \to 9 \to y \to z \to ? \to ) \to$
IMB	$\overset{*}{\longrightarrow}, \rightarrow . \rightarrow 0 \rightarrow ; \rightarrow : \rightarrow + \rightarrow - \rightarrow$

# 4-2. Table of adjustment menus

Menus in parentheses are menus for our service personnel. Normally, these menus cannot be used.

Main menu		Submenu	Description	Reference page
Title Select	"Title Memory Nam	e"	Selects the title of the signal to be projected.	49
	TEST Pattern		Selects the test pattern to be projected.	49
Configuration	Light Setup	Adjust	Adjusts light brightness.	50
	Lens Control	Lens Position	Adjusts the position of the projected screen.	50
		Focus Zoom	Adjusts the size and focus of the projected screen.	50
	Reset	(FactoryDefault)	Returns the settings to their default values. Selects between preset buttons and titles only, LAN settings only and all settings.	-
		Filter Cleaning	Initializes the air filter usage time (for confirming the filter cleaning time).	50
		(Fan Usage)	Initializes the usage time of the fan.	-
		(Light)	Initializes the usage time of the light source.	-
		(Phosphor)	Initializes the usage time of the phosphor.	-
		(Diffuser)	Initializes the usage time of the diffuser.	-
		(Pump)	Reset the pump usage time.	53
		(Douser Count)	Resets the number of times the douser has been used.	-
	(Setup)	Douser Setup	Sets the douser open/close state.	-
	(eetap)	Panel Key Lock	Locks the buttons on the projector's control panel so that they cannot be operated.	-
		Auto Key Lock	Enables or disables Auto Key Lock.	-
		3D Reference	Sets the signal input terminal for a 3D image system (3D terminal or GPI/O terminal). Sets the video input port for 3D video systems.	-
		Off Timer	Sets the time until the projector power is turned off automatically.	-
		Message	Sets the time to display the message indicating the light replacement cycle, air filter replacement cycle, and air filter cleaning cycle.	-
		Silent Mode	Selects whether to use the status indicator, buzzer, indicators on the control panel and backlight.	-
	Installation (Note)	(Option Slot)	Configures the device installed in slot (only when the projector is in standby mode).	-
		(Orientation)	Sets the projection method and cooling fan operating mode.	-
		Lens Type (Note)	This function cannot be used.	51
		Lens Calibrate (Note)	Performs calibration on lens that support the lens memory function (only when the projector power is turned on).	51
		Lens Center (Note)	Moves the lens shift position to the center (only when the projector power is turned on).	51
		(Baudrate)	Sets the PC control connector (RS-232) data transmission speed (bps).	-
		(Date/Time)	Sets the date and time on the projector.	-
		(Fan Speed Mode)	Sets the cooling fan operating mode.	-
		(Service)	(Only when the projector is in standby mode) This is used during shadow adjustment and lens mount adjustment (focus balance adjustment).	-
		(LD Calibrate)	Performs calibration of the light module when the light module has been replaced (only when the projector power is turned on).	-
	(Memory)	Light	The content of the selected light memory (light output power value) can be overwritten with the current settings.	-
		Lens	The content of the selected lens memory can be overwritten with the current settings.	-
(Title Setup)	Preset Button	Preset Button 1–16	Sets the title to be assigned to the preset buttons (<1> to <8> buttons).	52

#### 4. Using Menus

Main menu		Submenu	Description				
Information	Light	Light Output	Displays the light module's brightness (output) setting value.	52			
		Model	Displays the light module's model name.	52			
		S/N	Displays the serial number of the light module.	52			
	Lens Type		This function cannot be used.	-			
	Preset Button	Preset Button 1–16	Displays the titles which are assigned to the preset buttons (<1> to <8> buttons).	53			
	Usage		Displays information related to projector usage.	53			
	Error Code		Displays the currently occurring error.	53			
	Version	System	Displays the model name and various version information about the projector.	54			
		IMB	Displays the vendor name and version information about the media block (IMB).	54			
	IP Address	System	Displays the IP address of the projector.	54			
	Setup Date		Displays the date when the projector was set up (starting date of the warranty period).	55			
	Option Status		Displays the link status of the device mounted in slot and projector.	55			

(Note) Requires logging into the projector with Advanced User or higher privileges.


# 4-3. Title Select

#### 4-3-1. Title select (Title Memory)

Selects the title of the signal to be projected.

You can register up to 100 titles. You can also assign registered titles to the preset buttons (<1> to <8> buttons) on the projector's control panel and call them up directly using those buttons.

Request your dealer/distributor for details on registering and changing titles.

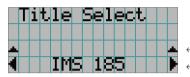

 $\leftarrow$  Displays the currently selected item with asterisk (\*).

 $\leftarrow$  Selects the title to be projected.

#### 4-3-2. Test Pattern

Selects the test pattern to be projected.



 $\leftarrow$  Displays the currently selected item with asterisk (\*).

 $\leftarrow$  Selects the test pattern to be projected.

OFF, Alignment, Cross Hatch, Convergence, Red, Green, Blue, White, Black, White 50% [IRE], H-Ramp, Logo, MCG CG-TEST

# 4-4. Configuration

Please request your dealer/distributor to perform the settings.

#### 4-4-1. Light Setup

#### Adjust

Adjusts the light output (brightness).



← Displays the current output power value (%) when the light rated output is 100%.

#### 4-4-2. Lens Control


Adjust the position, size, and focus of the projected screen.

Press the ENTER button to switch the display between "Lens Position" and "Focus Zoom" adjustments. Press the EXIT button to return to a menu one level above.

#### Lens Position

Adjusts the position of the projected screen.

The projected screen moves in the selected direction as you press the UP/DOWN/LEFT/RIGHT button.

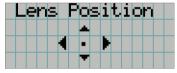

#### Focus Zoom

Adjusts the size (Zoom) and focus (Focus) of the projected screen. Press the UP/DOWN button to adjust the focus.

Press the LEFT/RIGHT button to adjust the size of the projected screen.



#### 4-4-3. Reset

This is used to reset the light and air filter usage times.

#### Filter Cleaning

Resets the air filter usage time (for confirming the filter cleaning time).

- [1] Press the ENTER button, the confirmation screen will appear.
- [2] Select "Yes" in the confirmation screen, and then press the ENTER button to reset the filter usage time.



 $\leftarrow$  Press the ENTER button to display the confirmation screen.


#### 4-4-4. Installation

#### Lens Type

This function cannot be used.

#### Lens Calibrate

Performs calibration on lenses that support the lens memory function. Once you have attached a lens that supports the lens memory function, always execute calibration. This menu item is available only when the projector power is turned on and you are logged into the projector with Advanced User or higher privileges.

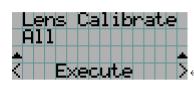


Press the ENTER button to execute calibration.

All	Calibrates the zoom, focus and lens shift position.
Zoom&Focus	Calibrates the zoom and focus.
Shift(H&V)	Calibrates the lens shift position.

#### Lens Center

To move the lens shift to the center position. The center position may slightly shift depending upon mounting conditions of the lens. This menu item is available only when the projector power is turned on and you are logged into the projector with Advanced User or higher privileges.

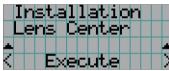

← Press the ENTER button to execute moving.

# 4-5. Title Setup


Sets the title to be assigned to the preset buttons (<1> to <8> buttons) (up to 16 titles). Request your dealer/distributor to perform the settings.

# 4-6. Information

Displays the hours of light use, the version information and error codes.

#### 4-6-1. Light

Displays the information of Light module.

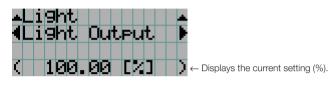

Light Output	Displays the light module's brightness (output) setting value.	
Model	Displays the light module's model name.	
S/N Displays the serial number of the light module.		

#### 4-6-2. Lens Type

This function cannot be used.

#### 4-6-3. Preset Button

Sets the title to be assigned to the preset buttons (<1> to <8> buttons) on the projector's control panel.



 $\leftarrow$  Selects the preset button number whose contents you want to display.


 $\leftarrow$  Displays the assigned title numbers.

 $\leftarrow$  Displays the registered names of the assigned titles.

TIP To select a title allocated to one of "Preset Button9" to "Preset Button16", press the preset button while holding down the UP button. For example, to select the title allocated to "Preset Button9", press the <1> button while holding down the UP button.

#### 4-6-4. Usage

Displays information related to the projector usage, such as the usage time of the projector, light, air filters, and fan, and information about the light replacement cycle.

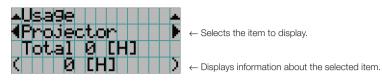

ProjectorDisplays the usage time of the projector.ProjectorThe upper row shows the usage time including standby mode while the lower row the usage time not including standby mode.		
Filter Cleaning	Displays the air filter usage time.	
Fan Usage	Displays the fan usage time.	
Light Usage	Displays the usage time of the light source.	
Phosphor	Displays the usage time of the phosphor.	
Diffuser	Displays the diffuser usage time.	
Pump	Displays the pump usage time.	
Douser Count	Displays the number of times the douser has been used.	

#### 4-6-5. Error Code

Displays the error code when an error occurs.




When multiple errors occur, you can display them by pressing the LEFT/RIGHT buttons.

#### 4-6-6. Version

Displays version information about the projector, optional boards, and IMB.


#### System

Displays the version information of the projector.

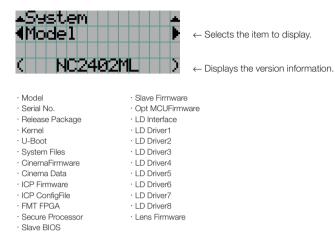


#### IMB

Displays the vendor name and version information about the media block (IMB). When the projector is in standby mode, the vendor name is blank and the version information displays "---".

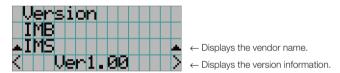

#### 4-6-7. IP Address

Displays the IP address set in the projector.

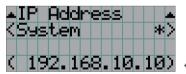


 $\leftarrow$  Displays the IP address.

System	1	Displays the IP address set for the projector (System).
--------	---	---------------------------------------------------------

#### 4-6-8. Setup Date

Displays the date when the projector was set up (starting date of the warranty period).

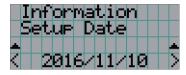

← Displays the date when the projector was set up (starting date of the warranty period).

#### 4-6-9. Option Status

Displays the link status of the device mounted in slot on the projector. The device name is displayed in () when the projector is in standby or when connection to the device cannot be confirmed.



- ← Displays the link status of the device in slot.
  - NP-90MS: NP-90MS02
  - <Vendor Name> IMB: Media block
  - No Board: No device mounted

# **5.** Maintenance of Your Projector

**NOTE** Please request your dealer to perform cleaning of the projector inside.

# 5-1. Cleaning the Cabinet

#### 

Please do not use a spray containing flammable gas to remove dust attached to the cabinet, etc. Doing so may result in fires.

Be sure to always check that the AC power supply of the projector is disconnected before carrying out maintenance of the projector.

• Wipe with a dry, soft cloth without nap.

When the cabinet is excessively dirty, wipe with cloth well wrung after being dampened with a neutral detergent diluted with water and then finish up with a dry cloth.

When you use a chemical dust cloth, follow the instructions in the manual attached to it.

- Do not use a solvent, such as thinner or benzene. The coating may deteriorate or peel off.
- When removing dust on the ventilation opening, suck it off using an adapter with a brush on a vacuum cleaner. Never allow the cleaner without an adapter to come into direct contact or use a nozzles adapter in cleaning.
- Clean the ventilation opening at regular intervals. Dust, if allowed to accumulate there, may cause heating inside, which leads to functional trouble. The interval, which can vary with the location of your projector, is about 100 hours.
- Do not damage the cabinet by scratching it or allowing hard objects to hit it. This can scratch the projector.
- Consult your dealer/distributor about cleaning the inside of the projector.
- **NOTE** Do not allow insecticide or other volatile liquid to splash on the cabinet, lens or screen. Also, do not allow any rubber or plastic object to remain in contact with the cabinet for a long time. The coating may deteriorate or peel off.

### 5-2. Cleaning the Lens

Clean the lens the same way as with camera lens (using a commercially available camera blower or cleaning paper for glasses). Take care not to damage the lens when cleaning.

#### 📐 WARNING

- Do not look into the light module while the projector is ON. Strong light is emitted from the projector and visual impairment could result.
- Please do not use a spray containing flammable gas to remove dust attached to the lens, etc. Doing so may result in fires.

# 5-3. Cleaning the Air Filters

Air filters are provided on the projector's air intakes to prevent dust from entering the projector. Clean the air filters regularly to maintain the performance of the projector.


• The usage time of the air filters can be checked at "Information" - "Usage" (page 52) on the adjustments menu.

#### 🚹 WARNING

- If dust accumulates on the air filters, air intake to the projector will be insufficient and the internal temperature will rise, leading to fire or malfunction.
- Do not use a flammable gas spray to remove dust from the filters. Doing so may lead to fire.


#### 🔨 CAUTION

• Before cleaning the air filters, turn off the power, wait for the cooling fan to come to a complete stop, turn off the projector power switch and the light power switch, interrupt the AC power supply, and make sure that the projector has cooled sufficiently. Removing the filter units during operation may cause burns or electric shock if the inside is touched.

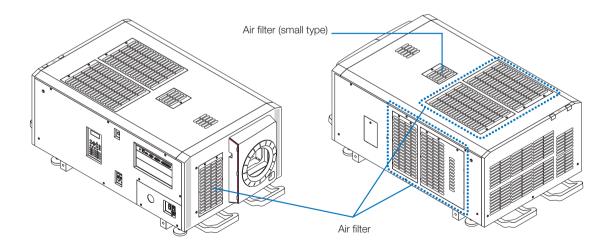

#### 5. Maintenance of Your Projector

To remove the front air filter, pull the filter cover in the direction of the arrow. To install, insert the catches in the filter cover into the grooves in the lens cover, close the cover, then push it in.

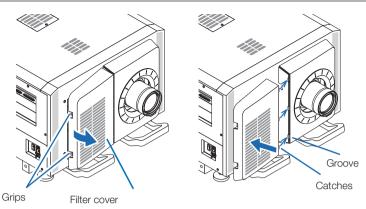

The illustration in this explanation shows how to clean the air filters on the top panel. Clean the other filters in the same way as these air filters (small type).

#### Remove the air filter.

Turn the 2 screws counterclockwise until they are disengaged, then lift the air filter a little to remove it.


- The screws do not come off.
- The number of screws differs depending on the air filter.

#### 2 Remove the metal filter.

**Note:** The metal filter does not come off the small type air filters.

See "For small type air filters" on the next page. (1) Turn the air filter upside down.

- (2) Slowly bend the metal filter a little to unlatch the three catches from the grooves in the panel one by one. Note: Bending the metal filter too much could damage it beyond repair. Be very careful to only bend the metal filters a little when removing them.
- (3) Remove the metal filter from the panel.

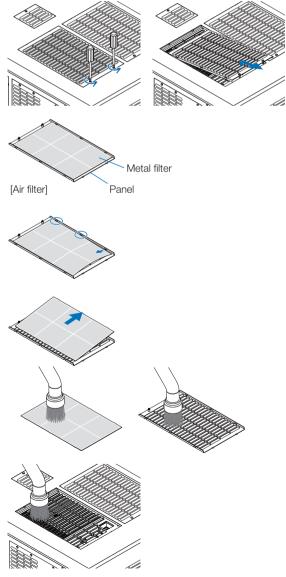

#### 3 Use a vacuum cleaner to remove the dust.

Use a vacuum cleaner to remove the dust from both sides of the metal filter, the projector and the panel. **Note:** Do not wash the metal filter in water. Doing so will cause the dust to clog the holes, reducing intake performance.

#### 4 Attach the metal filter.

- (1) Insert the three catches on the metal filter into the grooves in the panel.
- (2) Bend the metal filter a little and insert the three projecting parts on the opposite side into the grooves in the panel, one by one.

**Note:** Bending the metal filter too strongly could damage it, rendering it unusable. Be very careful to only bend the metal filters a little when attaching them.

#### 5 Attach the air filter to the projector.

- (1) Insert the catches in the air filter into the grooves in the projector.
- (2) Turn the two screws clockwise to tighten them. The number of screws differs depending on the air filter.

This completes cleaning of one of the air filters. Clean the other air filters in the same way.

#### 6 Reset the air filter usage time.

See "Filter Cleaning" under "Reset" on Page 50.

#### For small type air filters


 Using the procedure in step 1, turn one screw counterclockwise until it is disengaged, then lift the air filter (small type) a little to remove it.

The screws do not come off.


#### 2. Use a vacuum cleaner to remove the dust.

Use a vacuum cleaner to remove the dust from both the front and back sides of the filter and from the projector. **Note:** 


- Do not remove the metal filter. Doing so may bend it, rendering it unusable.
- Do not wash the air filter in water. Doing so will cause the dust to clog the holes, reducing intake performance.
- 3. Using the procedure in step **5**, turn one screw clockwise to tighten it.
- 4. Perform the operation in step 6.

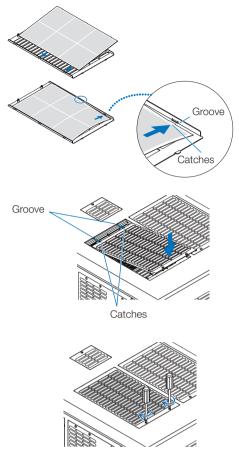

Air filter (small type)

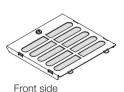



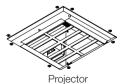

# **6.** Appendix

# 6-1. Troubleshooting


Before asking for repair, please check your connection, settings and operation once again. If the trouble cannot be corrected, please contact your dealer/distributor for instructions or repair.

#### 6-1-1. Problems and where to check

Problem	Check these items	
The projector cannot be turned on.	Check to see if AC power is supplied to the projector.	
	Are the projector power switch and the light power switch turned on?	
	Check to see whether the panel key lock function is activated. If so, the main unit's control buttons are locked and do not work.	
	Is the temperature inside the projector too high? When the inside temperature is too high, the protective function does not allow your projector to be turned on. Wait some time and then turn it on.	
	Is the administrator key inserted? The projector will not function unless the administrator key is inserted.	
The image cannot be projected.	Check to see if the connected input has been selected.	
	Check to see if a cable is properly connected to the input terminal.	
	Check to see whether the douser is closed.	
	Check to see if the settings are all adjusted properly.	
The image is distorted.	Check to see if the protractor is properly set up.	
The image is blurred.	Make certain that the lens is properly focused.	
	Check to see if the screen and a projector are installed at correct angles.	
	The projection distance may be larger than the focusing range.	
	See if the lens and other parts have condensation on them. If the projector is turned on in a warm place after storage in a cold place, the lens and other optical components inside may develop condensation. In such a case, please wait several minutes until the condensation disappears.	
Video image is disturbed.	Check whether the signal cable connected to the projector is disconnected.	
The STATUS indicator blinks in red.	Your projector may have trouble. Please contact your dealer/distributor for instructions.	
An error code is displayed.	Please contact your dealer/distributor for instructions.	

# 6-2. Indicator display list

See the descriptions below when the buttons on the control panel or the STATUS indicator on the rear of the projector is lit or blinking. The projector also has a warning function that uses a buzzer.

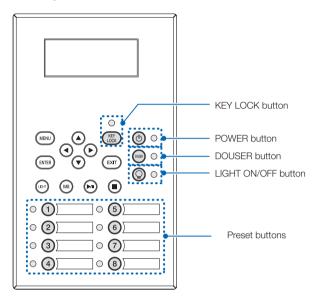

#### 6-2-1. Preset buttons

Indicator condition		Projector condition	Note
Off No title is assigned to the button		-	
Steady light		A title is assigned to the button.	-
Green		The title is being selected.	-
White		The title is not selected.	-

#### 6-2-2. KEY LOCK button

Indicator condition		Projector condition	Note
Off		The key lock is off.	-
Steady light Orange The key lock is on.		The key lock is on.	-

#### 6-2-3. POWER button

Indicato	or condition	Projector condition	Note
Off		The projector power supply is off.	-
Blinking light	Orange	While the projector software is starting	Wait for a moment.
Green (cycles of 1) (Note 1)		Preparing to turn power on/cooling fan rotating (State from turning the power off to entering standby mode).	Wait for a moment.
Green When the st (cycle of 3 seconds) (Note 2)		When the sleep timer is activated	-
Steady light	Green	The projector is turned on.	-
Orange		The projector is in standby.	-

(Note 1) Repeats 0.5 seconds on  $\rightarrow$  0.5 seconds off. (Note 2) Repeats 2.5 seconds on  $\rightarrow$  0.5 seconds off.


#### 6-2-4. DOUSER button

Indicator condition		Projector condition	Note
Steady light Green		The douser is closed.	-
Off		The douser is opened.	-

#### 6-2-5. LIGHT ON/OFF button

Indicator condition		Projector condition	Note
Off		The light is off	
Steady light	Green	The light is on.	-

#### 6-2-6. STATUS indicator

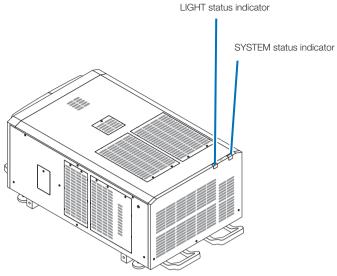

#### SYSTEM status indicator

In	ndicator condition	Projector condition	Note
Off		Main power is off.	-
Blinking light Green		The projector is getting ready to turn on. The douser is closed. The light is off.	Wait for a moment.
	Orange	The projector is cooling down.	Wait for a moment.
	Red (With buzzer)	Safety problem, error.	An error message is displayed in the
Red (Without buzzer)		Error with possible image project under certain conditions.	LCD screen. Check the content of the error.
Steady light	Green	The projector is turned on.	-
	Orange	The projector is in standby.	-
	Red	Error at a level with not affect on projection.	An error message is displayed in the LCD screen. Check the content of the error.

#### LIGHT status indicator

Indicator condition	Projector condition	Note
Off	The light source is off.	-
Steady light	The light source is on.	-

# 6-3. Operation using an HTTP browser

#### 6-3-1. Overview

The use of HTTP server functions will allow control of the projector from a web browser. Please be sure to use "Microsoft Internet Explorer 4.x" or a higher version for the web browser.

This device uses "JavaScript" and "Cookies" and the browser should be set to accept these functions. The setting method will vary depending on the version of the browser. Please refer to the help files and the other information provided in your software.

**NOTE** The display's or button's response can be slowed down or operation may not be accepted depending on the settings of your network.

Should this happen, consult your network administrator.

The projector may not respond if its buttons are repeatedly pressed in rapid intervals. Should this happen, wait a moment and repeat.

Access is gained to the HTTP server functions by and specifying

http://<the projector's IP address>/index.html

in the entry column of the URL.

#### 6-3-2. Preparation before use

Make network connections and set up the projector and confirm that it is complete before engaging in browser operations. Operations with a browser that uses a proxy server may not be possible depending on the type of proxy server and the setting method. Although the type of proxy server will be a factor, it is possible that items that have actually been set will not be displayed depending on the effectiveness of the cache, and the contents set from a browser not be reflected in operation. It is recommended that a proxy server not be used unless it is unavoidable.

#### 6-3-3. URL for connecting to the HTTP server

Normally, the URL of the HTTP server is "http://<this projector's IP address>/index.html", but if the conditions below are met, connection is possible with the URL using the projector's host name.

- the projector's host name is registered on the domain name server


- the projector's IP address and host name have been added to the "HOSTS" file on the computer

(Example 1) When the projector's host name is set to "pj.nec.co.jp" To access the HTTP server function, enter

"http://pj.nec.co.jp/index.html" in the address or URL input field.

(Example 2) When the projector's IP address is "192.168.10.10" To access the HTTP server function, enter "http://192.168.10.10/index.html" in the address or URL input field.

#### 6-3-4. Structure of the HTTP server

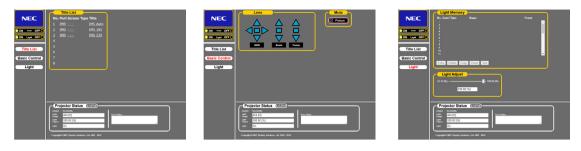

Power		Controls the pow	er to your projector.		
		On: Turns the p	• On: Turns the power on.		
		Off: Turns the p	Off: Turns the power off.		
Light		Turn the light on/	off.		
		• On: Turns the li	ght on.		
		Off: Turns the li	ght off.		
Title List		Displays titles set	in the projector (such as input port, screen type, and title).		
		Check, and the ti	tle will be changed.		
Basic Contr	ol	Displays the basi	c control items.		
Lens		Controls the lens	operation.		
	Shift	▲ : Shifts the pro	jected screen upward.		
		▼ : Shifts the pro	jected screen downward.		
			jected screen leftward.		
			jected screen rightward.		
		: Stops the shi	о О		
		Shifting can also	be stopped by clicking the same button one more time.		
	Zoom	▲ : Zooms up the lens.			
		▼ : Zooms down the lens.			
		■ : Stops the zooming.			
		Zooming the can also be stopped by clicking the same button one more time.			
	Focus	$\blacktriangle$ : Focuses up the lens.			
		▼ : Focuses down the lens.			
		■ : Stops the focusing.			
			o be stopped by clicking the same button one more time.		
Mute	Picture		user closes and the projected picture disappears. Click once again and the		
Droigotor Ct	atua	picture will be projected again.			
Projector St	alus		Displays the condition of the projector.		
		~ ~ ~	Light Usage: Displays the hours of light use.		
			Light Power: Displays light output (%).		
		Ŭ	Light Status: Displays the status of the light (On: Lights / Off: Off).		
			• Error Status: Displays the status of errors occurring within the projector.		
			es the display of the following conditions.		
Light Memory		Entry	Saves the current light output value in the memory.		
		Delete	Deletes the memory selected in the list from the Light Memory.		
		Сору	Copies the memory selected in the list.		
		Paste	Saves/overwrites the copied memory to the selected memory in the list.		
		Test	Tests the adjustment value of the memory selected in the list.		

# 6-4. Writing of the log file (Save Information)

Log files saved on the main unit can be written to USB memory connected to the USB port of the main unit. To perform the writing of the log file, use the following procedure.



#### Connect the USB memory to the USB port of the main unit.

Wait until the USB memory is recognized, and it enters the condition in which it can be used (5 or more seconds). For details, refer to the instruction guide of the USB memory.

#### 2 Simultaneously press the UP button and ENTER button.

The "Save Info." screen is displayed.



TIP If you press the EXIT button during operation, operation is stopped and the display returns to the normal screen.

#### **3** Press the LEFT/RIGHT button, and select the log file writing period.

. . .

The items that can be selected are as follows.

Today	Writes today's log files.
7days	Writes 7 days' log files from today.
30days	Writes 30 days' log files from today.
2years	Writes 2 years' log files from today.
Manual	Writes the specified period's log files.


#### 4 Press the ENTER button.

When "Today", "7days", "30days" or "2years" is selected, the log file writing period is displayed.



← The log file writing period is displayed.

When "Manual" is selected, specify the log file writing period. For how to enter numerals, refer to "4-1-3. How to enter alphanumeric characters" (See page 48). If you press the ENTER button, the display advances to the following screen.

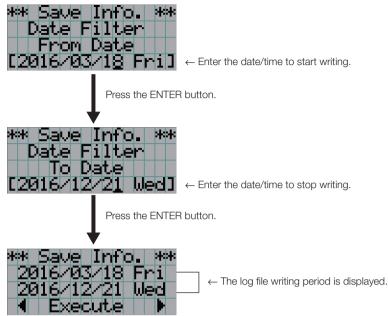

5 Confirm the log file writing period, press the LEFT/RIGHT button to select "Execute"; and press the ENTER button.

The log files of the specified period are written to the USB device. When writing completes, the following screen is displayed.



TIP If you select "Cancel" and press the ENTER button, the writing of log files is stopped, and the display returns to the normal screen.

#### 6 Press the ENTER button.

The display returns to the normal screen.

$\square$	L j	19	ht				10	Øł	
							8	07	
			Τ	$\mathrm{it}$	16				
			2	92	ΗP	1			

Remove USB memory from the USB port of the main unit.

#### 6-4-1. Names of log files


Written log files are saved with the following file names.

(Model name)	This shows the model of projector.			
(Serial Number)	This shows the serial number of projector.			
YYMMDDHHmm	Shows the date/time when written.			
	YY: Year (lower 2 digits)			
	MM: Month (2 digits)			
	DD: Date (2 digits)			
	HH: Hour (2 digits)			
	mm: Minute (2 digits)			

For example, when the NC2402ML log file is written at 14:05 on January 28, 2019 (2019/01/28), it will be saved with the filename "NC2402ML\_abcd1234\_1901281405.txt".

# 6-5. Outline Drawing

#### 6-5-1. Projector

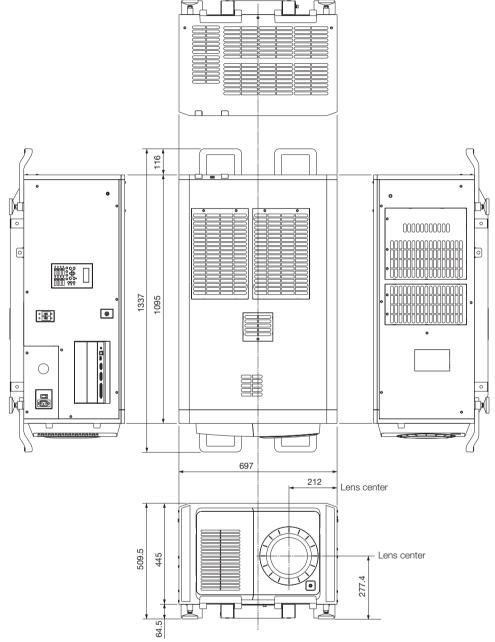

Units: mm

# 6-6. Specifications

#### 6-6-1. Projector

Model name	DLP Cinema® Projector Head : NP-02HD Light Module : NP-24LU01/NP-20LU01/NP-18LU01
Projection method	3 chip DLP Cinema® method
	0.98-inch DC2K chip
Panel resolution	2048 x 1080
Light type	Laser Diode
Screen sizes	Max. 22 m (NP-24LU01) Max. 20 m (NP-20LU01) Max. 18 m (NP-18LU01) @14ft-L / Screen Gain 1.8 (Depends on setup conditions)
Contrast ratio	2000:1 with DCI specified color representation
Lens adjustment function	Motorized lens shift (vertical/horizontal), motorized zoom, motorized focus, douser
Signal input ports	When shipped from factory: Empty (for mounting optional components) (Note 1)
External Control	RS-232C (D-sub 9pin) x 1 GPIO port (D-sub 37 pin) x 1 Service terminal (stereo mini jack) x 1 3D CTL (D-sub 15 pin) x 1 USB (Type A) x 1 Interlock port x 1 Ethernet port (G-bit RJ-45) x 1
Power supply voltage	With a C1 connection (Note 3): Single-phase AC 200V-240V 50/60 Hz (projector power supply + light power supply) With a C2 connection (Note 3): Single-phase AC 100V-240V 50/60 Hz (projector power supply) Single-phase AC 200V-240V 50/60 Hz (light power supply)
Input current	With a C1 connection (Note 3): Projector power supply + light power supply: 18.1A With a C2 connection (Note 3): Projector power supply: 6.0A (for AC 100V), 2.9A (for AC 220V) light power supply: 15.2A
Power consumption	With a C1 connection (Note 3): Projector power supply + light power supply: 3,600W With a C2 connection (Note 3): Projector power supply: 599W (for AC 100V), 574W (for AC 220V) light power supply: 3,026W
Cooling method	Air cooling system and liquid cooling system
Noise level	50 dB or less
Installation	Orientation: Desk/ front, desk/ rear, ceiling/ front, ceiling/ rear
Net weight	150 kg (total weight of projector and NP-24LU01 or NP-20LU01 light module. Not including the lens.) 141 kg (total weight of projector and NP-18LU01 light module. Not including the lens.)
Dimensions	697 mm (width) × 1,095 mm (depth) × 509.5 mm (height)
Environment	Operating temperature: 10 to 35°C Operating humidity: 10 to 85% (non-condensing) Storage temperature: -10 to 50°C Storage humidity: 10 to 85% (non-condensing) Operating altitude: 0 to 3000 m/9800 feet

(Note 1) The video input slots are empty when the device is shipped. Input ports can be added by mounting option boards, which are sold separately. (See page 78)

(Note 2) The value is typical.

(Note 3) A "C1 connection" is when the AC power is supplied to the projector power supply and the light power supply with a single power cable.

A "C2 connection" is when the AC power is supplied to the projector power supply and the light power supply by separate power cables.

- \* For the standards related to laser products to which this projector conforms, see the section "To ensure safe use of this unit, be sure to read this before using the unit" (page 2).
- \* Note that these specifications and design can change without prior notice.

# 6-7. Pin Assignment and Functions of Terminal

#### 6-7-1. PC CONTROL connector (RS-232) (D-sub 9 pin)

This is an RS-232C interface for controlling the projector from a PC. The projector operates as a DCE (Data Communication Equipment), so use a straight cable when connecting to a PC.



Pin No.	RS-232C Signal Name	Functions as RS-232C	Projector Connector Operation
1	CD	Carrier detection	Not used (N.C.)
2	RXD Reception data Data transmission to an external device		Data transmission to an external device
3	TXD	Transmission data	Data reception from an external device
4	DTR	Data Terminal ready (Note)	Connection to 6 pins
5	GND	Signal GND	Signal GND
6	DSR	Data set ready (Note)	Connection to 4 pins
7	RTS	Transmission request	SYSTEM: Hi-Z (Not used) CINEMA: Hi-Z (Used)
8	CTS	Transmission available	SYSTEM: Fixed at -6.5 V (Not used) CINEMA: ±10.5 V (Used: Depends on communication status)
9	RI	Ring indicator	Not used (N.C.)

(Note) Do not use DTR and DSR signals when communicating.

6. Appendix

#### 6-7-2. External control connector (GP I/O) (D-sub 37 pin)

It is possible to control the projector with an external device and to control the external device from the projector using an external control connector (GPIO: General Purpose I/O Ports). Each pin is electrically separated from the projector internal circuits by a photo-coupler. 8 port input and 8 port output are available.

Please contact your dealer/distributor regarding how to use and to operate them.

16 15 13 12 14 10 6

37 36 35 34 33 32 31 30 29 28 27 26 25 24 23 22 21 20 Pin view of female connector

Pin No.	Signal Name	I/O	Pin No.	Signal Name	I/O
1	GPIN1+ (3D L/R Input Reference +)	IN	20	GPIN1- (3D L/R Input Reference -)	IN
2	GPIN2+ (3D L/R Display Reference +)	IN	21	GPIN2- (3D L/R Display Reference -)	IN
3	GPIN3+ (system reserved)	IN	22	GPIN3- (system reserved)	IN
4	GPIN4+ (system reserved)	IN	23	GPIN4- (system reserved)	IN
5	EXT_GPIN1+ (Control and Title Selection +)	IN	24	EXT_GPIN1- (Control and Title Selection -)	IN
6	EXT_GPIN2+ (Control and Title Selection +)	IN	25	EXT_GPIN2- (Control and Title Selection -)	IN
7	EXT_GPIN3+ (Control and Title Selection +)	IN	26	EXT_GPIN3- (Control and Title Selection -)	IN
8	EXT_GPIN4+ (Control and Title Selection +)	IN	27	EXT_GPIN4- (Control and Title Selection -)	IN
9	GPOUT1+ (External 3D L/R Output Reference +)	OUT	28	GPOUT1- (External 3D L/R Output Reference -)	OUT
10	GPOUT2+ (system reserved)	OUT	29	GPOUT2- (system reserved)	OUT
11	GPOUT3+ (system reserved)	OUT	30	GPOUT3- (system reserved)	OUT
12	GPOUT4+ (Internal 3D L/R Output Reference +)	OUT	31	GPOUT4- (Internal 3D L/R Output Reference -)	OUT
13	EXT_GPOUT1+ (Projector Ready/Busy +)	OUT	32	EXT_GPOUT1- (Projector Ready/Busy -)	OUT
14	EXT_GPOUT2+ (Projector Error Status +)	OUT	33	EXT_GPOUT2- (Projector Error Status -)	OUT
15	EXT_GPOUT3+ (IMB Play/End Status +)	OUT	34	EXT_GPOUT3- (IMB Play/End Status -)	OUT
16	EXT_GPOUT4+ (Projector Heartbeat +)	OUT	35	EXT_GPOUT4- (Projector Heartbeat -)	OUT
17	NC (not connected)	-	36	NC (not connected)	
18	GND	PWR	37	GND	PWR
19	GND	PWR	-	-	-

EXT\_GPIN1 - EXT\_GPIN4:


You can control the projector externally by combinations of input signals (high/low). (Projector

EXT\_GPOUT1 - EXT\_GPOUT4:

power supply/turning the light source on or off/image mute/title selection)

Functions in the above table are default settings. You can change the assigned functions.

Input Connector

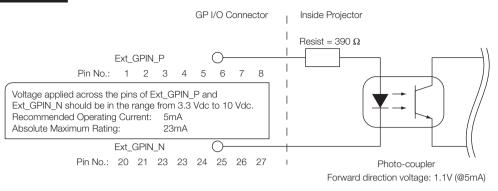

#### Using GPIO Control

Momentary "ON" pulse enables you to control projector. To enable "ON" pulse, hold it for at least 500 ms. Hold "OFF" for at least 500 ms before "ON". (See page 74)

Pin No.	Photo-coupler ON/OFF			Function	
1-20	ON/OFF				3D L/R timing signal input ON/OFF
2-21	ON/OFF				3D L/R display timing signal input ON/OFF
3-22			-		System reserved (used internally)
4-23	-			System reserved (used internally)	
5-24 6-25	8-27	7-26	6-25	5-24	The following functions apply depending on the combination of input terminals.
7-26	OFF	OFF	OFF	ON	Power ON
8-27	OFF	OFF	ON	OFF	Power OFF
	OFF         OFF         ON         ON           OFF         ON         OFF         OFF         OFF           OFF         ON         OFF         ON         OFF         ON		ON	Light source ON	
			OFF	Light source OFF	
			ON	Image douser ON	
	OFF	OFF ON ON OFF		OFF	Image douser OFF
	OFF ON ON ON		ON	System reserved (used internally)	
	ON	OFF	OFF	OFF	Selects the title registered to the preset button 1
	ON	OFF	OFF	ON	Selects the title registered to the preset button 2
	ON	OFF	ON	OFF	Selects the title registered to the preset button 3
	ON	OFF	ON	ON	Selects the title registered to the preset button 4
	ON	ON	OFF	OFF	Selects the title registered to the preset button 5
	ON	ON	OFF	ON	Selects the title registered to the preset button 6
	ON	ON	ON	OFF	Selects the title registered to the preset button 7
	ON	ON	ON	ON	Selects the title registered to the preset button 8

Here is function list to control projector by using GPIO port.

Example for dousing image: Input ON to 5-24 and 7-26 while 6-25 and 8-27 are OFF.


Example for selecting the preset button 2: Input ON to 5-24 and 8-27 while 6-25 and 7-26 are OFF.

NOTE


- The operation command coming from GPI/O port will be canceled when the projector is processing other tasks, such as light source cooling and switching title.
- Set all other pins than those in use to "OFF".
- The operation command is executed upon continuous input of the "ON" pulse for approximately 200 ms.


#### • Timing chart of GPIO control

Example of Select Preset Button

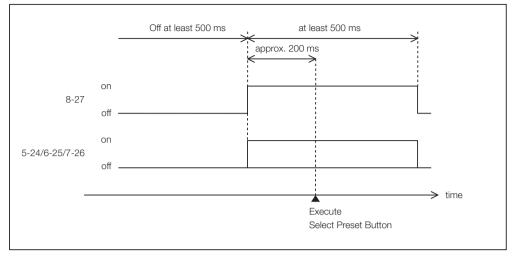


Example for turning the image douser (Douser) on

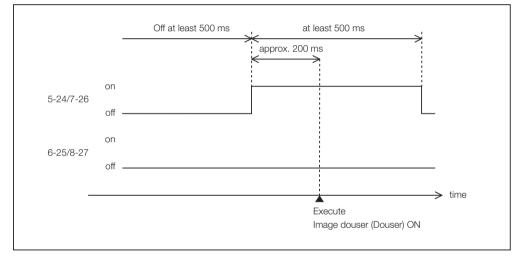

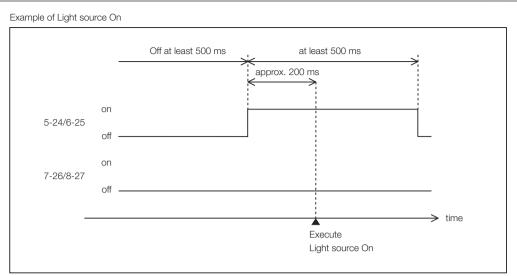

#### Example for turning the power off

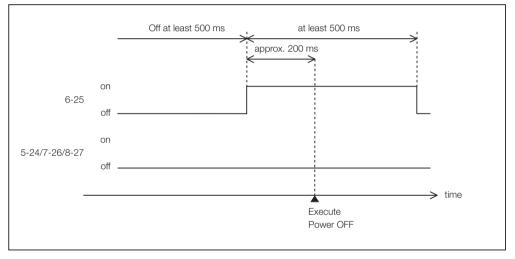

# Output Connector GP I/O Connector Inside Projector Ext\_GPOUT\_P Ext\_PROJ\_GOOD\_P Pin No.: 9 10 11 12 13 14 15 16 Absolute Maximum Rating: 50 mA I Ext\_GPOUT\_N Ext\_GPOUT\_N Ext\_GPOUT\_N Photo-coupler

#### • Using GPIO Control

You can use GPIO control for the projector's health check and error check. Also, you can use the output as the trigger to control external devices.

The following functions are assigned to the pin number 13-32, 14-33, 15-34, and 16-35 (EXT\_GPOUT1 - EXT\_GPOUT4) as the default. You can change the assigned functions.

Pin No.	Photo-coupler ON/OFF	Function	
9-28	ON/OFF	External 3D L/R timing signal output ON/OFF	
10-29	-	System reserved (used internally)	
11-30	-	System reserved (used internally)	
12-31	ON/OFF	Internal 3D L/R timing signal output ON/OFF	
13-32	ON/OFF	GPIO control status check	
		ON: GPIO control (input) is unavailable.	
		OFF: GPIO control (input) is available.	
14-33	ON/OFF	Error check	
		ON: Error	
		OFF: No error	
15-34	ON/OFF	IMB status check	
		ON: The content is being played.	
		OFF: The content is stopped/paused.	
16-35	ON/OFF	Health check (heart beat)	
		ON and OFF are alternately output when operations are	
		normal.	

#### 6-7-3. 3D connector (D-sub 15 pin)

This is used to connect a 3D image system to the projector.



Pin view of a female connector

Pin No.	Signal Name	I/O	Function	
1	+12V	PWR	Supplies power (+12V) to the 3D image system	
2	GNDC	GND	Ground	
3	GNDC	GND	Ground	
4	RS232_RX	IN	Data transmission from the 3D image system (1200 Baud, 8 bits, No Parity)	
5	RS232_TX	OUT	Data transmission to the 3D image system (1200 Baud, 8 bits, No Parity)	
6	CONN_3D_MODE+	OUT	3D mode status (+) (Connects to the collector of the output transistor of the photo coupler inside the projector)	
7	CONN_SYNC+	OUT	3D L/R switching timing signal (+) (Connects to the collector of the output transistor of the photo coupler inside the projector)	
8	3D_INPUT_REFERENCE+	IN	3D L/R timing signal (+) (Connects to the anode of the input diode of the photo coupler inside the projector)	
9	+12V	PWR	Supplies power (+12V) to the 3D image system	
10	3D_INPUT_REFERENCE-	IN	3D L/R timing signal (-) (Connects to the cathode of the input diode of the photo coupler inside the projector)	
11	3D_DISPLAY_REFERENCE+	IN	3D L/R display timing signal (+) (Connects to the anode of the input diode of the photo coupler inside the projector)	
12	3D_DISPLAY_REFERENCE-	IN	3D L/R display timing signal (–) (Connects to the cathode of the input diode of the photo coupler inside the projector)	
13	CONN_3D_MODE-	OUT	3D mode status (-) (Connects to the emitter of the output transistor of the photo coupler inside the projector)	
14	CONN_SYNC-	OUT	3D L/R switching timing signal (-) (Connects to the emitter of the output transistor of the photo coupler inside the projector)	
15	N/C	_	Unused	

# 6-8. Related products list

Product name	Model name	
Lens	Zoom lens 1.20~1.81	NC-60LS12Z
	Zoom lens 1.40~2.05	NC-60LS14Z
	Zoom lens 1.59~2.53	NC-60LS16Z
	Zoom lens 1.90~3.25	NC-60LS19Z
	Zoom lens 2.40~3.90	NC-60LS24Z
	Zoom lens 3.90~6.52	NC-60LS39Z
Integrated Media Server		NP-90MS02-4K
Projector Head		NP-02HD
Light Module	Max. 22 m screen width	NP-24LU01
	Max. 20 m screen width	NP-20LU01
	Max. 19 m screen width	NP-18LU01

© NEC Display Solutions, Ltd. 2019 Ver.1 05/19