

- 8** Adjust Focus  
 Régler la mise au point  
 Stellen Sie den Fokus ein  
 Ajuste el enfoque  
 Regolare la messa a fuoco  
 Ajuste da focagem  
 Justera fokus  
 Настройте фокусировку  
 調整焦距  
 초점 조절  
 Wyreguluj Ostrość  
 Élességállítás  
 Προσαρμογή Εστίασης  
 Odağı Ayarla  
 Pas de scherpstelling aan  
 Juster Fokus  
 Projektorin tarkennuksen säätö  
 Juster fokus  
 Upravít zaostření

ضبط البؤرة

 


**7**

**Fn** + **F7** CRT/LCD

**Toggle Output Settings**

Compaq	[Fn] + [F4]
Dell	[Fn] + [F8]
Gateway	[Fn] + [F4]
Hewlett Packard	[Fn] + [F4]
IBM	[Fn] + [F7]
NEC	[Fn] + [F3]
Toshiba	[Fn] + [F5]

**Macintosh Apple :**  
 System Preferences⇒Display⇒  
 Arrangement⇒Mirror display

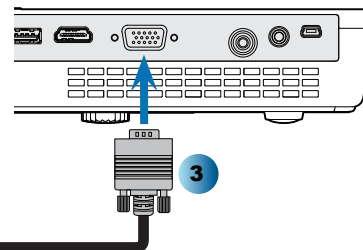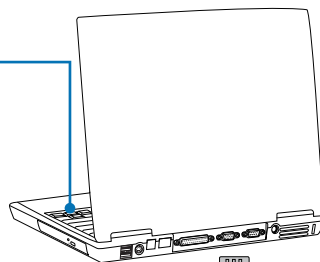

7N8N2201  
 © NEC Display Solutions, Ltd. 2011  
 Ver 1 08/11  
 Printed in China



P/N 36.8LN02G001-A