

PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount

Contents

Product Description, Lens Specs, Screen/Aspect Ratio	
Notes	Pg 1
Distance Charts and Formulas	Pg 2
Ceiling Mount/Desktop Installation	Pg 3
Lens Shift Adjustable Range	Pg 4
Power Cord	Pg 5
Cabinet Dimensions	Pg 6
Cabinet Dimensions	Pg 7
Ceiling Mount	Pg 8
Optional Lens Dimensions	Pg 9
Ventilation Requirements/Portrait Requirements	Pg 10
Laser Regulations and Installation Guidelines	Pg. 11-13
Regulatory Labels	Pg 14
Hazard Zone	Pg 15
Input Panel and Button Panel	Pg 16
Control Codes	Pg 17



Product Description

Type:	1 chip DMD Reflection Type 0.96 in. 2x LVDS DMD	Dimensions: 20.9" (W) x 10.8" (H) x 29.4" (D) Weight: 112 lbs. / 51kg
Resolution:	1920 x 1200 (16:10)	Brightness: 21,500 Lumens
Fan Noise:	48 dB / 46dB @ 1 meter	
Power Consumption:	1775W (max)	BTU's: 6035 BTU/hour

Network Ready, integrated wired and wireless adapter
Powered: Lens Shift, Horizontal & Vertical /Zoom/ Focus

Lens Specifications

NP45ZL:	Throw Ratio: 0.9 - 1.2:1 Screen Sizes: 50"-500"	Focal Length: 19.34 – 25.76mm F/#: 2.2 - 2.53	Weight: 6.0lbs. / 2.7kg
NP46ZL:	Throw Ratio: 1.2 – 1.56:1 Screen Sizes: 50-500"	Focal Length: 25.69 – 33.22mm F/#: 2.18 - 2.66	Weight: 4.5bs. / 2.0kg
NP47ZL:	Throw Ratio: 1.5 – 2.0:1 Screen Sizes: 50-500"	Focal Length: 31.90 – 45.20mm F/#: 2.17 – 2.65	Weight: 4.5lbs. / 2.0kg
NP48ZL:	Throw Ratio: 2.0 – 4.0:1 Screen Sizes: 50"-500"	Focal Length: 45.60 – 84.80mm F/#: 2.17 - 2.65	Weight: 6.0lbs. / 2.7kg
NP49ZL:	Throw Ratio: 4.0 – 7.0:1 Screen Sizes: 50"-500"	Focal Length: 83.93 -146.85mm F/#: 2.2 - 2.57	Weight: 4.5lbs. / 2.0kg

Screen/Aspect Ratio

4:3, 16:9 and 16:10 screens are fully supported with proper aspect ratio control for both type sources using NEC developed scaling technology. Menu selections have settings for each screen type and aspect ratio control for each source type.

Notes

- For screen sizes not indicated on the projection tables, use the formulas below.
If the figures on the tables do not match the results of formulas, use the figures in the table.
- Distances are in inches, for millimeters multiply by 25.4.
- Distances may vary ±5%.

PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount

Formulas: 16:10 Aspect Ratio (WUXGA)

The Projection Formulas use the image width for calculation. Image width is the same for all aspect ratios, only vertical image size varies. For proper projector placement, determine the image width for a desired screen size. Use the Screen Formulas below to calculate all screen dimensions. Plug in the image width for "W" in the Projection Formulas.

Refer to the diagrams and charts for popular screen sizes on page 2 and 3:

Projection Formulas:

NP45ZL:	C(Wide) = 0.943W - 3.632	C(Tele) = 1.259W - 3.717
NP46ZL:	C(Wide) = 1.264W - 5.446	C(Tele) = 1.634W - 4.902
NP47ZL:	C(Wide) = 1.531W + 3.074	C(Tele) = 2.035W - 2.953
NP48ZL:	C(Wide) = 1.926W + 6.260	C(Tele) = 3.866W + 5.280
NP49ZL:	C(Wide) = 3.929W + 6.040	C(Tele) = 6.904W + 6.180

Definitions:

W = Image Width
H = Image Height (size)
C = Throw distance

16:10 Screen Formulas

W = H x 16/10
H = W x 10/16
Screen Diagonal = W x 18.868/16
16:9 Screen Formulas
W = H x 16/9
H = W x 9/16
Screen Diagonal = W x 18.358/16

Distance Chart for popular 16:10 Screens (WUXGA)

Screen Size (16:10)			Zoom Lenses									
			NP45ZL		NP46ZL		NP47ZL		NP48ZL		NP49ZL	
Diagonal	Width(W)	Height (H)	0.90-1.20:1		1.20-1.56:1		1.50-2.00-1		2.00-4.00:1		4.00-7.00:1	
inches	inches	inches	inches		inches		inches		inches		inches	
40	34	21	28.4	39.0	37.4	50.5	48.9	66.1	71.6	136.4	139.3	240.4
60	51	32	44.3	60.3	58.9	78.2	74.8	100.6	104.3	202.0	205.9	357.5
68	58	36	50.7	68.9	67.4	89.3	85.2	114.4	117.3	228.2	232.6	404.3
72	61	38	53.9	73.2	71.7	94.9	90.4	121.3	123.9	241.3	245.9	427.7
85	72	45	64.3	87.0	85.7	112.9	107.3	143.7	145.1	283.9	289.2	503.8
108	92	57	82.7	111.6	110.3	144.7	137.1	183.4	182.7	359.3	365.9	638.5
113	96	60	86.7	116.9	115.7	151.7	143.6	192.0	190.8	375.7	382.5	667.7
130	110	69	100.3	135.1	133.9	175.2	165.7	221.4	218.6	431.5	439.2	767.3
137	116	73	105.9	142.5	141.4	184.9	174.8	233.5	230.0	454.4	462.5	808.3
170	144	90	132.3	177.8	176.8	230.7	217.6	290.4	283.9	562.6	572.4	1001.5
186	158	99	145.1	194.9	193.9	252.8	238.4	318.0	310.0	615.1	625.8	1095.1
208	176	110	162.7	218.3	217.5	283.3	267.0	356.0	346.0	687.2	699.0	1223.9
226	192	120	177.1	237.6	236.8	308.2	290.3	387.0	375.4	746.2	759.0	1329.3
270	229	143	212.3	284.5	284.0	369.2	347.5	463.0	447.2	890.4	905.6	1586.9
300	254	159	236.3	316.6	316.1	410.8	386.4	514.7	496.2	988.8	1005.6	1762.6
500	424	265	396.2	530.1	530.5	687.9	646.1	859.9	822.9	1644.5	1671.9	2933.5

Distance Chart using 16:9 native projector with 16:9 Image (1080p)


Screen Size (16:9)			Zoom Lenses									
			NP45ZL		NP46ZL		NP47ZL		NP48ZL		NP49ZL	
Diagonal	Width(W)	Height (H)	0.90-1.20:1		1.20-1.56:1		1.50-2.00-1		2.00-4.00:1		4.00-7.00:1	
inches	inches	inches	inches		inches		inches		inches		inches	
39	34	19	28.4	39.1	37.5	50.6	55.1	66.2	71.7	136.7	139.6	240.9
59	51	29	44.9	61.0	59.6	79.1	81.8	101.7	105.3	204.1	208.1	361.2
67	58	33	51.4	69.8	68.4	90.5	92.5	115.9	118.7	231.0	235.5	409.3
70	61	34	53.9	73.1	71.7	94.8	96.5	121.2	123.8	241.1	245.7	427.4
83	72	41	64.6	87.4	86.0	113.3	113.8	144.3	145.6	284.9	290.3	505.6
106	92	52	83.5	112.6	111.3	146.1	144.5	185.1	184.2	362.4	369.0	644.0
110	96	54	86.8	117.0	115.7	151.8	149.9	192.1	190.9	375.9	382.7	668.1
126	110	62	99.9	134.5	133.4	174.5	171.2	220.5	217.8	429.8	437.5	764.3
133	116	65	105.7	142.2	141.1	184.5	180.5	232.9	229.5	453.4	461.5	806.5
159	139	78	127.0	170.8	169.7	221.5	215.2	279.1	273.2	541.0	550.5	962.9
184	160	90	147.6	198.2	197.3	257.1	248.6	323.4	315.1	625.3	636.1	1113.3
202	176	99	162.4	217.9	217.1	282.8	272.6	355.3	345.3	685.9	697.8	1221.7
220	192	108	177.2	237.7	236.9	308.4	296.6	387.2	375.6	746.6	759.4	1330.0
263	229	129	212.5	284.9	284.3	369.6	354.0	463.5	447.7	891.4	906.6	1588.7
299	261	147	242.1	324.4	323.9	420.9	402.0	527.4	508.2	1012.7	1029.9	1805.3
500	436	245	407.3	544.9	545.4	707.2	670.2	883.9	845.6	1690.0	1718.2	3014.8

PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount

Ceiling Mount Installation

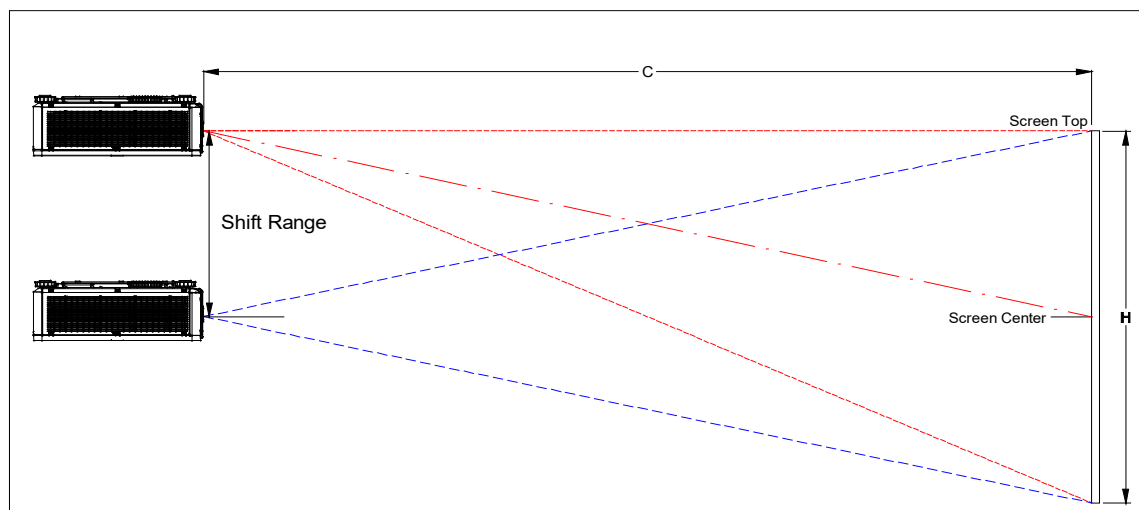


PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount

Lens Shift Adjustable Range

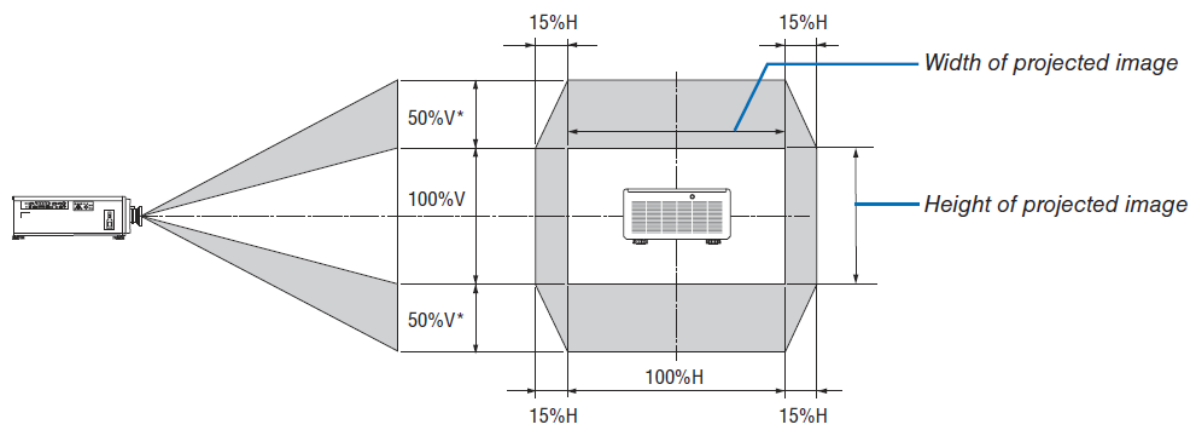

Lens Shift Range for Desktop and Ceiling Mount Application

The diagram above shows the location of the image position in the lens. The lens can be shifted within the shaded area as shown using the normal projection position as a starting point.

Note: Lens shift feature is smaller for the NP45ZL +/- 45%V

Note: Projector is set out of the box at maximum lens shift, which is how it is depicted above.

(W: Width of projected image, H: Height of projected image)

PX2201UL Installation Guide



Desktop and Ceiling Mount

Rev 1.2

Power Cord

Power Supply: 200-240V AC, 50/60Hz (Single Phase)
Power Consumption: 1922W (max)
Rated Input Current: 9.7A, 50/60Hz
Power Cord Specification: 15A or Higher

Service Part Numbers (INCLUDED):

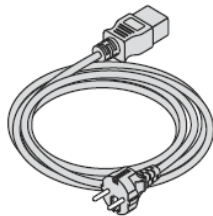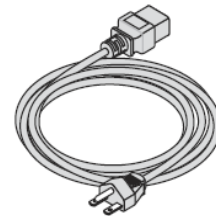*(79TM1021)**For Europe/Asia/South America**(79TQ1011)**For North America***NEMA 6-15P****NEMA 6-15R****IEC-60320-C19**

Alternative Power Cord with Twist Lock:



PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount


NEMA L6-30P**NEMA L6-30R****IEC-60320-C19**

Cabinet Dimensions

The following diagrams show the cabinet dimensions for the PX2000UL.

Dimensions are in inches. For millimeters multiply by 25.4.

Note: Dimensions below shown without a lens

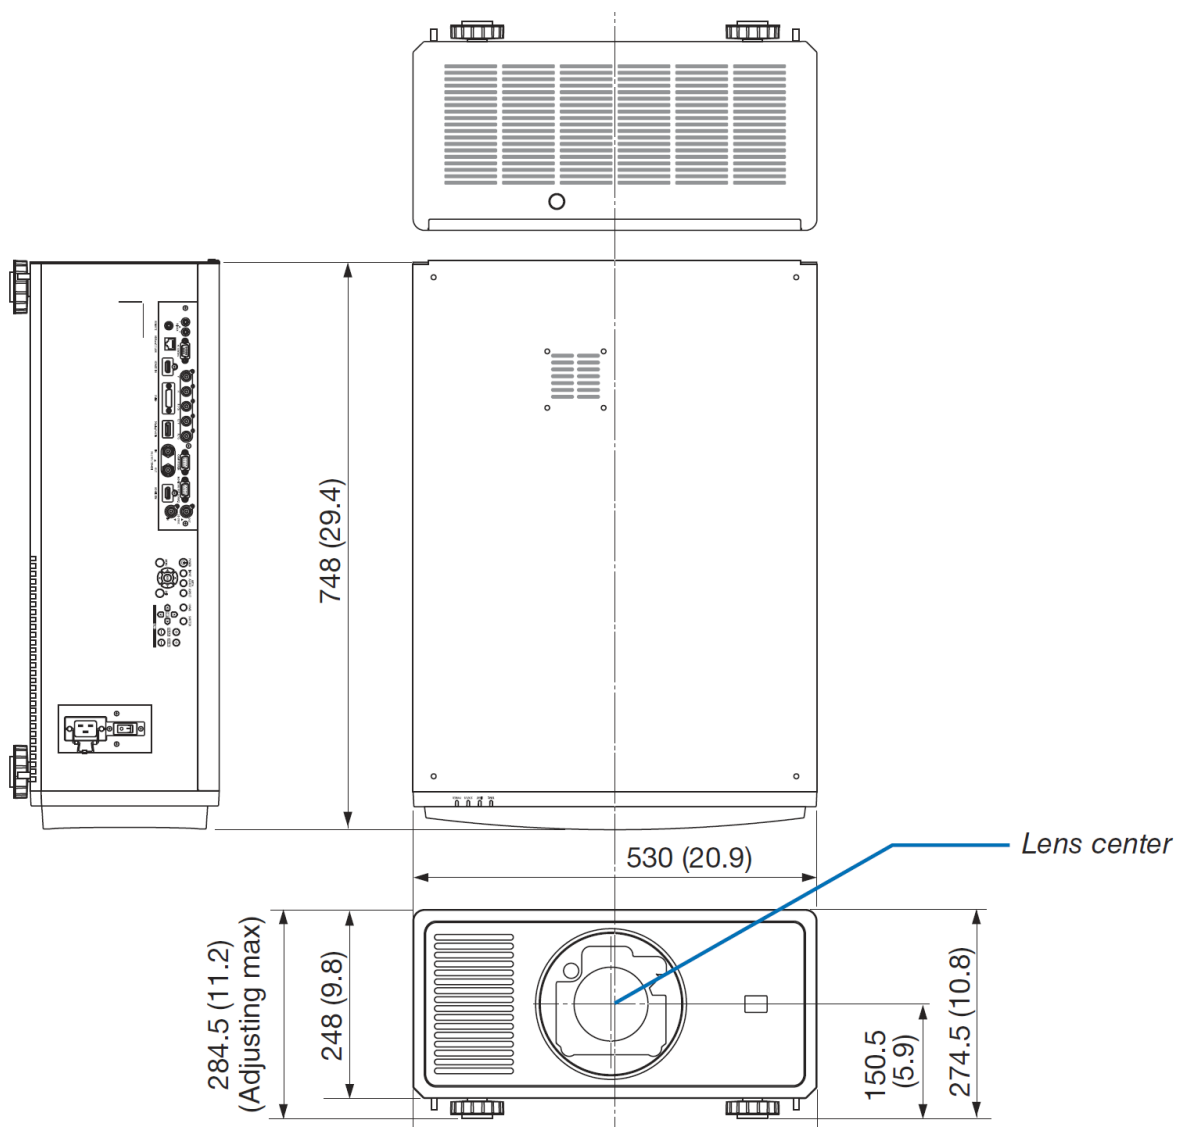


PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount



Cabinet Dimensions

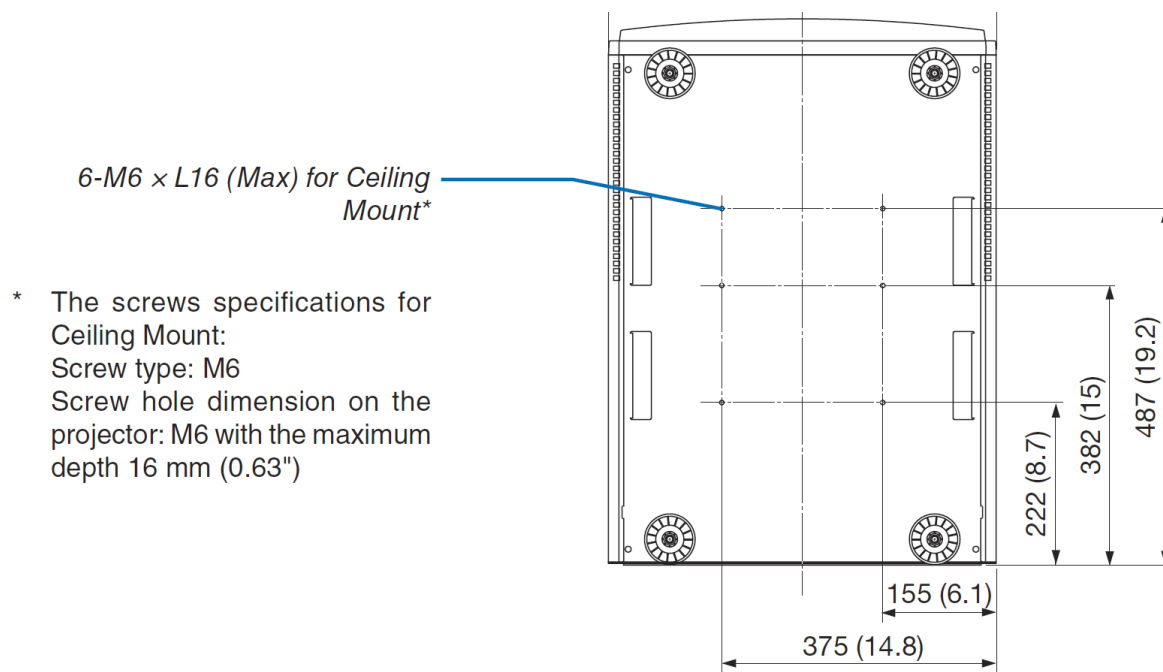

PX2201UL Installation Guide

Desktop and Ceiling Mount

Rev 1.2

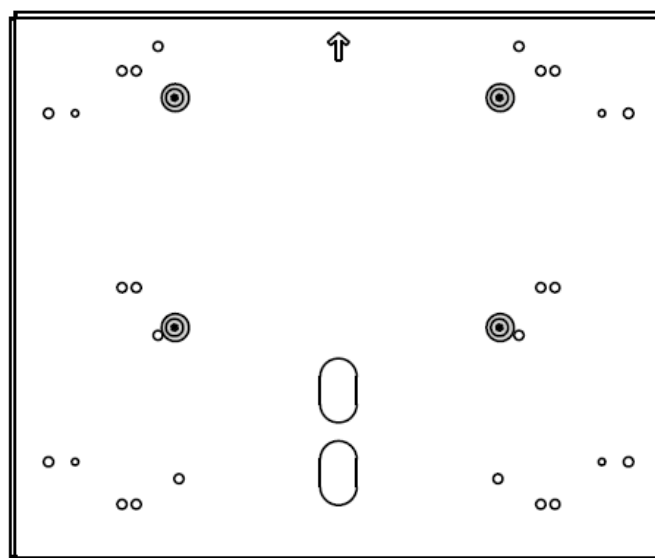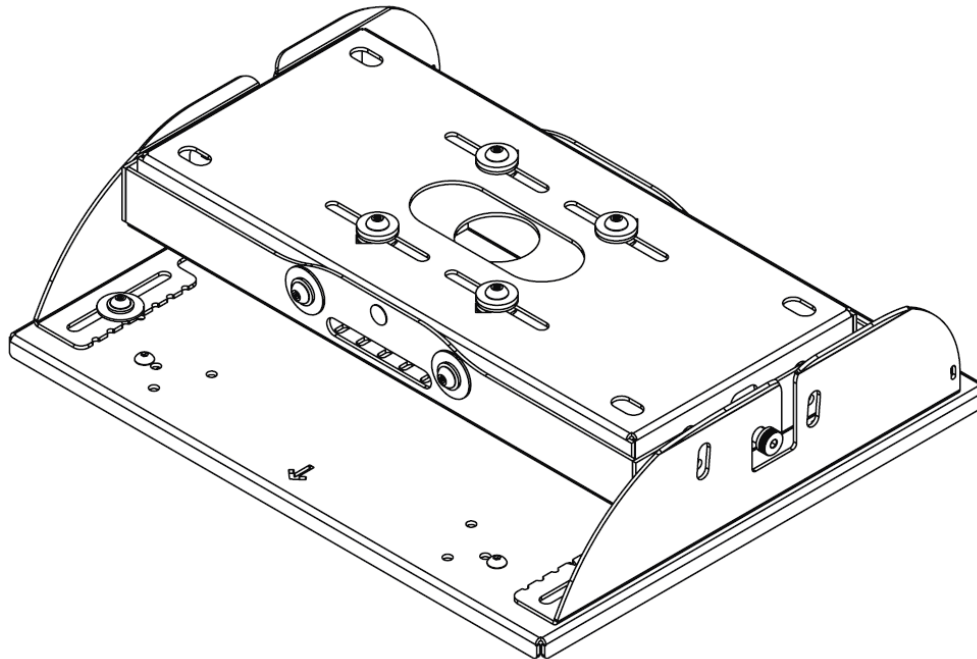IPJ2000CM


Mounting holes for
PX2000UL only

PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount

Optional Lens Dimensions

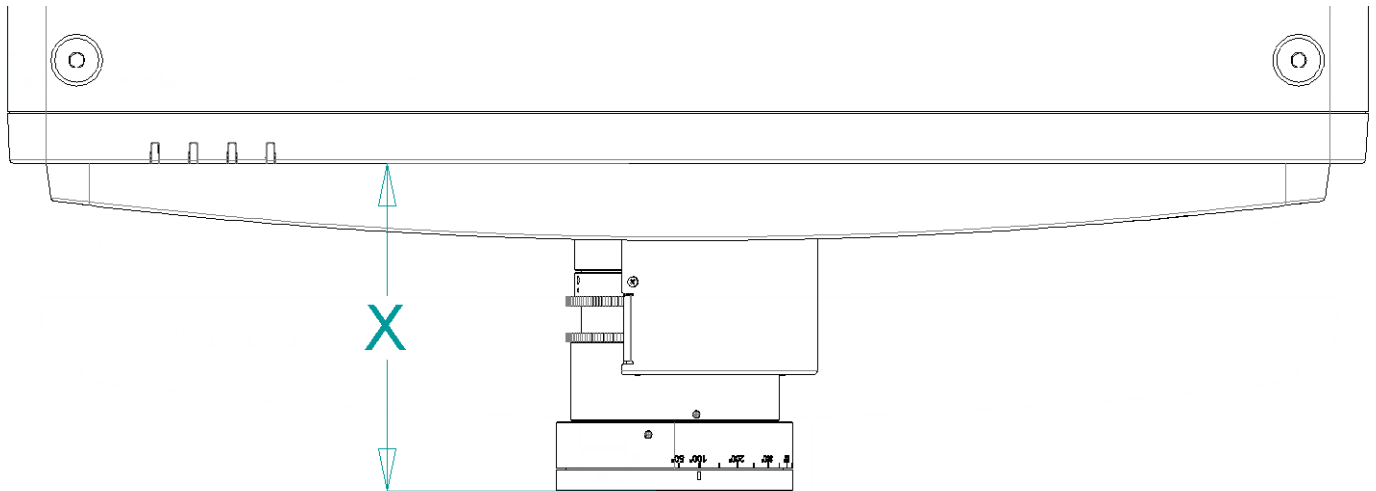

Lens	Distance "X"
NP45ZL	5.20"
NP46ZL	4.54"
NP47ZL	4.38"
NP48ZL	5.32"
NP49ZL	5.24"


PX2201UL Installation Guide

Desktop and Ceiling Mount


Rev 1.2

Ventilation Requirements


- If there are walls on both sides of the projector:

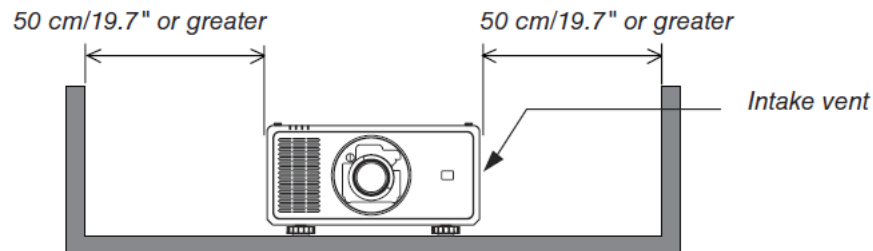

- If there's a wall behind the projector:

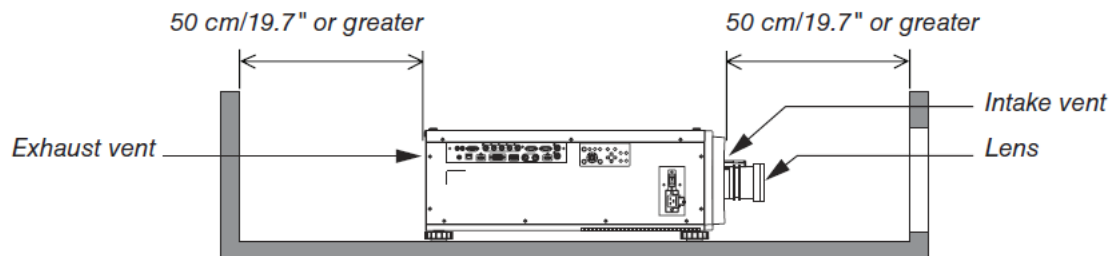

- If there's not much clearance above the projector:

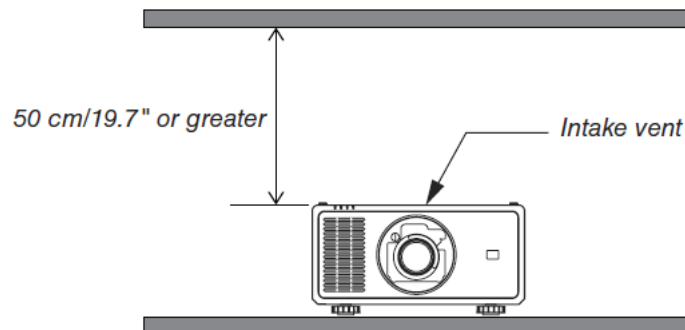

PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount

Laser Regulations and Installation Guidelines

Laser light radiation range



The figure below shows the maximum radiation range of the laser light.
(unit: degree)

Horizontal angle H

Lens	Zoom	
	Tele	Wide
NP45ZL	22.0	28.3
NP46ZL	17.4	22.1
NP47ZL	13.9	18.2
NP48ZL	7.0	13.8
NP49ZL	4.0	7.0

Vertical angle V

Lens	Zoom	
	Tele	Wide
NP45ZL	14.1	18.5
NP46ZL	11.1	14.2
NP47ZL	8.8	11.6
NP48ZL	4.4	8.7
NP49ZL	2.5	4.4

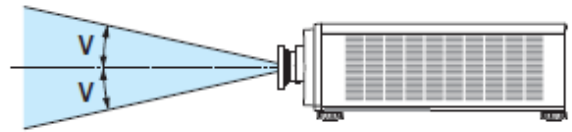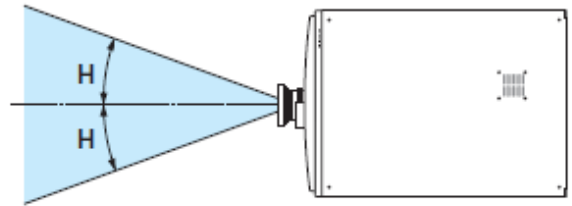

PX2201UL Installation Guide

Desktop and Ceiling Mount

Rev 1.2

Laser Regulations and Installation Guidelines


Radiation Zone (HD: Hazard Distance)

- The below table describes the radiation range of emitted light by the projector that is classified as Risk Group 3 (RG3) of IEC/EN 62471-5 First edition 2015.
- Please keep within bounds for installing the projector.
Install a barrier for preventing human eyes from entering the RG3 zone. For the barrier installation position, keep horizontal safety zone over 1 m (2.5 m for USA) from the RG3 zone. In case to install the projector over head, keep over 3 m distance at least between the floor surface and the RG3 zone.
This projector must be installed at a height that will prevent your eyes from being exposed within the RG3 zone.
The equipment administrator (operator) must control the entry of viewers into the RG3 zone.


Lens		RG3 HD (m)	Screen size (m)	
			H	V
NP45ZL	Wide	1.0	1.11	0.69
	Tele	1.0	0.83	0.52
NP46ZL	Wide	1.5	1.25	0.78
	Tele	1.8	1.15	0.72
NP47ZL	Wide	1.8	1.20	0.75
	Tele	2.4	1.20	0.75
NP48ZL	Wide	2.4	1.20	0.75
	Tele	3.0	0.75	0.47
NP49ZL	Wide	4.2	1.05	0.66
	Tele	4.8	0.69	0.43

The drawings below are example of typical installation methods. Besides these, when installing the projector at an angle, a security zone is required in the same way.

When installed on a floor or a desktop

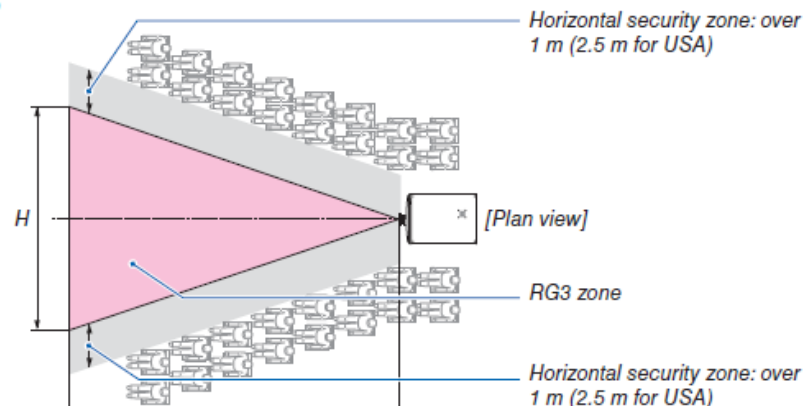

When installed on a ceiling

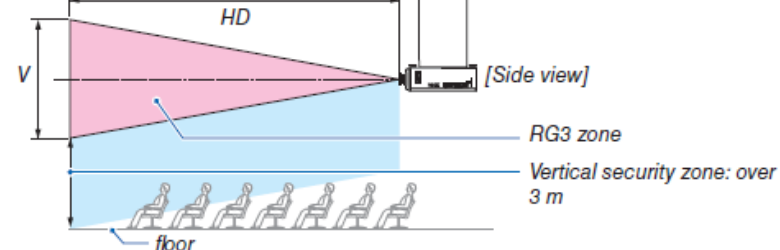


* If lens shift is utilized, please consider the shift of projected image according to the volume of lens shift.

PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount

Laser Regulations and Installation Guidelines

**CAUTION**

Please heed all precaution for safety.

To install the projector

- This projector is an RG3 product. The projector is for professional use and must be installed in location where safety is assured. For this reason, be sure to consult your dealer as installation and attachment/detachment of the lens unit must be performed by a professional service personnel. Never try to install the projector by yourself. This may result in visual impairment etc.
- The law requires that the lens hood be mounted when using the NP49ZL lens unit in the USA or China. Be sure to ask your dealer to mount the lens hood (model NP01LH).
- For planning the layout of the projector, make sure to take safety measures instructed on the installation manual.
- In order to refuse danger, install either a wall outlet within easy reach for pulling out the power plug in emergency or a device as a breaker to shut down the power supply to the projector.
- Take safety measures preventing human eyes from entering the RG3 zone.
- Considering the installation place, select an appropriate lens and secure safety zone that is determined for each lens. For operation on the powered projector as light adjustment, make sure appropriate safety measures have been taken.
- Check the validity of taken security measures if appropriate safety zone based on the installed lens is secured. Periodically check the validity and keep these results.
- Educate the administrator of the projector (operators) about safety before starting to operate the projector.

To use the projector

- Instruct the administrator of the projector (operators) to perform inspections before powering on the projector. (Including the safety check against emitted light by the projector)
- Instruct the administrator of the projector (operators) to be in circumstances able to control the projector whenever the projector is powered on for an emergency.
- Instruct the administrator of the projector (operators) to keep the installation manual, user's manual and inspection records to a place where they can take these documents out easily.
- Instruct them to clarify if the projector is conformed to standards of each country and region.

PX2201UL Installation Guide

Desktop and Ceiling Mount

Rev 1.2

Regulatory Labels

Label Information


These labels are stuck on the below indicated positions.

For USA

The LASER PRODUCT in CLASS 3R conforming to IEC 60825-1 Second edition.

For other regions

The LASER PRODUCT in CLASS 1 conforming to IEC 60825-1 Third edition, and RG3 of IEC/EN 62471-5 First edition 2015.

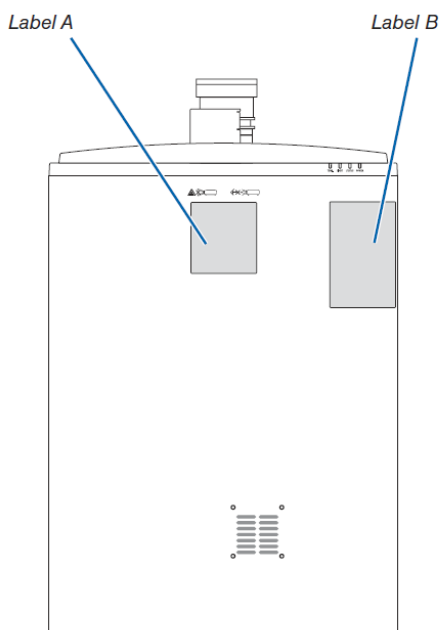

Label A: Laser Explanatory Label
(Includes LASER APERTURE label)



Label B: Risk Group /Lamp Safety Label



PX2201UL Installation Guide

Desktop and Ceiling Mount

Rev 1.2


Hazard Zone

- The below table describes the radiation range of emitted light by the projector that is classified as Risk Group 3 (RG3) of IEC/EN 62471-5 First edition 2015.
- Please keep within bounds for installing the projector.
 - Install a barrier for preventing human eyes from entering the RG3 zone. For the barrier installation position, keep horizontal safety zone over 1 m from the RG3 zone. In case to install the projector over head, keep over 3 m distance at least between the floor surface and the RG3 zone.
 - This projector must be installed at a height that will prevent your eyes from being exposed within the RG3 zone.
 - The equipment administrator (operator) must control the entry of viewers into the RG3 zone.

Lens		RG3 HD (m)	Screen size (m)	
			H	V
NP45ZL	Wide	2.0	2.22	1.39
	Tele	2.5	2.06	1.29
NP46ZL	Wide	3.0	2.48	1.55
	Tele	3.5	2.22	1.39
NP47ZL	Wide	3.5	2.34	1.46
	Tele	4.5	2.25	1.41
NP48ZL	Wide	5.5	2.77	1.73
	Tele	6.5	1.65	1.03
NP49ZL	Wide	8.0	2.00	1.25
	Tele	9.5	1.35	0.85

The drawings below are example of typical installation methods. Besides these, when installing the projector at an angle, a security zone is required in the same way.

When installed on a floor or a desktop

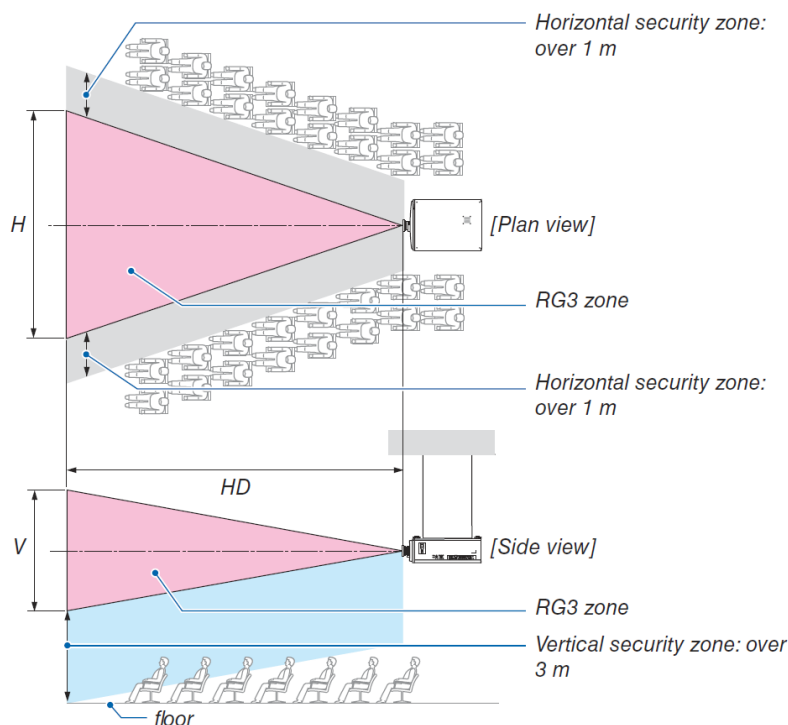

When installed on a ceiling


* If lens shift is utilized, please consider the shift of projected image according to the volume of lens shift.

PX2201UL Installation Guide


Desktop and Ceiling Mount

Rev 1.2

Input Panel

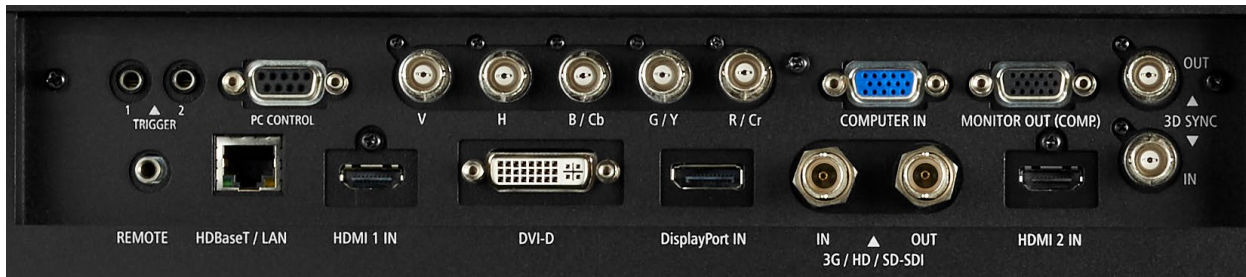

Control Panel

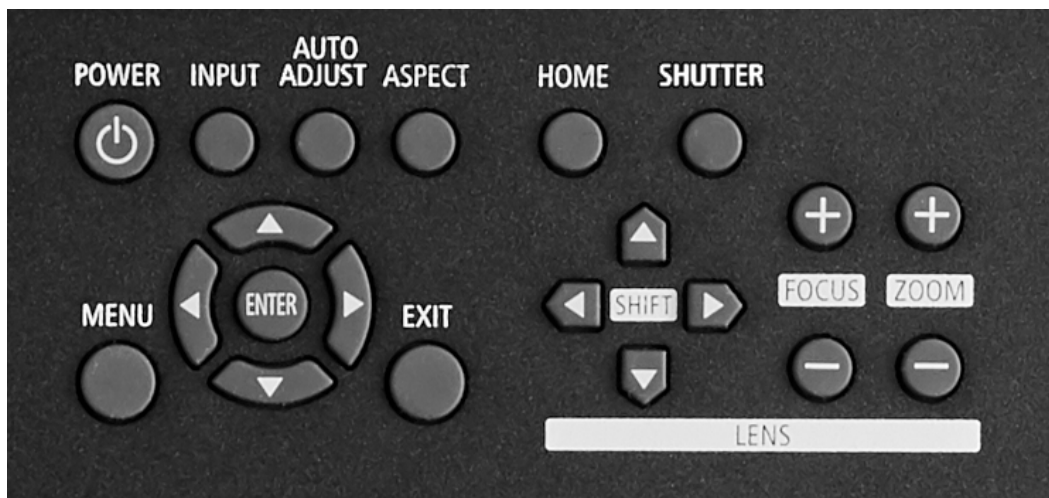

PX2201UL Installation Guide

Rev 1.2

Desktop and Ceiling Mount

PC Control Codes


Function	Code Data								
POWER ON	02H	00H	00H	00H	00H	02H			
POWER OFF	02H	01H	00H	00H	00H	03H			
INPUT SELECT HDMI1	02H	03H	00H	00H	02H	01H	A1H	A9H	
INPUT SELECT HDMI2	02H	03H	00H	00H	02H	01H	A2H	AAH	
INPUT SELECT COMPUTER	02H	03H	00H	00H	02H	01H	01H	09H	
INPUT SELECT BNC	02H	03H	00H	00H	02H	01H	02H	10H	
INPUT SELECT DVI-D	02H	03H	00H	00H	02H	01H	9CH	A4H	
INPUT SELECT DisplayPort	02H	03H	00H	00H	02H	01H	A6H	AEH	
INPUT SELECT 3G-SDI	02H	03H	00H	00H	02H	01H	C4H	CCH	
INPUT SELECT HDBaseT	02H	03H	00H	00H	02H	01H	BFH	C7H	

Cable Connection

Communication Protocol:

Baud Rate: 9600 bps (for cable lengths longer than 20', it is recommended changing to 9600 bps in setup menu)
Data Length: 8 bits
Parity: No Parity
Stop Bit: One bit
X on/off: None
Communications: Full duplex

PC Control Terminal (D-SUB 9P)

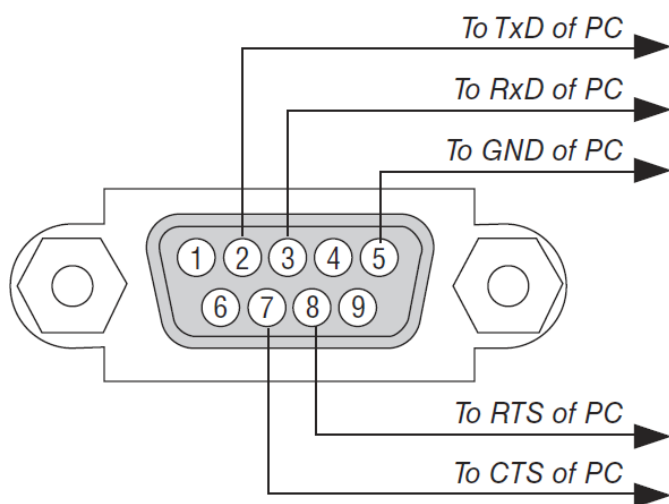

Note 1: Pins 1, 4, 6, and 9 are used inside the projector.

Note 2: For long cable runs it is recommended to set communication speed within the projector to 9600 bps.

Note 3: Jumper "Request to Send" and "Clear to Send" together on both ends of the cable to simplify cable connection.