


QIG-TMX9P-554UNS
X554UN-TMX9P, X554UNS-TMX9P

Rev 1.1

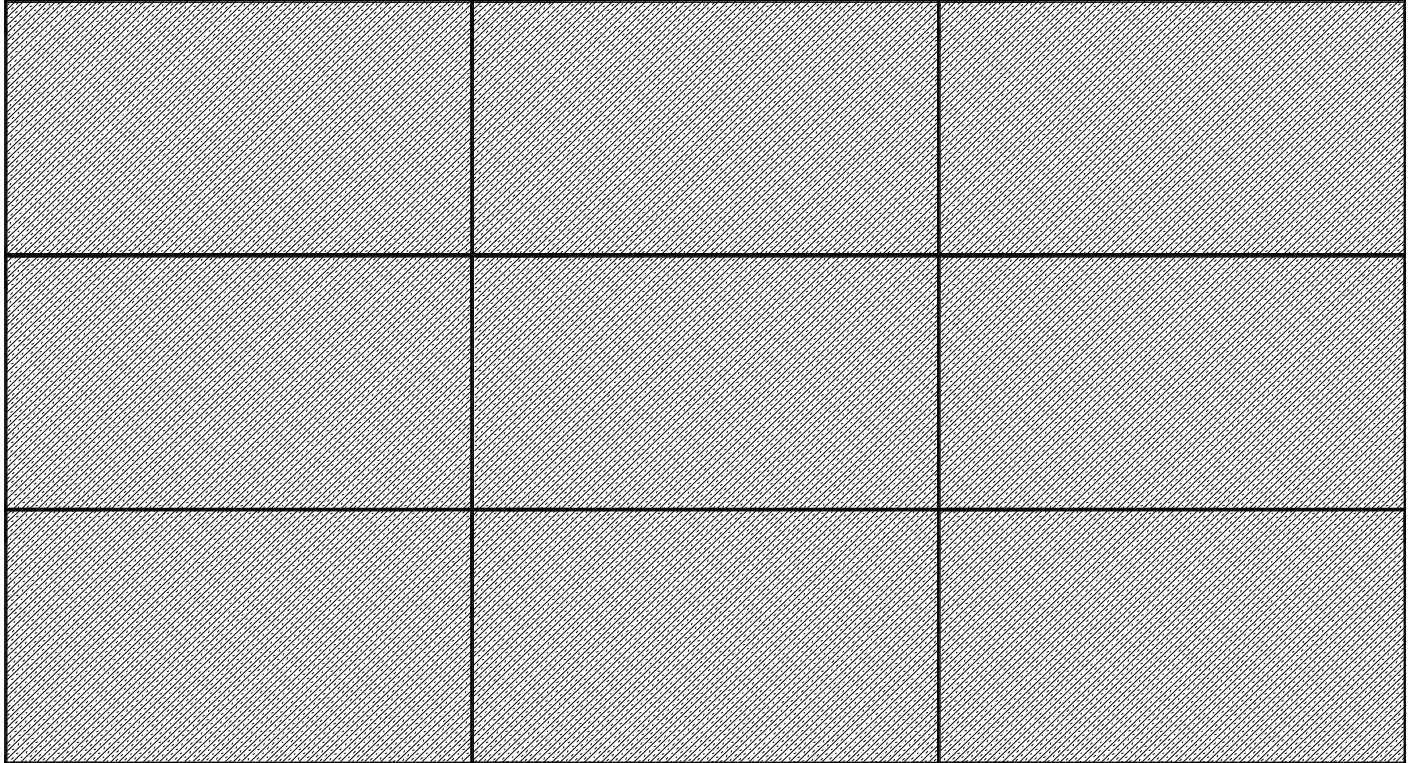

Parts List

- (9) X554UN or X554UNS Displays
- (9) Onsite Service Warranties (ONSITEMN-3Y-16 or ONSITEMN-3Y-17)
- (9) Peerless Pullout Wall Mounts (DS-VW765-L40)
- (1) 25ft Cat5e Patch Cable
- (9) 3m DisplayPort 1.2 Cables
- (1) IR/Remote Control Kit (KT-RC2)
- (3) Overframe Bezel Kits (KT-55UN-OF or KT-55UN-OF2)
- (3) Tripp Lite 6 Outlet Strip (ISOBar6)
- (1) Display Wall Calibrator Kit (KT-LFD-CC)

NOTES:

- Any walls that this video wall solution is anchored to must be strong enough to support the displays and the installation must be in accordance with any local building codes. All mounting apparatuses must make secure contact to wooden studs.
- Please read entire document before starting installation

QIG-TMX9P-554UNS X554UN-TMX9P, X554UNS-TMX9P

Rev 1.1


1. For mounting information, please refer to Installation Instructions provided by Peerless Industries, Inc. inside the box of the DS-VW765-L40.
2. Connect the NEC display using the provided DisplayPort cables. Please note that in the picture below, the IN connection is on the left and circled in red while the OUT connection is on the right and circled in blue.



3. Connect the LAN cables that are located within the display box to daisy chain each display. Note that the 25ft cat5e patch cable provided is optional and can be used for connecting the source to display 1 within the wall. Note that in the picture below, LAN1 is on the left and circled in red while LAN2 is on the right and circled in blue. LAN1 should be utilized as the IN connection and LAN2 should be utilized as the OUT connection. The LAN daisy chain can be utilized to pass RS232C, IR Remote or TCP/IP information to each display down the daisy chain.



4. Apply the OverFrame bezel kit to the video wall. Please follow instructions provided with kit. KT-55UN-OF is utilized with the X554UN displays and KT-55UN-OF2 is utilized with the X554UNS displays

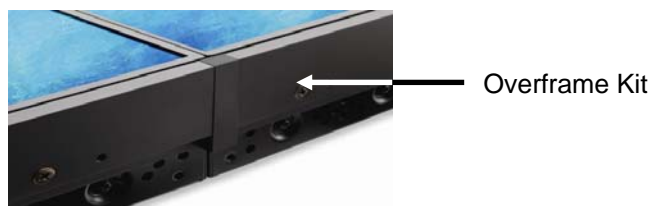

QIG-TMX9P-554UNS X554UN-TMX9P, X554UNS-TMX9P

Rev 1.1

5. Screw the IR Receiver (KT-RC2) directly to the outside of the video wall and plug it directly into the IR In terminal of Display 1 as shown below.



6. Power up all of the displays and make sure that the LAN power is on for each display. This can be found in the External Control menu.



Note that LAN power is OFF out of the box so this will need to be changed for each display within the wall.


7. Go into the Multi-DSP menu of the display 1 which will be where you first started the LAN daisy chain and enable the AUTO ID within the ID Control setting. This will automatically set a monitor ID to each display along the LAN daisy chain. Note that the displays will automatically identify each screen consecutively depending on how you LAN daisy chained the units.




QIG-TMX9P-554UNS
 X554UN-TMX9P, X554UNS-TMX9P

Rev 1.1

If the control setup is as pictured below, each display does not need a unique IP address assigned to still control each individual monitor.

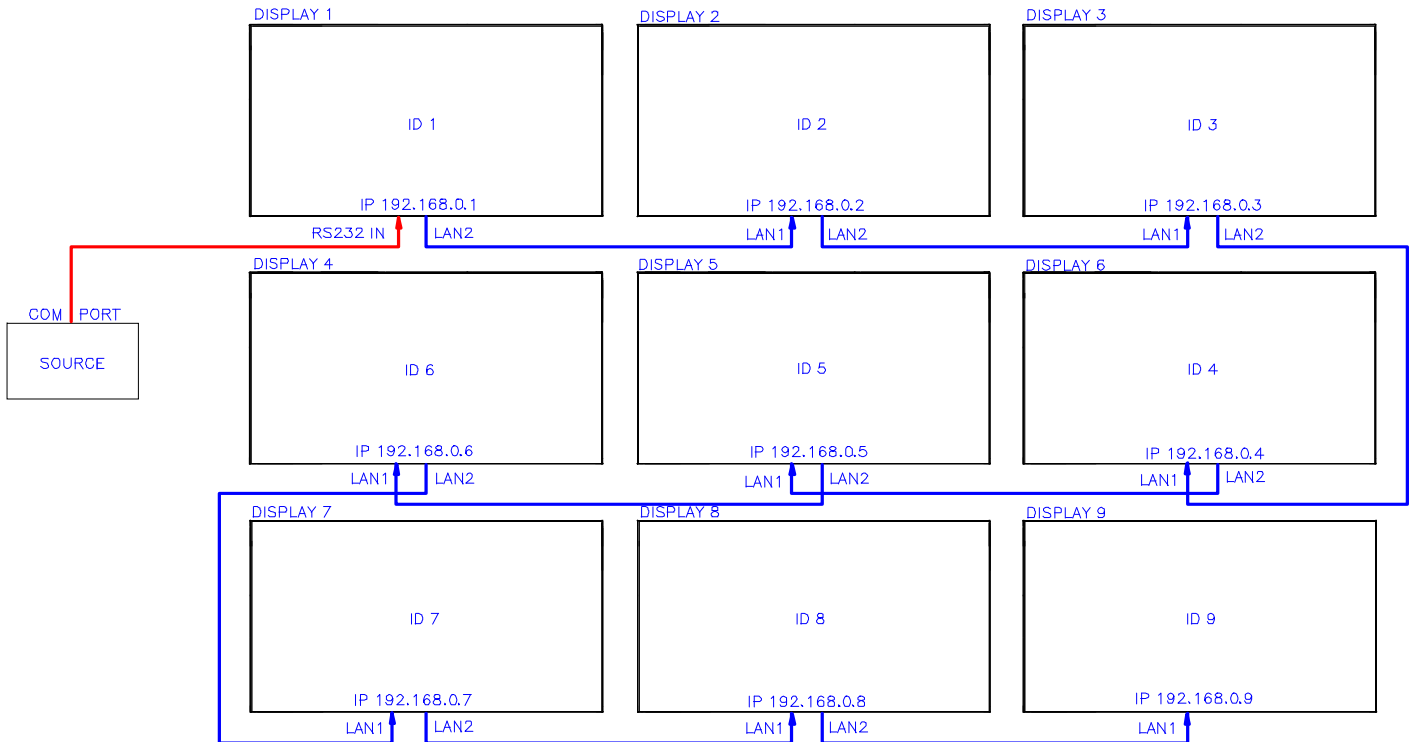


Note that a unique IP address is not necessary to communicate to all displays if display 1 is not connected to a network. The displays will automatically assign themselves IP addresses if no DNS is detected and the IP Setting within the IP Address Setting in the External Control menu is set to AUTO. Note that this is the setting out of the box.

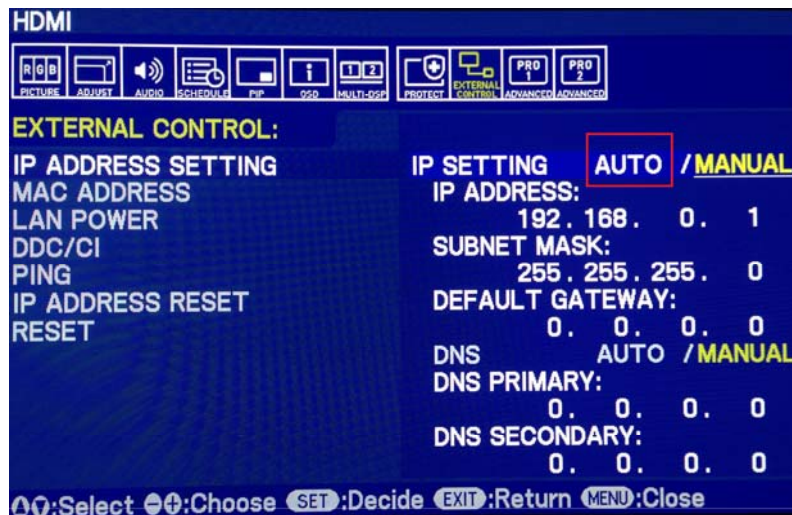

QIG-TMX9P-554UNS
 X554UN-TMX9P, X554UNS-TMX9P

Rev 1.1

- If display 1 is connected to a network or LAN is going into display 1, like the picture below, each display will need a unique IP address to ensure that communication can successfully go through the daisy chain from screen to screen.

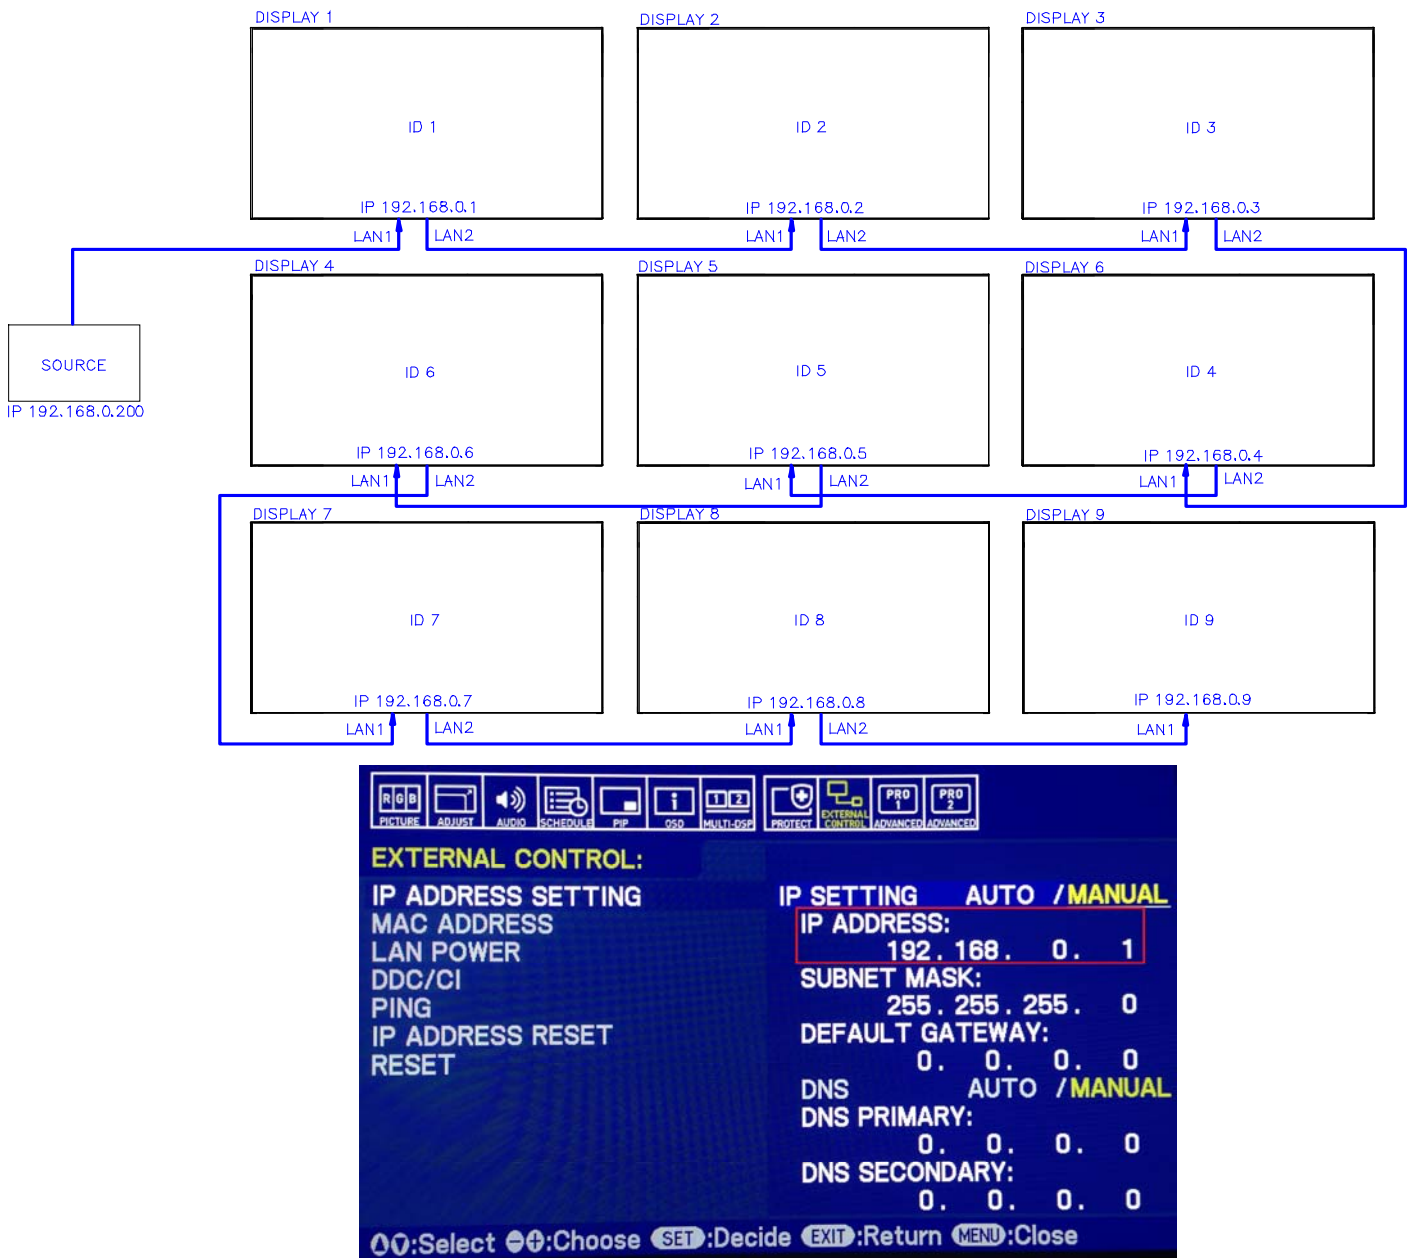


- Ensure that video source is connected to the DisplayPort In interface of display 1. Make sure that all displays are on the DisplayPort input. Note that the DisplayPort out on each display can be used to output the DVI, HDMI, OPTION or DisplayPort signals that are coming in to that specific display, however, when the next step is completed the display will

QIG-TMX9P-554UNS X554UN-TMX9P, X554UNS-TMX9P

Rev 1.1

automatically switch each display to the DisplayPort input. If the source is inputted into display 1 via HDMI, DVI or the OPTION input, it will manually have to be changed. If a source is connected into display 1 and everything is daisy chained properly, each display should be showing the same image.

10. Go into the Multi-DSP menu to activate Auto Tile Matrix Setup as seen in the picture below.

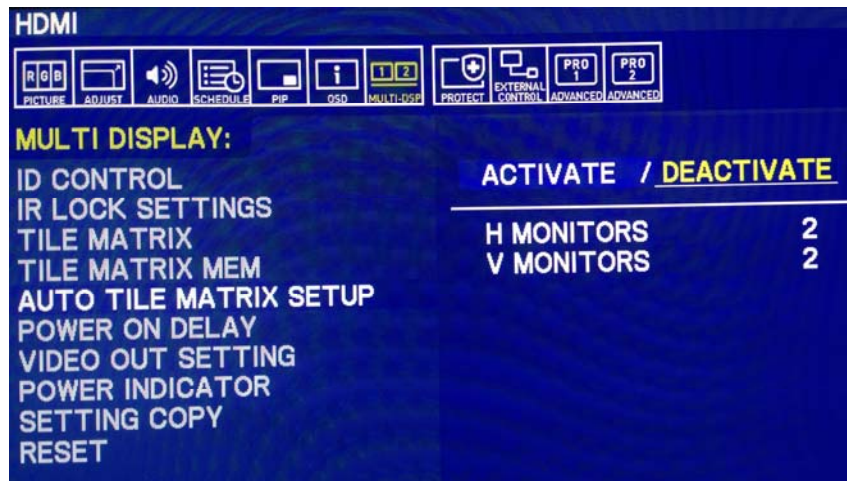

Note that you will need to set the horizontal and vertical monitor dimensions before you activate the Auto Tile Matrix. If done correctly and the LAN is daisy chained as shown on the picture on the previous screen, the displays will automatically adjust so one large picture fills the entirety of the wall. Activating Auto Tile Matrix changes the Tile Matrix, Tile Matrix Mem, Input Signal, Video Out Setting and DisplayPort in the Terminal Settings menu.

Note that there is a limitation if High-bandwidth Digital Content Protection (HDCP) is utilized. If inputting HDCP content through the HDMI, DVI or OPTION terminal the content will NOT daisy chain to the consecutive displays. If inputting through the DisplayPort terminal then the limitation of distributing video to consecutively daisy chained displays is a total of 3 units. NEC Display Solutions recommends that an HDCP compliant distribution amplifier is utilized for all HDCP applications.

If you are experiencing issues with this setup, please call our Technical Support number at (800) 632-4662